

TABLE OF CONTENTS

I	INTRODUCTION	
	System Diagram.....	1
II	INSTALLATION AND OPERATION	
	1. Safety.....	2
	2. Down Hole Assembly.....	3
	3. Breakout Wrench Kit.....	3
	4. Setup of Hammer.....	6
	4a. Choke.....	7
	4b. Bent Sub.....	8
	5. Setup of Transmitter.....	9
	5a. DCI.....	9
	5b. Subsite.....	17
	6. Installation of Bit.....	19
	7. Setup of Support Pack/ No Air Pressure.....	23
	7a. Install Whip Check/ Air Inlet/ Compressor.....	24
	7b. Install Whip Check/ Air Outlet/ Rig.....	25
	7c. Solenoid Valve Controller & Power Cord Hookup.....	25
	7d. Fluid Pump Setup.....	28
	7e. Oil Properties and Tank Filling.....	29
	8. Setup of Support Pack/ Air Pressure Applied.....	34
	8a. Setup of Air Compressor.....	34
	8b. Pressure Regulator Setup/ Adjustment.....	34
	8c. Oiler Adjustment.....	35
	8d. Water Pump Adjustment/ Operation.....	37
	9. Air Hammer Operation.....	39
	9a. Setting Up (on site).....	39
	9b. Attaching the Down Hole Assembly.....	39
	9c. Setting up for Operation.....	39
	9d. Thrust Pressure for Drilling and Steering.....	40
	9e. Steering the StraightLine Air Hammer.....	40
	9f. Maintaining a Clean, Round Hole.....	41
	9g. Drilling Straight.....	41
	9h. Cleaning and Storage After Each Use.....	42
III	APPENDIX: Exploded Parts/ Breakout Wrenches/ Tool Kit.....	43


I INTRODUCTION

The System:

The contents of this manual apply to StraightLine's AH 4.0 & 5.0 hammer systems.

The StraightLine AH system is a pneumatic-percussive hammer system designed for directional drilling in rock formations. The system consists of these key elements: 1) down hole assembly; 2) support pack 3) water tank 4) breakout wrench kit [optional]; 5) hoses and related fittings.

To conduct a directional bore, the air hammer system is installed on an HDD rig (size range 10,000 to 100,000 pounds of thrust), and then connected to an air compressor capable of producing a minimum of 400 cfm (11.3 cmm) and a maximum operating pressure of 350 psi (20.68 bar). The integration of all these elements is shown in the diagram below (Fig 1).

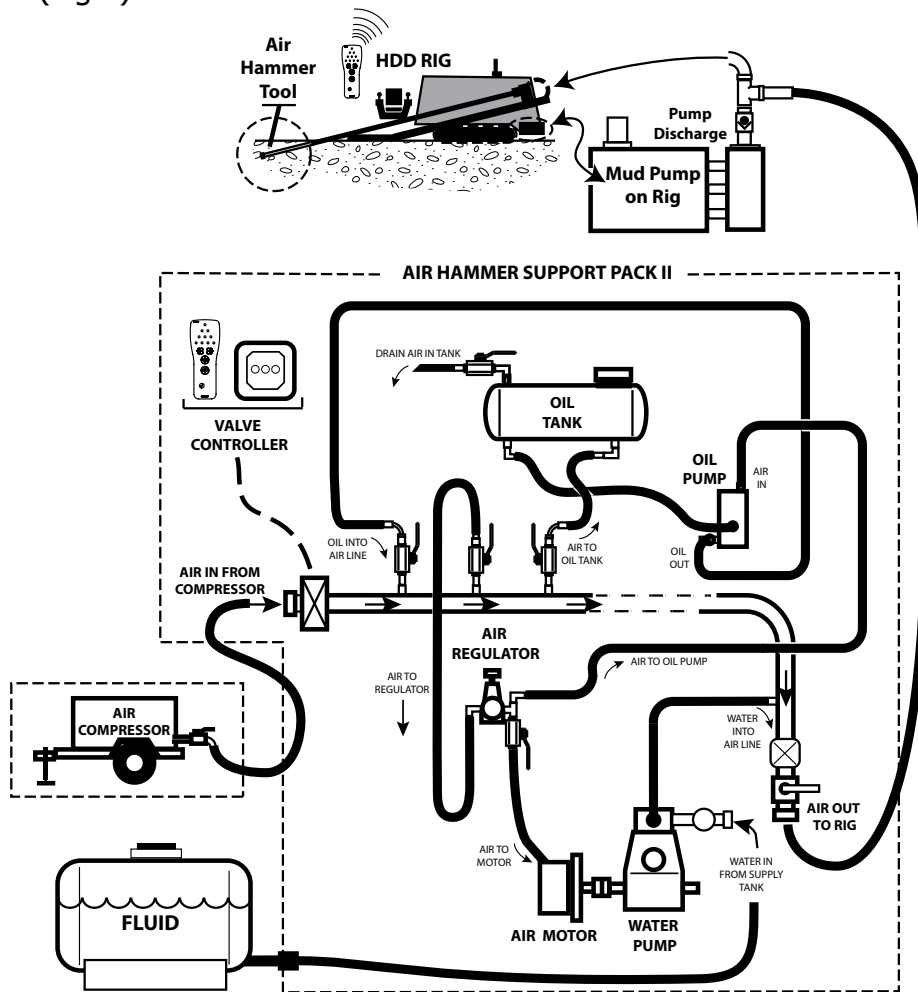

System Diagram
(Fig. 1)

This manual contains safety and operational information for the air hammer system. You must read this manual and fully understand the safety precautions and operating procedures before operating the air hammer system.

II AIR HAMMER INSTALLATION AND OPERATION

1. SAFETY: Consult the safety section in your HDD manual

Utilization of this equipment must be conducted under safe working conditions at all times. Observe all safety guidelines as directed by your employer, job site requirements, and State and Federal regulations.



This safety alert symbol means SAFETY ALERT! This symbol is used both on the machine and in this manual to alert the operator that the message following the symbol concerns safety. Carefully read the message and make sure you understand the causes of possible injury or death. The safety alert symbol will be used with these words:



DANGER: Indicates an imminently hazardous situation, which will result in death or serious injury unless avoided.



WARNING: Indicates a potentially hazardous situation, which could result in death or serious injury unless avoided.



CAUTION: Indicates a potential hazardous situation, which may result in minor or moderate injury if not avoided.

NOTICE: Indicates a situation which could result in damage to the machine or other property.

Other important information which can help you do a better job or simplify maintenance, will be emphasized by the word: IMPORTANT: followed by an instruction or information.



WARNING Entanglement Hazard

Loose fitting clothing can become entangled in rotating equipment. Wear close fitting clothing and safety equipment appropriate to the job.



WARNING Hearing Damage

Wear ear protection to prevent hearing damage caused by percussive equipment.



WARNING Flying Debris Hazard

Wear eye protection to prevent eye damage caused by flying debris.



WARNING Heavy Equipment

Assembled air hammer assembly weighs in excess of 100 pounds. Use a suitable lifting device to move equipment.



WARNING Severing Hazard

Moving components can sever fingers and hands. Keep clear of all moving components.



Other important safety alerts may appear throughout this manual and on safety alert decals located on the support pack.

2. DOWN HOLE ASSEMBLY COMPONENTS

Your down hole components, as shipped, consist of the following: drill pipe adapter, transmitter housing assembly, bent sub, air hammer, chuck, and bit. The illustration below shows the method of joining the components, showing which parts should be lubricated threads and which connections should be locked with thread locking compound (see Fig 2).

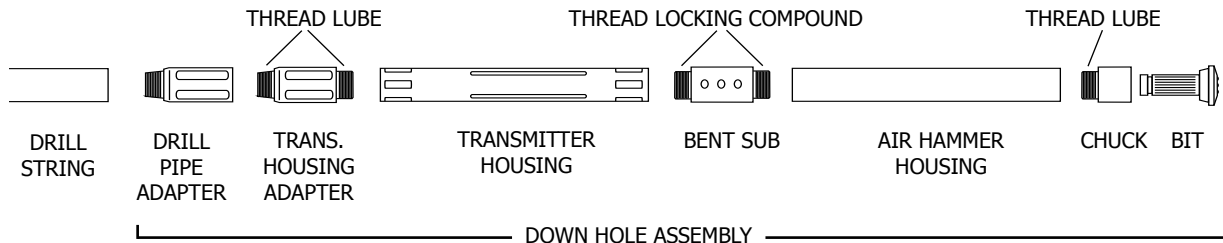


Fig. 2

3. BREAKOUT WRENCH


Proper use of the StraightLine Breakout Wrench Kit

In order to properly “make up” or “break out” the tool joints when attaching air hammer threaded components to each other, or the drill string, always use the available Straight-Line breakout wrench kit, or an equivalent (see Fig. 3).



WARNING Rotating Parts


Never use rig power or other powered equipment when making up or breaking out threaded connections. Serious injury or death may result from rotating parts or from thrown wrenches.

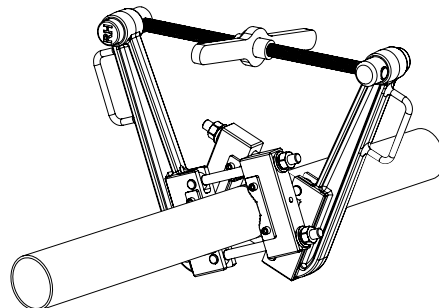

StraightLine Breakout Wrench Kit


(Fig. 3)

 1. To make up a joint, thread the two components together by hand until the joint is hand tight. (see Fig 4).




(Fig. 4)

2. Attach wrench handle to first component. Tighten nuts to secure removable die holder (see Fig. 5, 6).

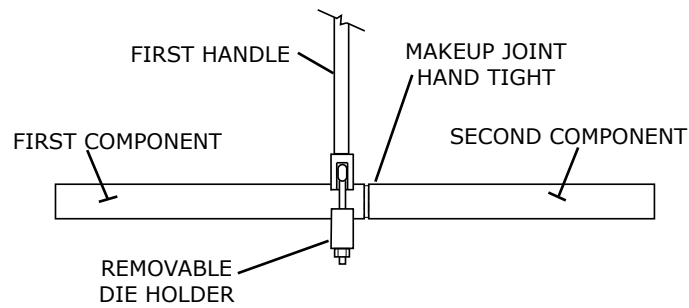

(Fig. 5)

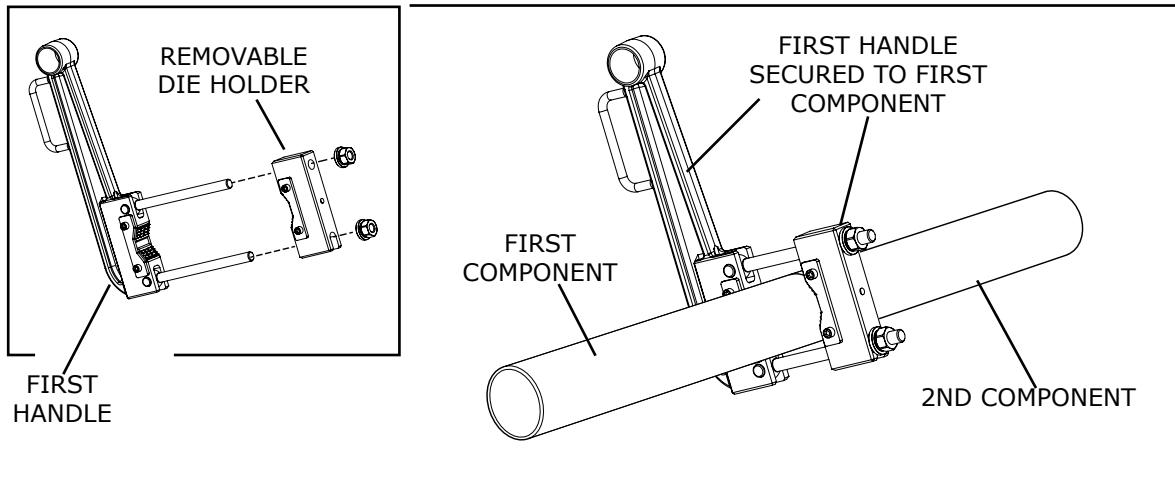

(Fig. 6)

3. Assemble the remaining StraightLine Breakout Wrench parts, including second handle and spinner handle as illustrated (see Fig 7,8,9).

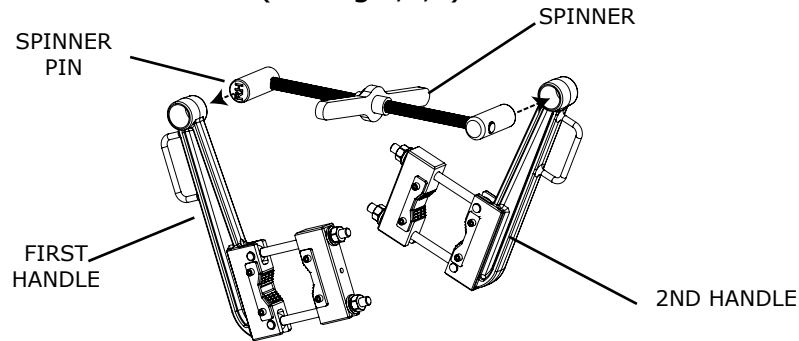


Fig 7


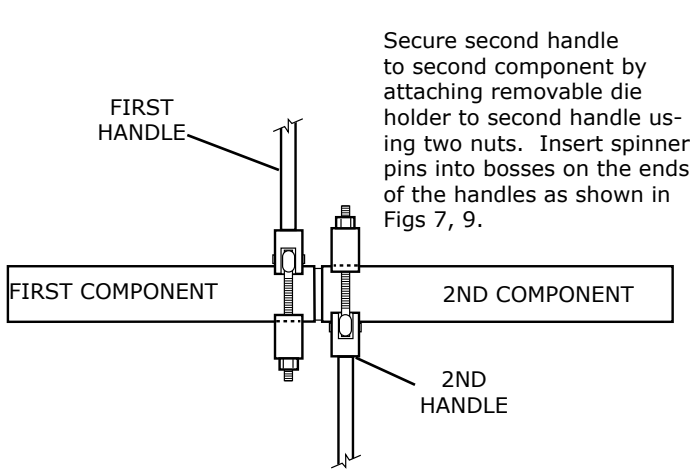


Fig. 8

Secure second handle to second component by attaching removable die holder to second handle using two nuts. Insert spinner pins into bosses on the ends of the handles as shown in Figs 7, 9.

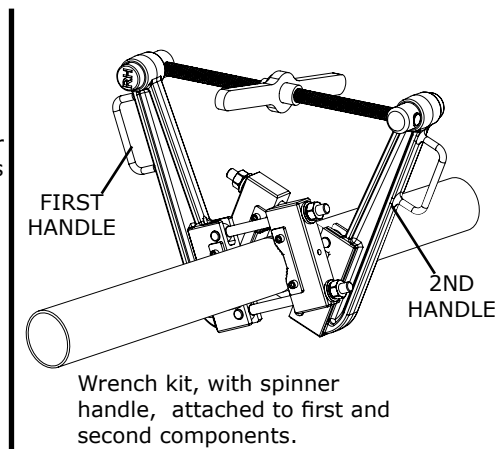

Wrench kit, with spinner handle, attached to first and second components.

Fig. 9

4. Turn the spinner handle in a direction that draws the first and second wrench handles toward each other, thereby tightening the joint between first and second components. Continue tightening until the two components make full shoulder contact, then continue to turn spinner handle for 1/4 to 1/2 revolution. The joint is now properly tightened (see Fig. 10, 11).

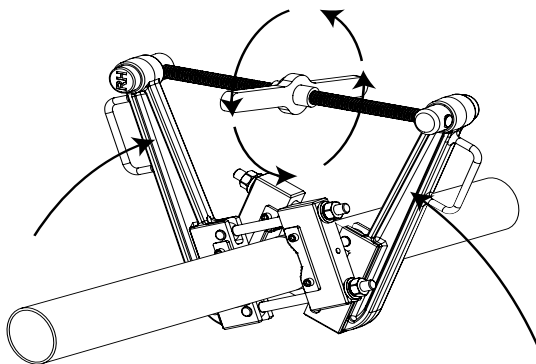


Fig. 10

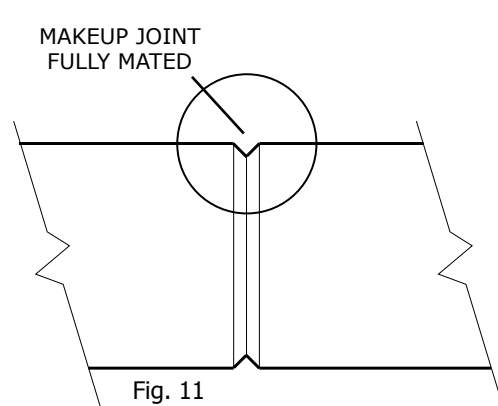


Fig. 11

5. In order to “Break” a joint free, follow the preceding steps in the same order, but turn the spinner handle in the opposite direction, so that the two components unthread (see Fig 12).

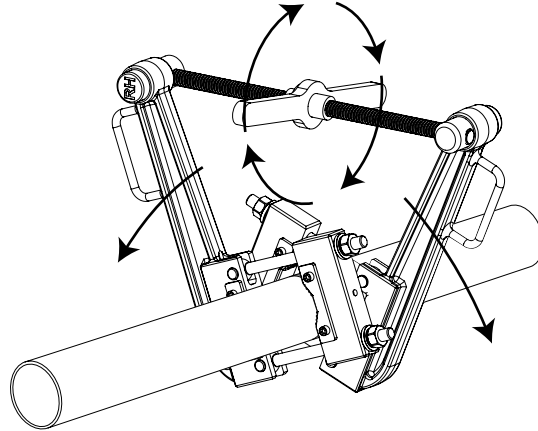


Fig. 12

4. HAMMER SETUP

4a. Installation of Choke Into the Air Hammer (see Appendix for full parts breakdown of air hammer assembly)

IMPORTANT: Before initial drilling with a new hammer, pour 1 pint (1/2 litre) of Rock Drill Oil into the back of the hammer housing (see figure 48 for oil selection). Then reassemble hammer to bent sub. Coat threads with thread locking compound; tighten to hand tight then use breakout makeup wrench kit to tighten 1/4 to 1/2 turn beyond shouldering.

For optimum percussive performance of the air hammer, the operational pressure of the hammer needs to match that of the supply air of the compressor. Do not exceed 350 psi of operating pressure at the air hammer. Operating over 350 psi will increase penetration rates, but reduce service life of the tool. To maintain the optimum pressure, chokes are used to control the amount of air driving the piston of the air hammer. The choke selection depends on the compressor specifications and the length of the bore.

Your air hammer is supplied with the FULL choke installed. To change the choke, use a nail set to drive out the full choke plug in the check valve (see Fig. 13). Insert the choke plug of choice (see Choke Selection Chart, Fig. 14) then assemble the air hammer body to the bent sub.

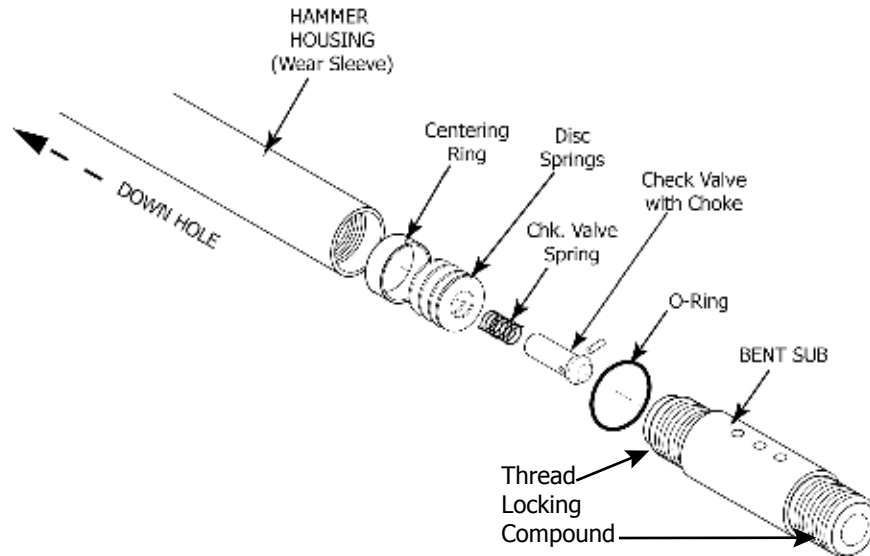


Fig. 13

Choke Selection Chart

There are several variables which determine the performance of the air hammer. The examples below generally explain the choice of choke to use in various situations.

Bore Situation (Example Only)	Air Bypass	Choke Used
<p>Long Bore (Beyond 350 feet) Tool: AH 4.0 Compressor: 700 cfm @350 psi.</p> <p>Tool: AH 5.0 Compressor: 1150 cfm @350 psi.</p>	<p>No bypass of air (Choke is plugged shut). Full amount of available air is used to drive the piston</p>	<p>Full Choke</p>
<p>Mid-Range Bore (150 to 350 feet) Tool: AH 4.0 Compressor: 700 cfm @350 psi.</p> <p>Tool: AH 5.0 Compressor: 900 cfm @300 psi.</p>	<p>Partial bypass of air (choke is 50% open)</p>	<p>Half Choke</p>
<p>Short Bore (zero to 150 feet) Tool: AH 4.0 Compressor: 700 cfm @350 psi.</p> <p>Tool: AH 5.0 Compressor: 900 cfm @300 psi.</p>	<p>Large bypass of air (no choke plug. Hole is fully open)</p> <p>Bypass of air is necessary to avoid over-driving the piston</p>	<p>Open Choke</p>

Fig. 14

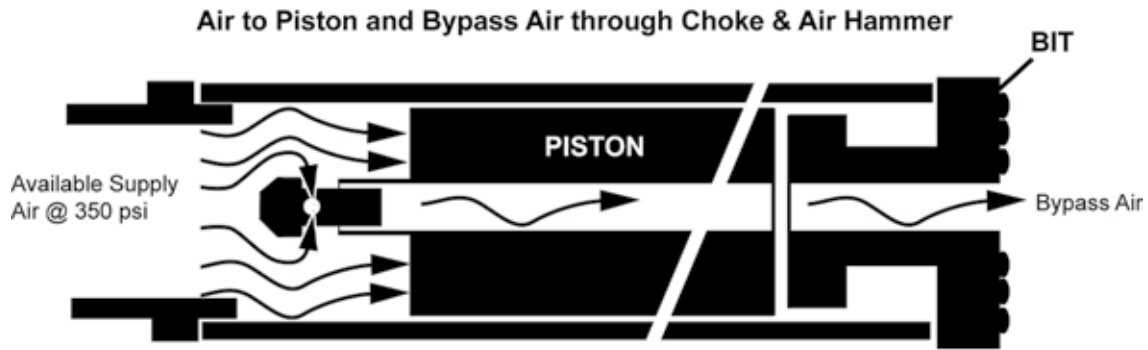


Fig. 15

4b. Assemble bent sub to RockEye Hammer Housing

Clean and dry the threads. Apply thread locking compound to the threads (be careful not to get locking compound on the bent sub o-ring). Insert the bent sub into the air hammer housing (the end opposite the chuck) and rotate clockwise until the shoulders make full contact. Use the breakout makeup wrench kit to turn 1/4 to 1/2 revolution beyond full shoulder contact.

IMPORTANT: The bent sub must be installed with the counter-bored end threaded into the air hammer housing - not the star-milled end (see Fig. 16).

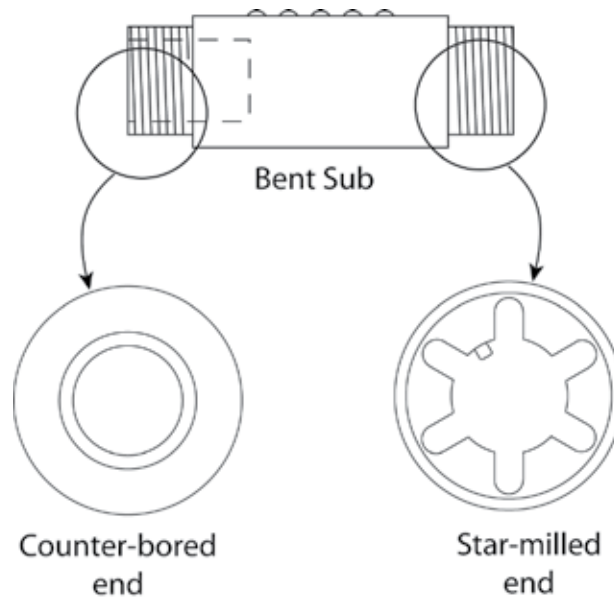


Fig. 16

5. SETUP OF TRANSMITTER

Before continuing with the installation and setup of the transmitter, the transmitter housing must first be assembled to the bent sub.

Coat the threads of the star-milled end of the bent sub with thread locking compound (avoid getting compound on the bent sub o-ring). Thread the transmitter housing onto the bent sub until it is hand tight. Use the breakout makeup wrench kit to rotate 1/4 to 1/2 turn beyond shoulder contact (see Fig. 17).

NOTE: For correct orientation of the transmitter housing, elongated slots in the transmitter housing wall are located closest to the down hole end of the housing.

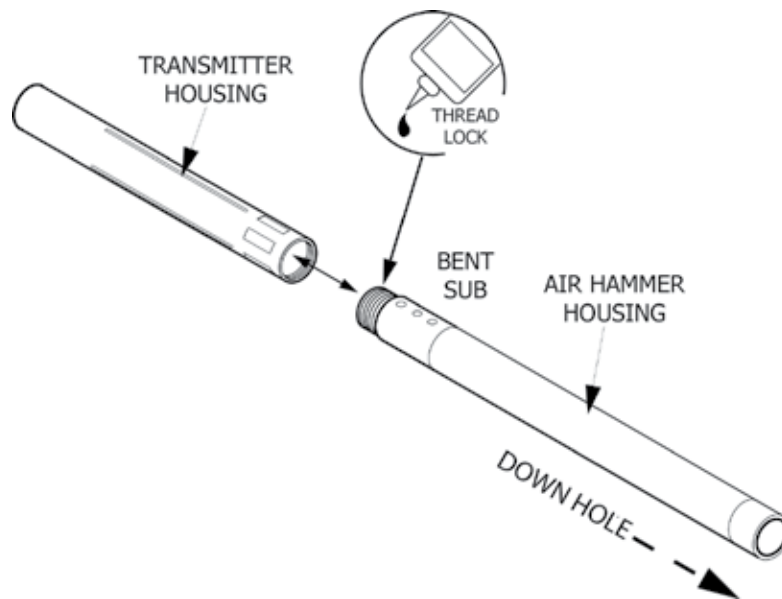


Fig 17

Your RockEye hammer is supplied with the necessary parts to install a DCI[®] brand transmitter (standard). An optional model is also available for installing a Subsite[®] brand beacon.

5a. DCI[®] transmitter is installed as follows (see Transmitter Exploded Parts in the appendix):

1. Cradle the downhole assembly horizontally on a work surface.
2. Unscrew the outer transmitter tube clocking cap from the outer transmitter tube, then slide out all components, as shown in the illustration (Fig 18 and 19).

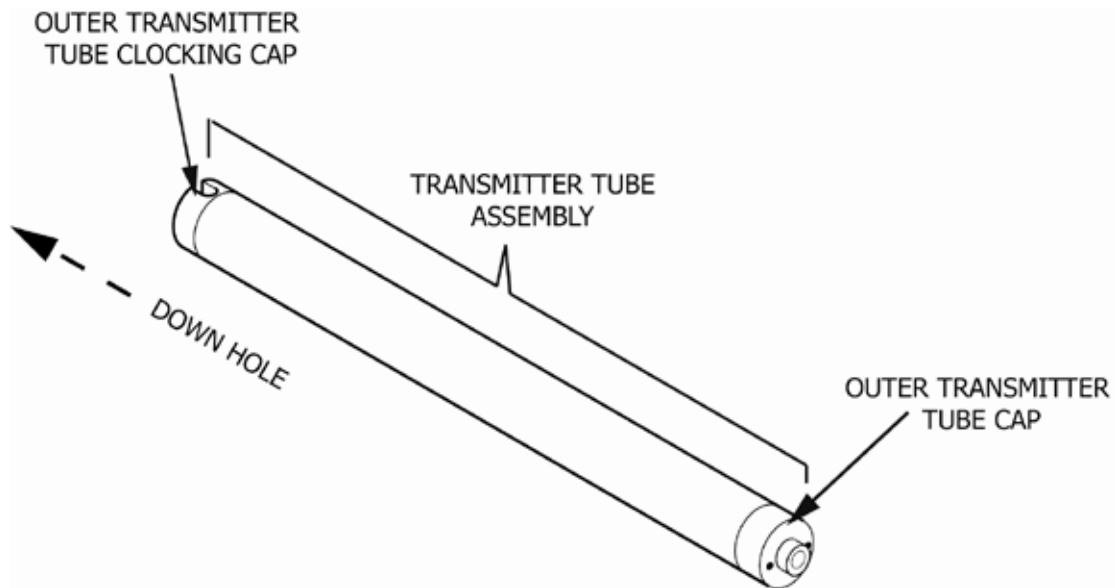


Fig. 18

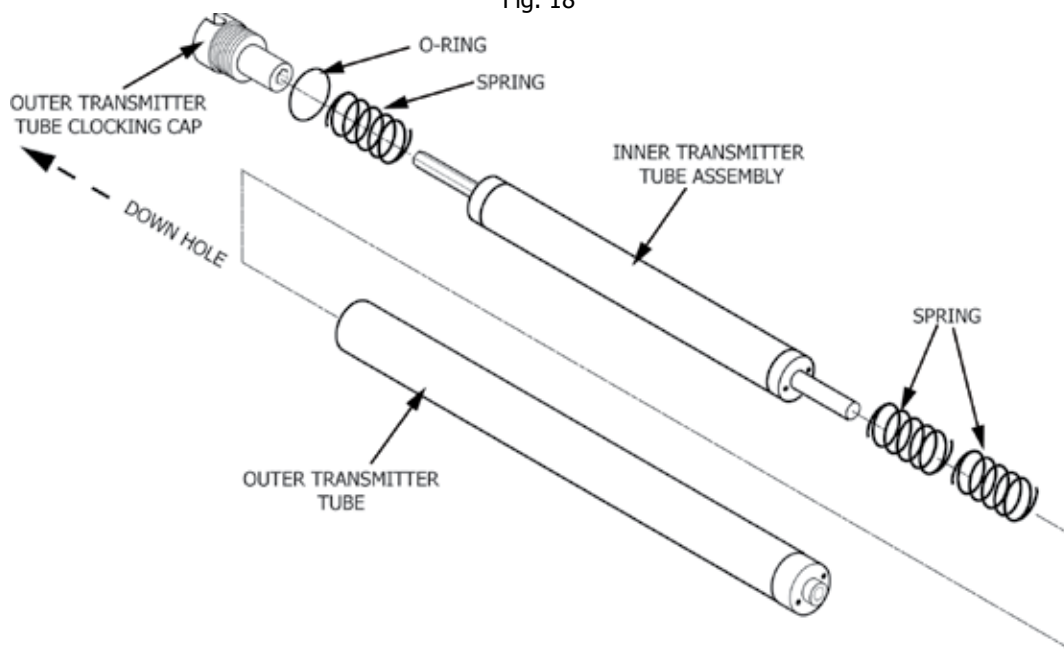


Fig 19

3. Remove inner transmitter tube locking cap, as shown, from the inner transmitter tube housing.

Insert DCI transmitter (with fresh lithium ion battery), battery end first, into inner transmitter tube housing.

Align notch in transmitter (see detail illustration, Fig. 20) with locking key

located on the threaded end of inner transmitter tube locking cap.

With clocking key engaged in transmitter notch, push transmitter into inner transmitter tube housing and thread the clocking cap into the housing.

Tighten the cap firmly up to the housing for full thread engagement.

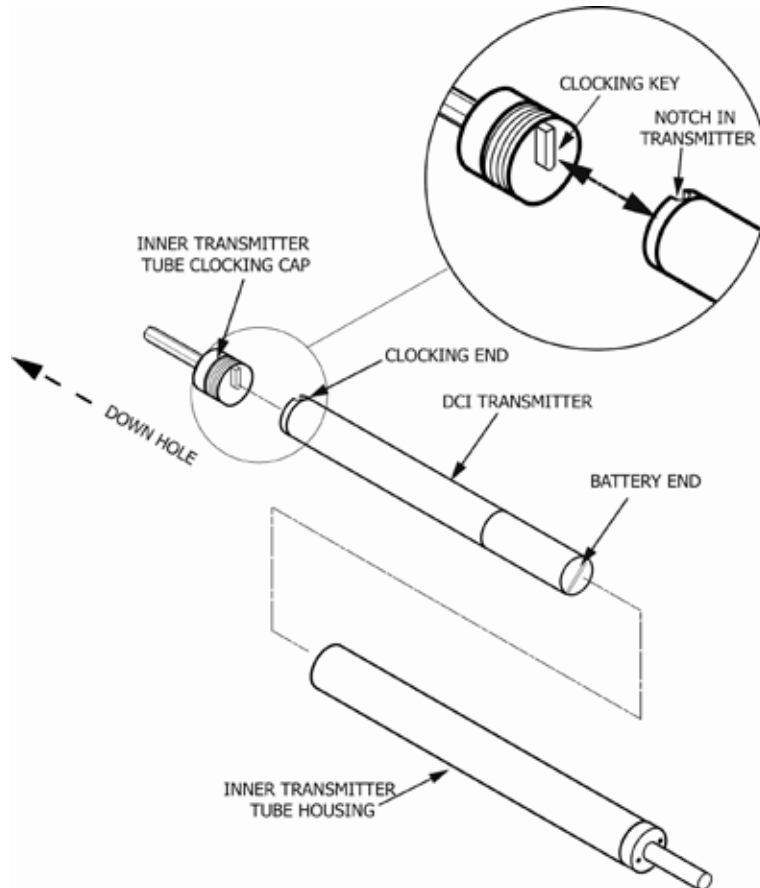


Fig. 20

4. The dimple in the end of the hexagonal shank is an alignment indicator which corresponds to the clocking key on the threaded side of the clocking cap.

This dimple is used in the reassembly of the transmitter assembly to maintain the 12 o'clock orientation of all components (see Fig. 21).

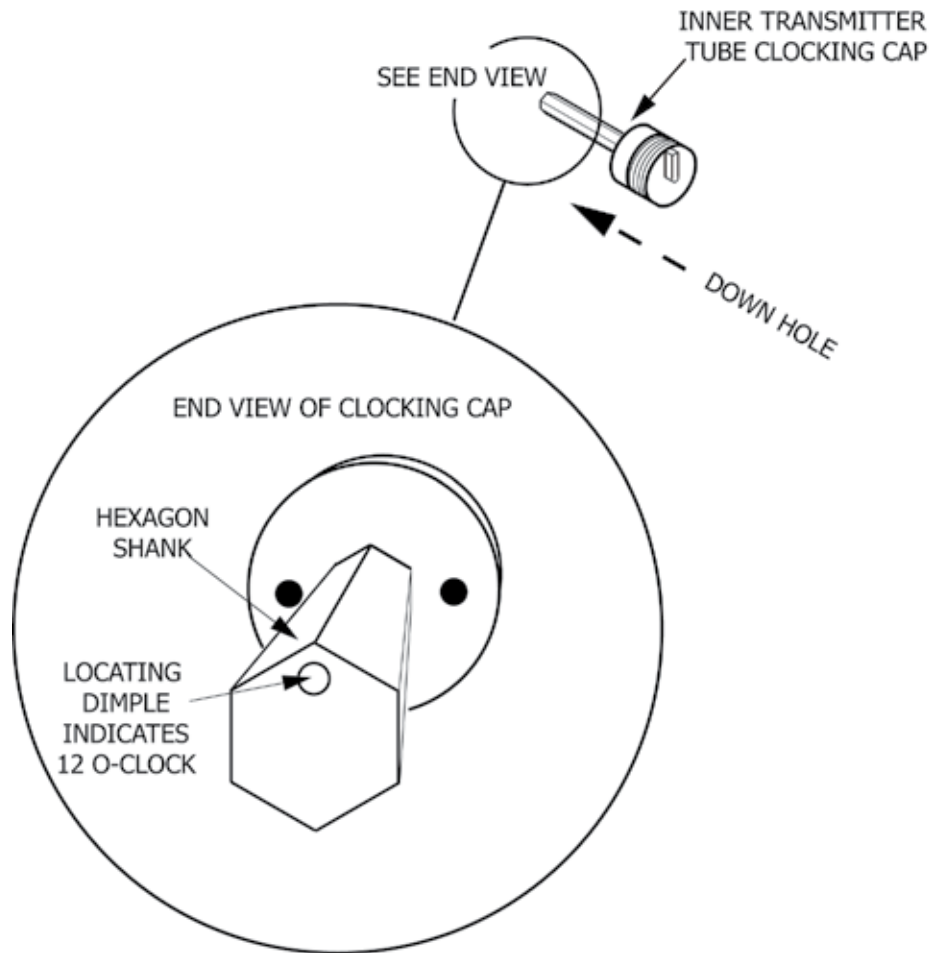


Fig 21

5. Reassembly of the outer transmitter tube is as follows (see Fig. 22): Insert spring into the outer transmitter tube followed by the inner transmitter tube assembly (clocking cap oriented "down hole").

Insert the second and third springs, followed by the outer transmitter tube locking cap (with o-ring). This cap must engage the hex shank of the inner transmitter tube locking cap (see detail illustration).

It's important that the outer transmitter tube locking cap be oriented with its notch in the "UP" position before sliding over the hex shank of the inner transmitter tube assembly locking cap (oriented with its dimple in the "UP" position). This will insure that the 12 o'clock orientation is maintained with respect to the DCI transmitter within.

Thread the outer locking cap on, tighten for full thread engagement.

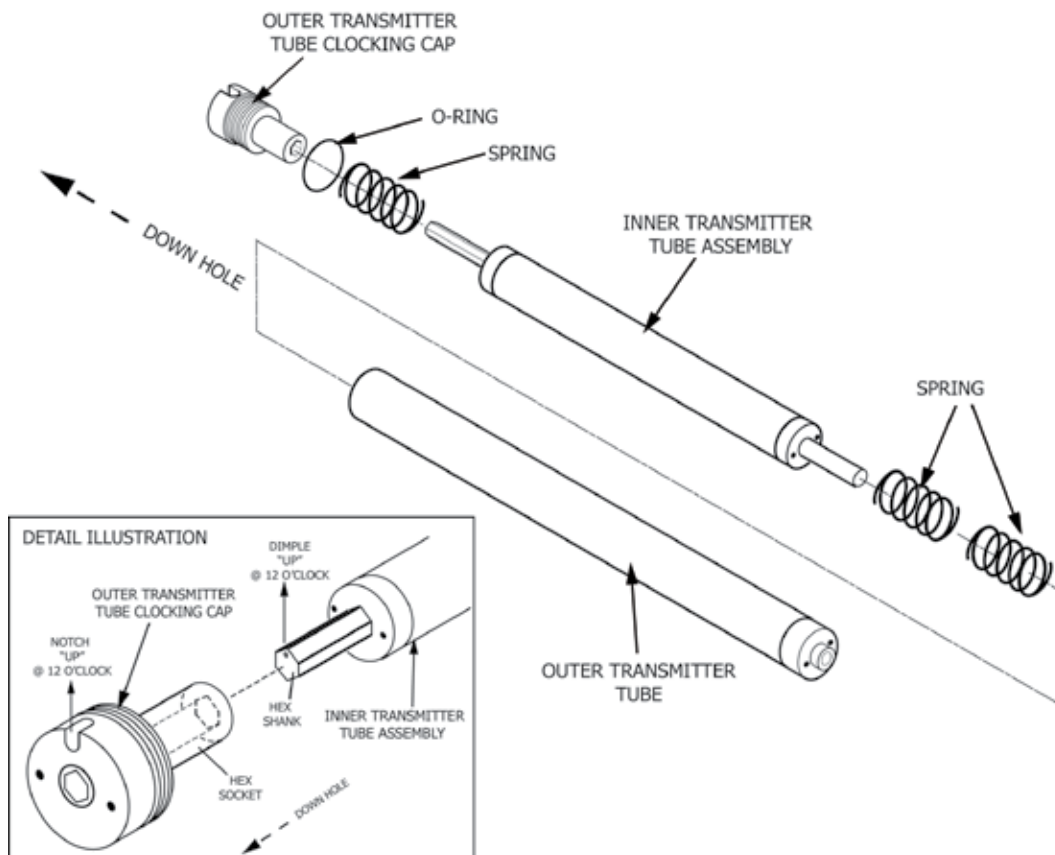


Fig. 22

6. Thread the retrieval tool into the outer transmitter tube cap and insert the transmitter tube assembly into the transmitter housing (see Fig. 23).

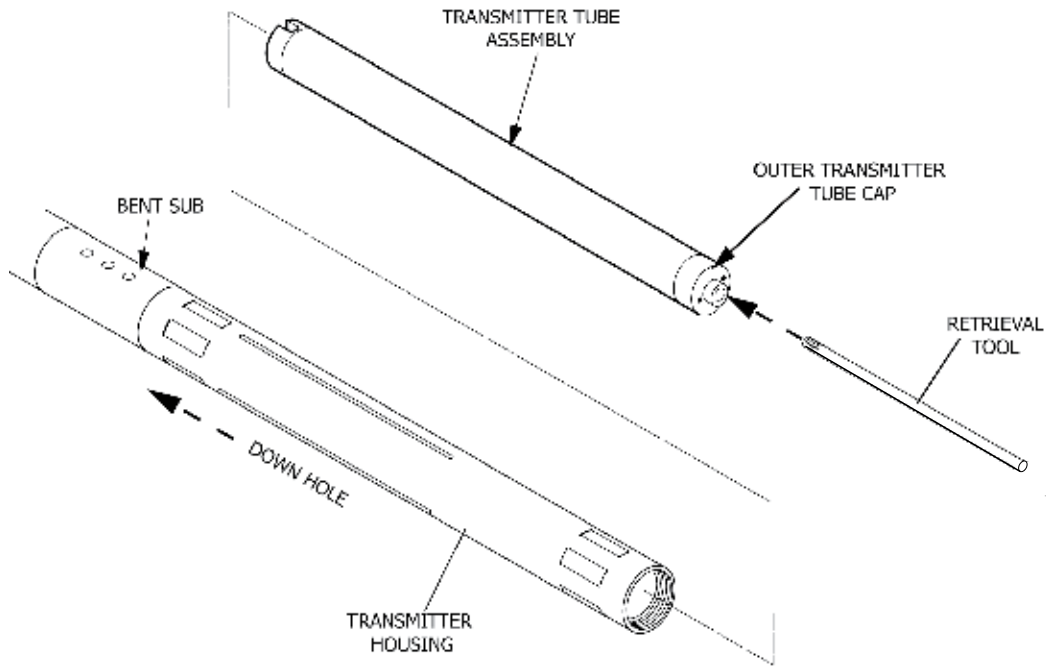


Fig. 23

7. Push forward on the retrieval tool until you feel a light bottom resistance. (see Fig. 24).

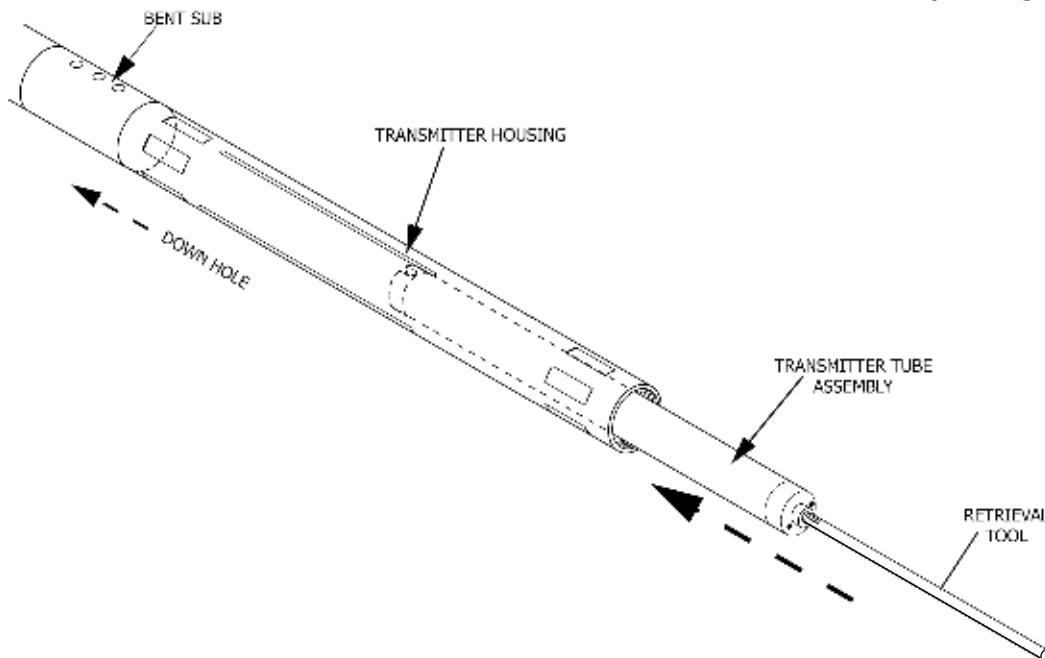


Fig. 24

8. Gently rotate and push the transmitter tube assembly inside the transmitter housing until you feel engagement of the clocking cap notch with the locating pin in the bent sub.

Gently push forward to insure a secure engagement, then remove the retrieval tool (see Fig. 25).

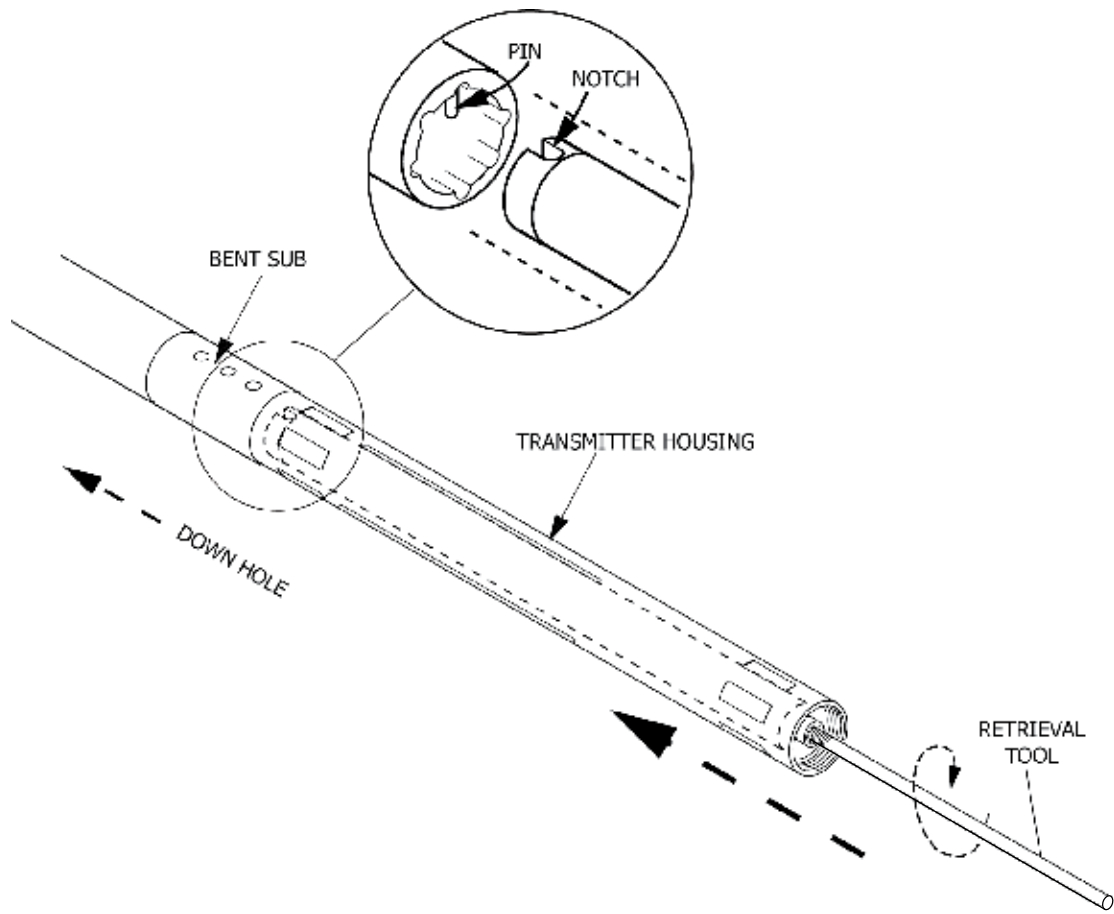


Fig. 25


9. Insert the retrieval tool through the drill pipe adapter as illustrated and thread it into the back of the transmitter tube assembly.

Coat the drill pipe adapter threads with a no-gall thread grease.

Use the retrieval tool to keep the transmitter tube assembly centered in the housing while threading on the drill pipe adapter into the transmitter housing.

Once the shoulders of the drill pipe adapter and the transmitter housing have made firm contact, use the breakout wrench kit to tighten the connection an additional 1/4 to 1/2 turn.

Remove the retrieval tool (see Fig 26).

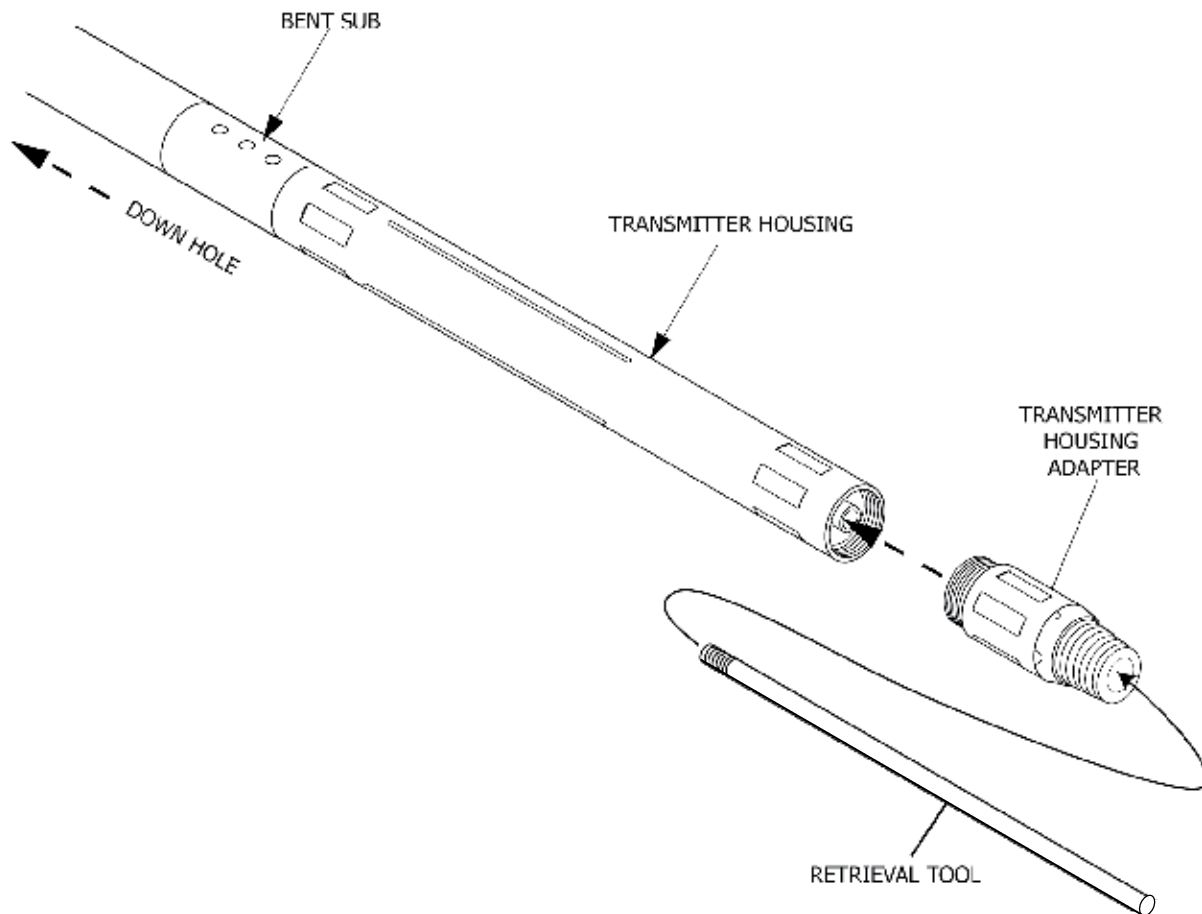

5b. Subsite[®] beacon is installed as follows:

When using a Subsite[®] brand beacon, disassemble the transmitter housing assembly the same as was described in steps 1 through 4 of the previous (DCI) section.

1. Orient the Subsite[®] beacon to the end shown below (see Fig. 27). Apply thread lock material on screw threads. The screws are included with your kit. Position one of the two adapter pieces and fasten with one screw.

Tighten screw firmly with a hex wrench.

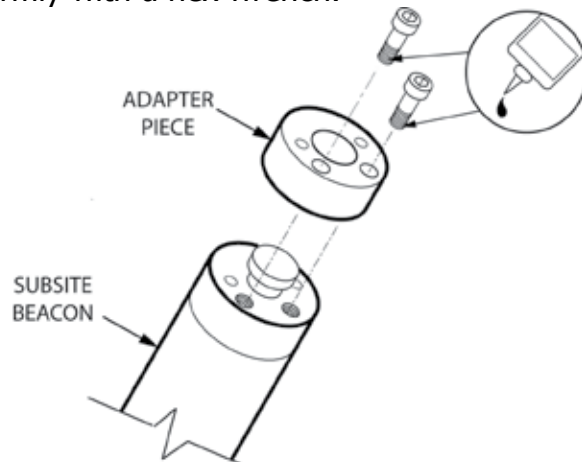


Fig. 27

2. Apply thread lock material on screw threads and install the hex-shank locating cap and two screws as illustrated (see Fig 28). Tighten screws firmly with a hex wrench.

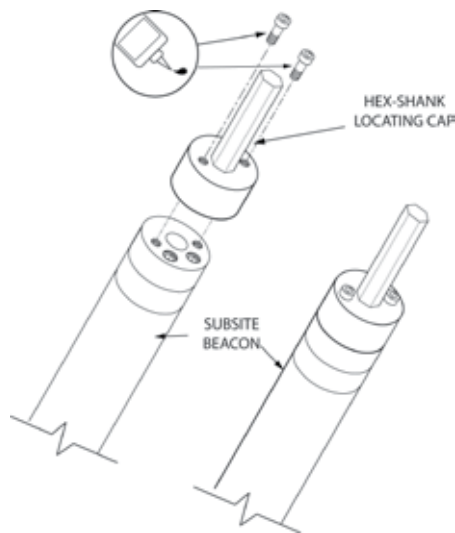


Fig. 28

3. Remove the battery cap from the Subsite[®] beacon.
Verify fresh batteries have been installed and thread the plug cap in, tighten up firmly for full thread engagement (see Fig. 29).

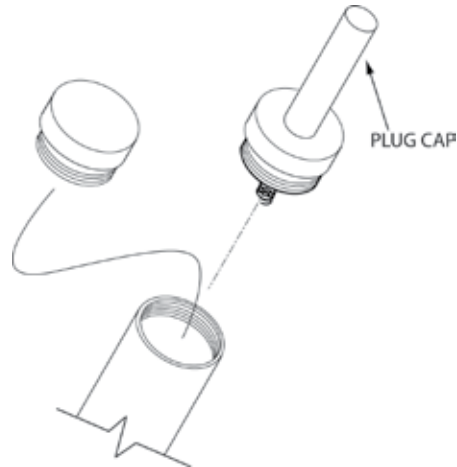


Fig. 29

Continue with reassembly of the transmitter housing assembly from this point beginning with Step 7 of the DCI reassembly procedure: **Reassembly of the Outer Transmitter Tube** (see Fig. 30).

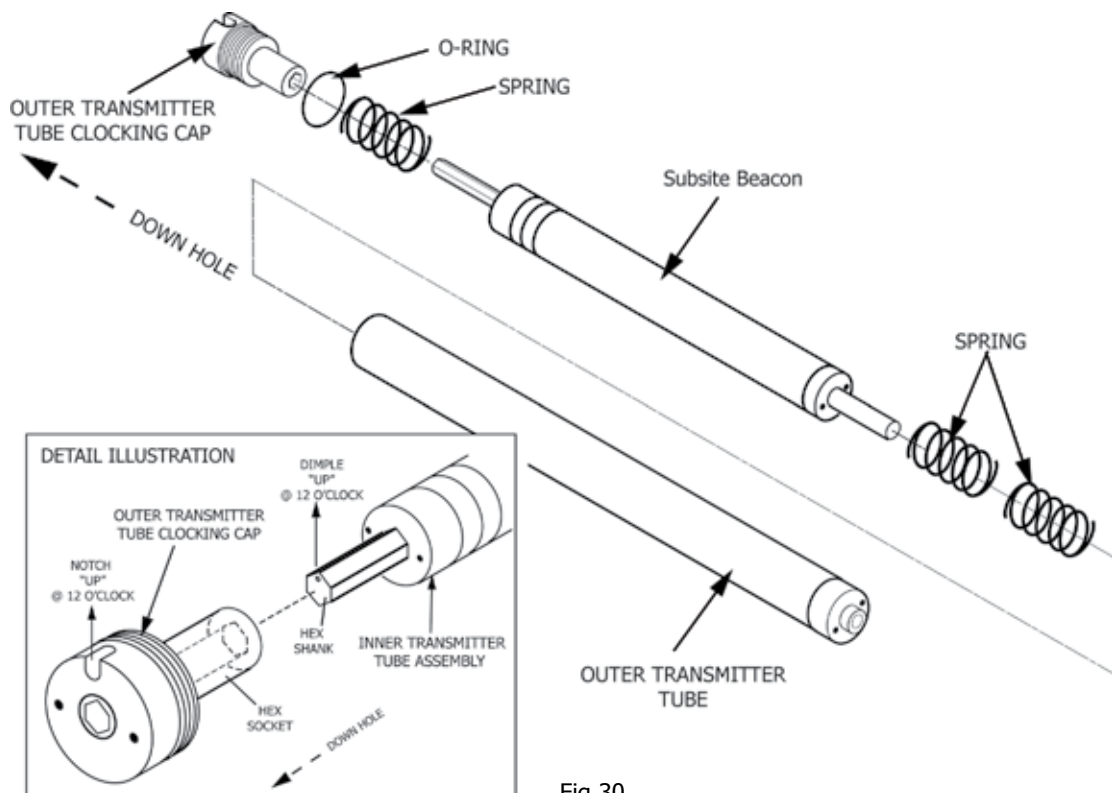


Fig 30

6 Installation of Bit Into the Air Hammer for Drilling

(see Appendix for full parts breakdown of air hammer assembly):

6a. Cradle the assembled air hammer, transmitter housing and bent sub on a horizontal work surface. Orient the entire assembly as shown in Fig. 31 (with the flat alignment carbides of the bent sub facing straight up).

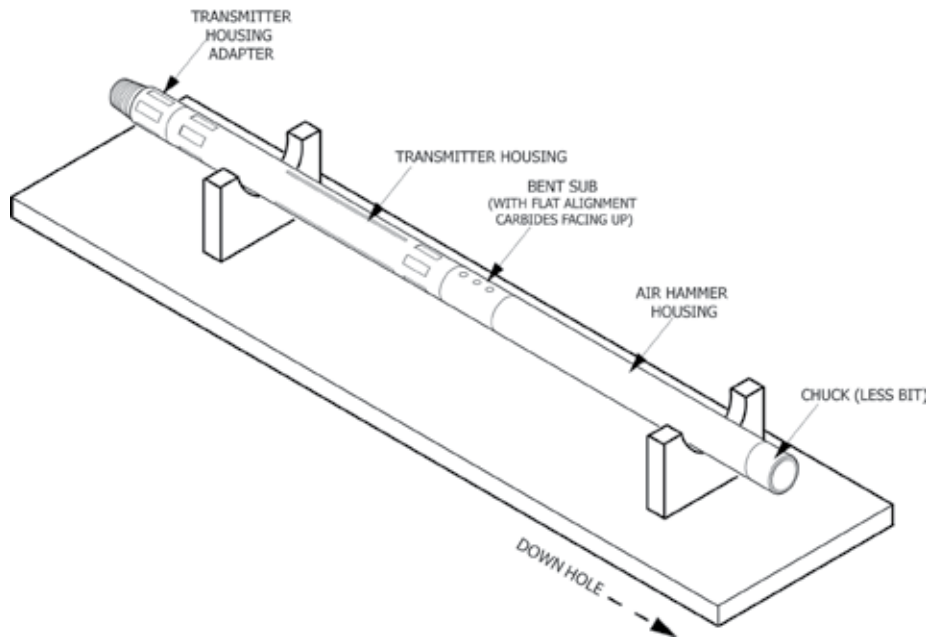


Fig 31

6b. Unscrew the chuck, including the copper breakout washer, from the air hammer housing. Remove the bit retaining ring halves together with o-ring from behind the chuck. Then fully rethread the chuck and breakout washer back into the hammer housing. Use a copper coat thread grease on the chuck threads (see Fig 32).

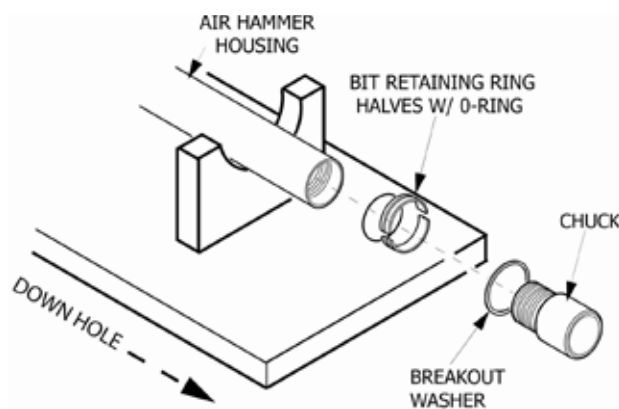


Fig. 32

6c. Position the bit in the collar. The bit should be oriented so that the full radius portion of the bit is at top and bottom. The air relief channels should be centered horizontally. (see Fig. 33).

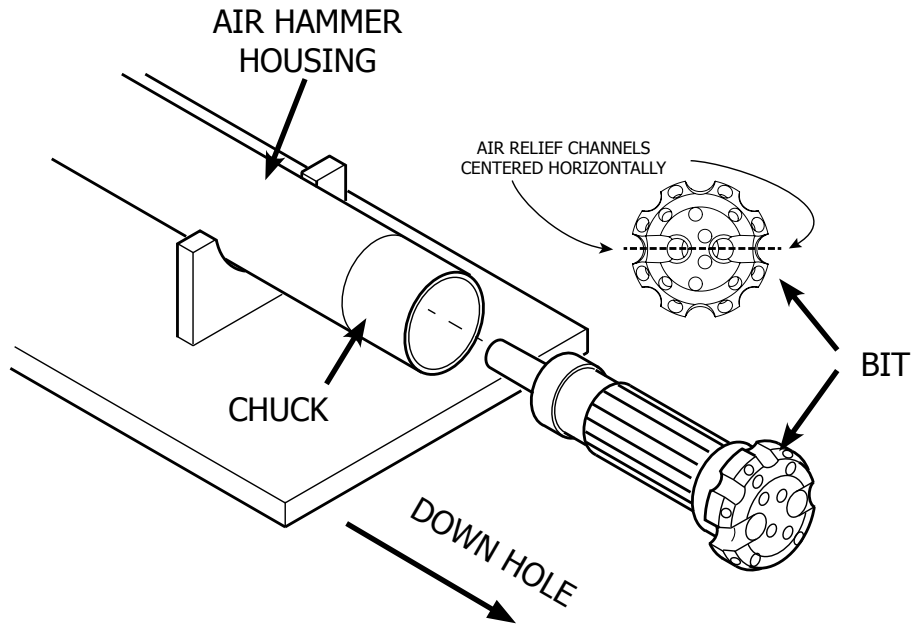


Fig. 33

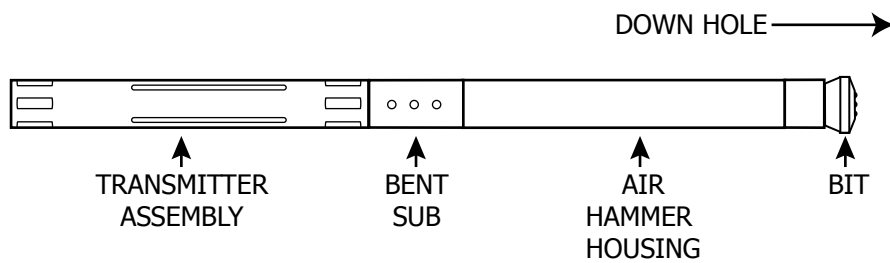


Fig. 34

To obtain the proper orientation of the chuck, it may be necessary to rotate the bit on the splines until the air channels are centered horizontally.

6d. With the air channels near the center, horizontally, push bit fully into the chuck, engaging the splines of the chuck. Then grasp both the chuck and the bit together and un-thread them out of the air hammer housing. Insure that the bit does not slide out of the chuck as they must remain in their original alignment (see Fig. 35 & 36).

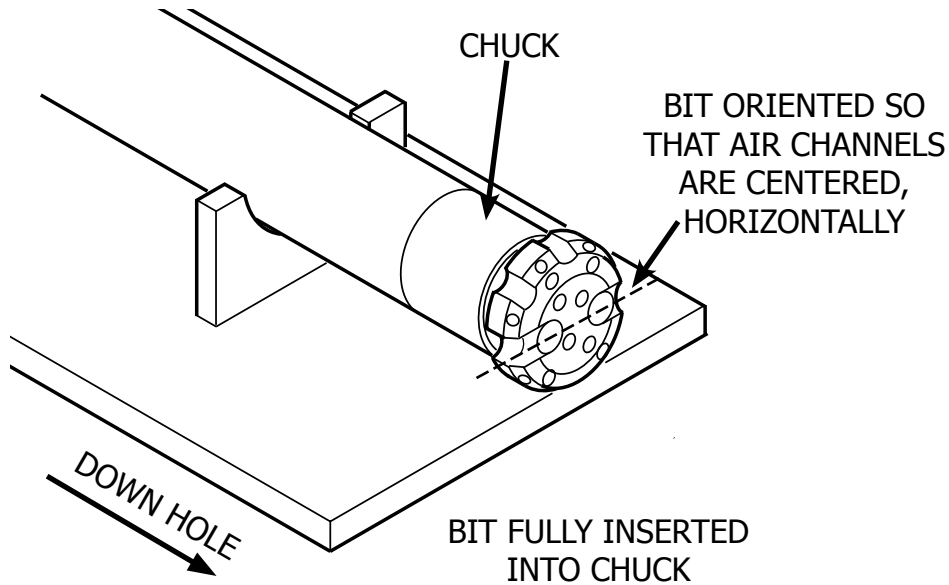


Fig. 35

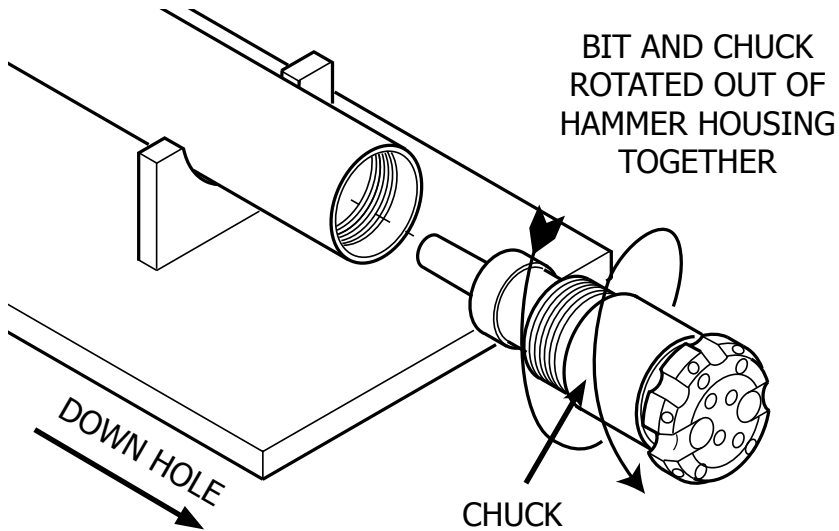


Fig. 36

6e. Install the bit retaining ring halves over the shank of the bit behind the chuck. Install the o-ring over the ring halves (see Fig. 37).

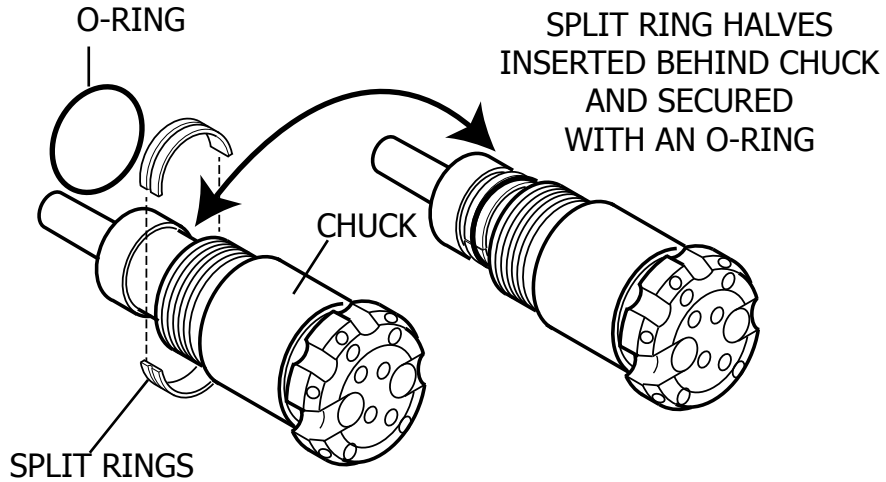


Fig. 37

6f. Install the assembled chuck and bit into the air hammer housing and tighten for full thread engagement (see figure 38). Use the breakout makeup wrench kit to rotate 1/4 to 1/2 turn beyond shoulder contact.

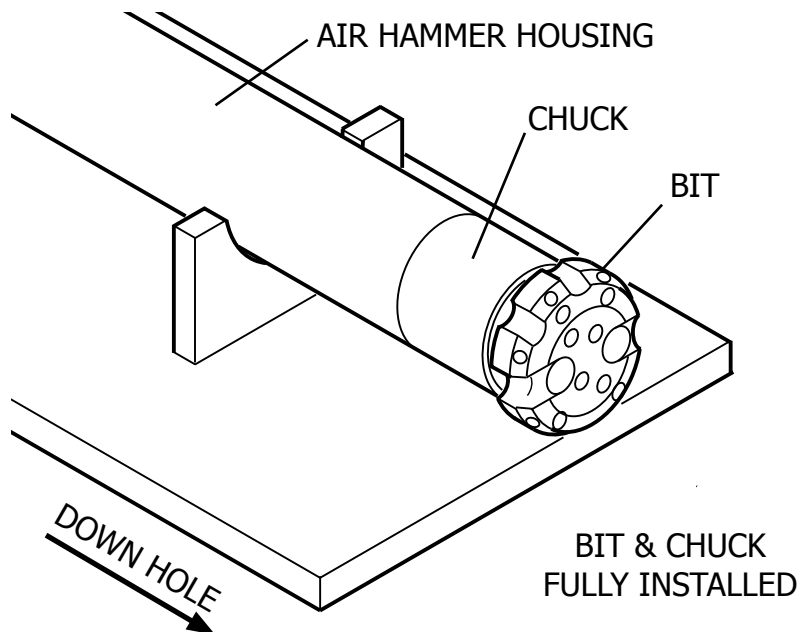


Fig. 38

7. SETUP OF SUPPORT PACK/ NO AIR PRESSURE APPLIED

7a. General

The purpose of the support pack is to control the air from the compressor and supply the fluids needed to the hammer assembly .

Control of the Air: This is accomplished with the use of a solenoid control valve located at the inlet port of the support pack air system. This valve is operated with either the "fixed" control panel located on the support pack, or a hand-held remote control which can be used by the rig operator. Solenoid control is powered by a 12 VDC harness which runs from the drill rig back to the support pack.

During drilling operations, the controller is used to control the air going to the downhole hammer assembly. This on-off control is typically used when adding pipe to the drill string, or breaking pipe joints when coming out of the hole.

Before starting setup, make sure that all these items are present:

- Two 2" air supply hoses (one 20ft long; one 30ft long)
- Four "Whip Check" cables for air supply hoses.
- Hand-held remote control module for solenoid on-off valve. (including 12 volt power cables that run from HDD Rig to Support Pack).
- Air hammer support pack & water tank skid.



WARNING Pressurization Hazard

Setup under pressure could result in personal injury.

The following (Section 7) setups must be conducted with the air compressor off.



WARNING Flying Hoses

Pressurized air hoses may whip violently if not contained.

Whip checks must be installed to contain air hoses (see Fig. 39)

LOCATION OF FOUR WHIP-CHECKS

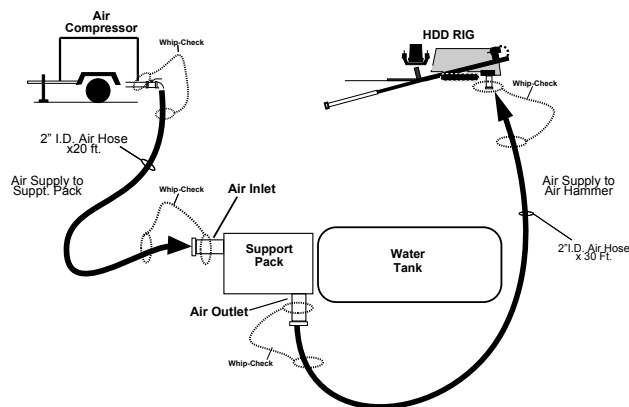


Fig. 39

7a. Whip Check at Air Inlet to Support Pack

Connect the "noose" of one end of a whip check over the inlet fitting of the support pack. Cinch the noose up tight so that it can't be pulled off, over the fitting. Slip the other end of the whip check over one end of the 2" x 20' air hose. Cinch this noose up tight (see Fig 40 & 41).

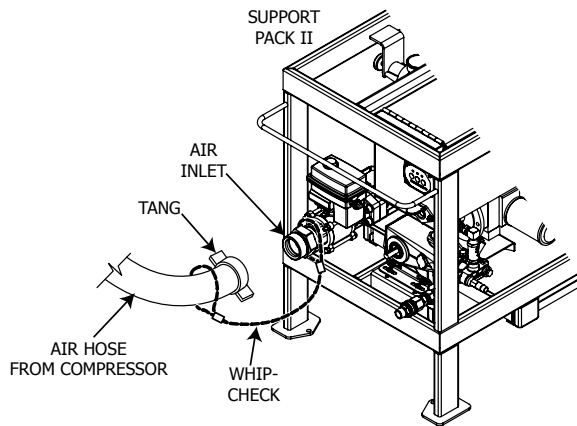


Fig. 40

Thread the end of the 2" x 20' air supply hose to the support pack inlet fitting. Tighten by hand, then use a hammer to strike the tangs of the hose fitting for an even tighter fit. Take the slack out of the whip checks by sliding the noose on the hose away from the air inlet fitting.

Using the same procedure, install the other end of the 2" x 20' air supply hose to the outlet fitting of the compressor secured with a whip check.

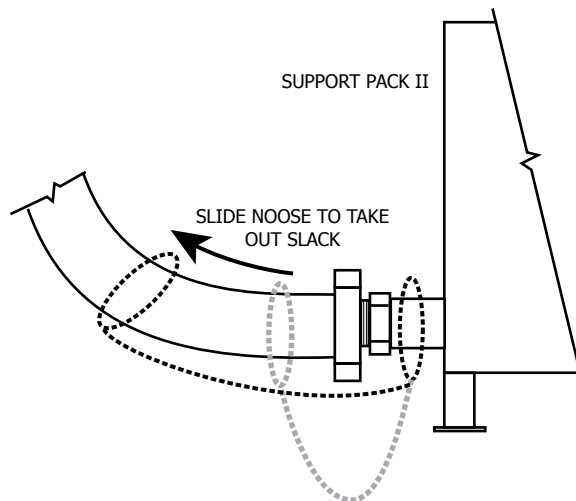


Fig. 41

7b. Whip Check at Air Outlet to Support Pack

Using the same procedure as in step 7a, install two whip checks and 2" x 30' air hose to the air outlet fitting of the support pack and to drill rig. Tighten air hoses with a hammer. Remove slack and tighten whip checks (see Fig. 42).

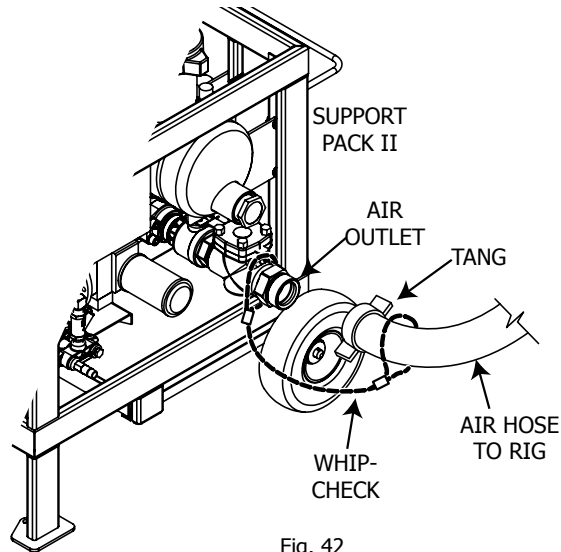


Fig. 42

7c. Solenoid Valve Control

The solenoid operated air inlet valve is controlled (on-off) by either of two ways: a hand-held remote controller which is operated by the rig operator, or a fixed controller which is located at the front of the support pack (see Fig 43).

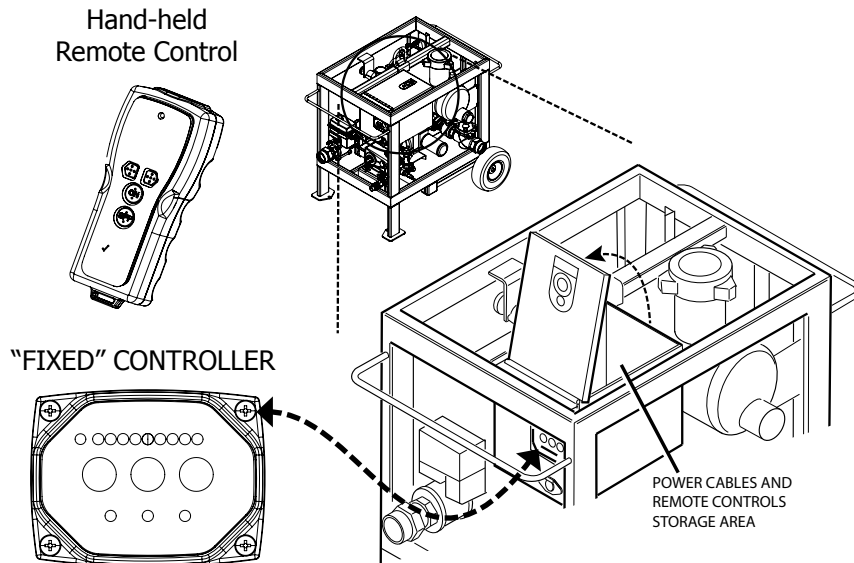


Fig. 43


7c. Hand Held System Controller

The hand held controller is used to control the air flow during the drilling operations. There are four buttons on the remote used to control the air flow. (Refer to fig 43a)

"ON" Button - - turns the air full on. This is typically the primary button that is used during the drilling operation.

"OFF" Button - - turns the support pack off. This, in turn, allows you to shut the air supply off (air compressor).

The **LEFT** and **RIGHT** arrow buttons allow for variable control of the amount of air that is being used. Under certain drilling conditions it is preferable to variably control the air.

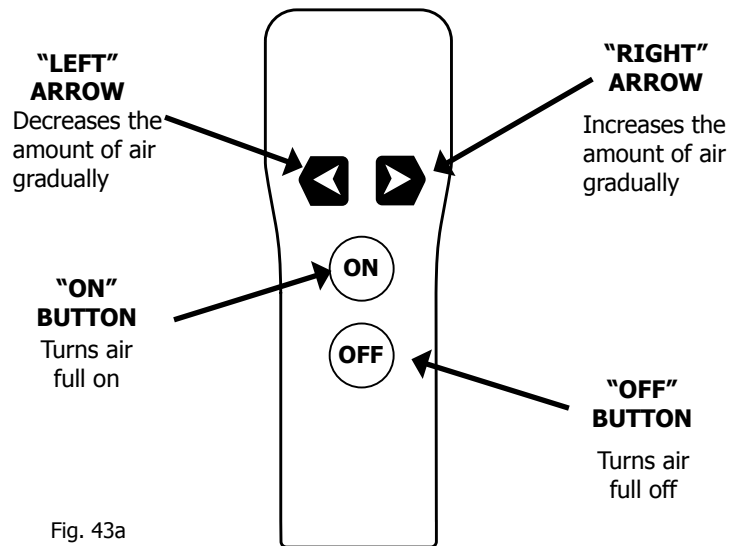

Power Cord


The wiring that connects the Support Pack II to the drill rig is made up of two harnesses. One is a 50 foot harness that connects to the Support Pack II using a trailer plug. The other is a short 5 ft. harness that connects to the long harness with a weather pack male plug, and at the rig using a 12 volt dc auxiliary power plug. An optional 5 ft. harness is available if a direct connection to the rigs 12 volt battery is required. Battery clamps must be connected correctly: Red (positive) clamp to positive (+) post on the battery; Black (negative) clamp to negative (-) post on the battery. (see Fig 44).



WARNING Electrical Shock and Burning Hazard

Connection of the clamps to the wrong battery post will result in burning of the wires. User will experience possible electrical shock and burns to the skin. The alligator clamps must be connected properly.

POWER CORD HOOKUP SUPPORT PACK TO RIG

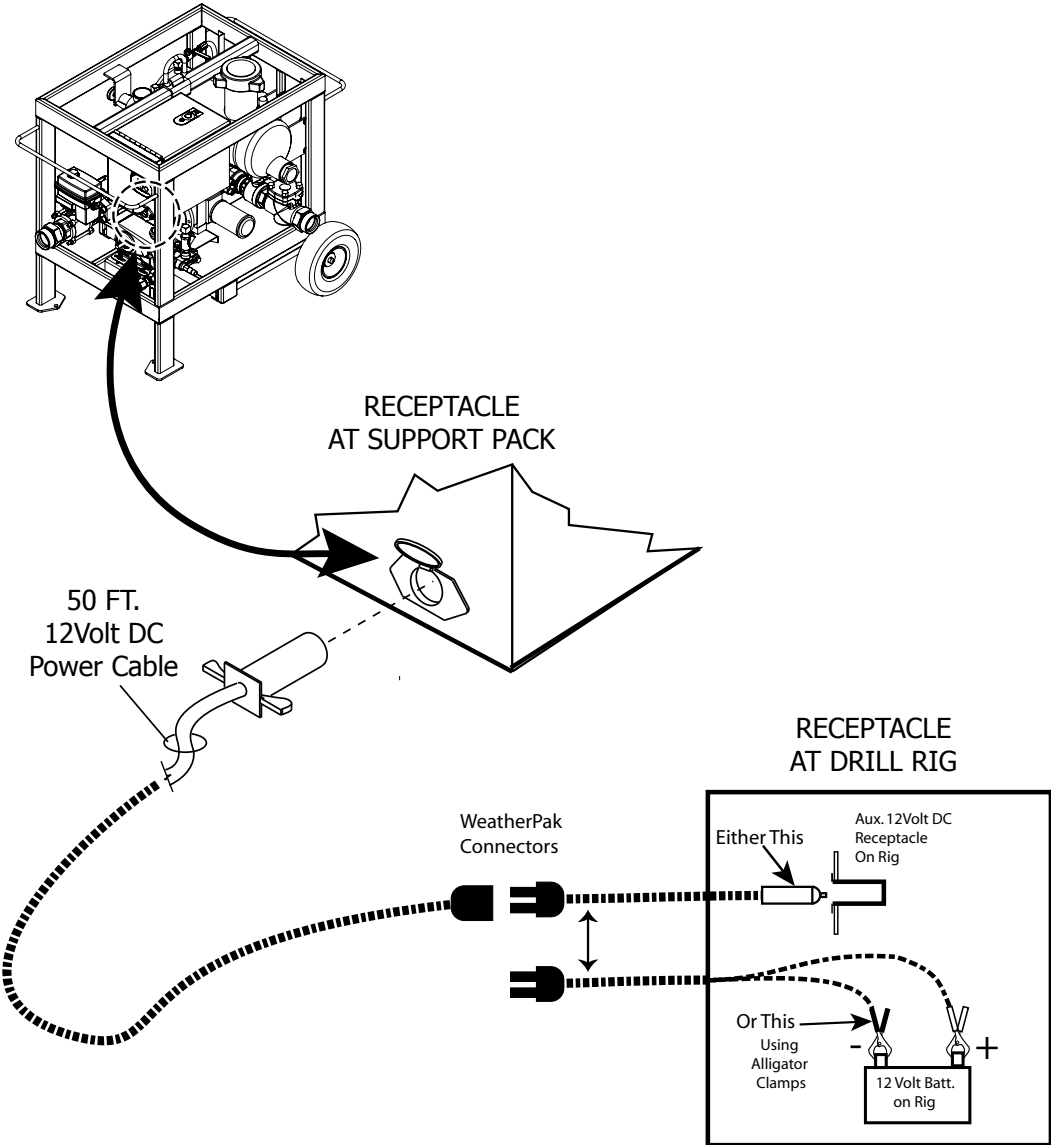

[NOTE: See Support Pack II Wiring Harness in the appendix of this manual]

Fig. 44

7d. Fluid Pump Setup and Maintenance

Adequate oil level must be maintained for proper operation of the CAT pump. The manufacturer recommends using CAT PUMP OIL, or SAE 10W30 hydraulic oil with anti-wear and rust inhibitors. Oil is added to a level that is even with the red dot in the middle of the sight glass located on the rear cover of the crankcase housing (see Fig. 45 & 46).

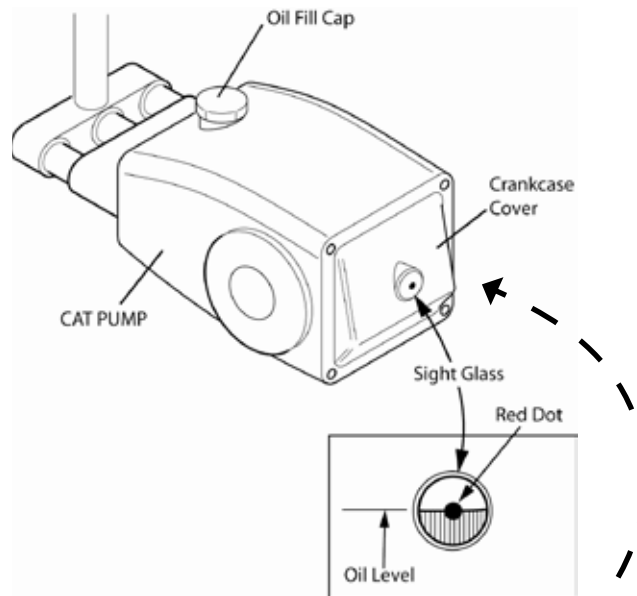


Fig. 45

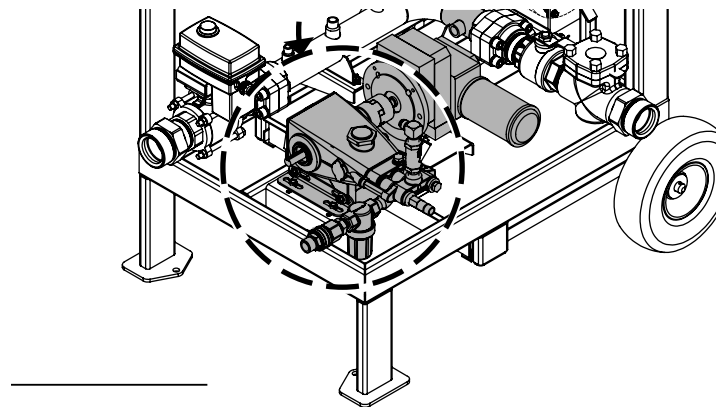


Fig. 46

7e. Oil Properties and Tank Filling

Rock Drill Oil Properties

To prevent the wearing of internal parts, corrosion and part failure, the air hammer must have a constant and adequate supply of rock drill oil. (see Oil Properties, Fig. 47).

Exxon AROX EP series, and Chevron VISTAC series (or equivalent grade) are the recommended brands for use in the air hammer. Your local lubricant representative will recommend the proper grade for use in your specific drilling environment.

NOTICE Equipment Damage

Never use hydraulic oil, engine oil, gear oil or diesel for lubricating the air hammer. Doing so may result in equipment damage.

OIL PROPERTIES

Exxon APOX Grade Chevron VISTAC Grade	EP 46 ISO 46	EP 150 ISO 150	EP 320 ISO 320
When to use	Winter	Summer	Summer Production Drilling
ISO viscosity grade	46	150	320
SAE viscosity grade	20W-20	30	50
Viscosity			
cSt @40°C, ASTM D 445	44	144	310
cSt @100°C	6	14	22
SUS @ 100°F, ASTM D 2161	228	755	1660
SUS @ 210°F	48	75	112
Flash Point			
°C	210	220	220
°F	410	450	450

Fig. 47

With air compressor installed and running and air supply valve at the drill rig fully open, toggle the "Increase-Decrease" switch on the hand held controller to run the hammer at half the air flow for a few minutes. This allows the oil to flow through the air supply lines, drill stem and air hammer thus lubricating internal components.

The correct consumption of oil is dependent upon the air volume and conditions. See lubrication graph below for recommendations (see Fig. 48).

NOTE: when drilling in wet conditions, the normal amount of oil should be doubled. Also, there should be obvious visual evidence of oil around the drill bit shank, and within the pipe joints when changing drill stem.

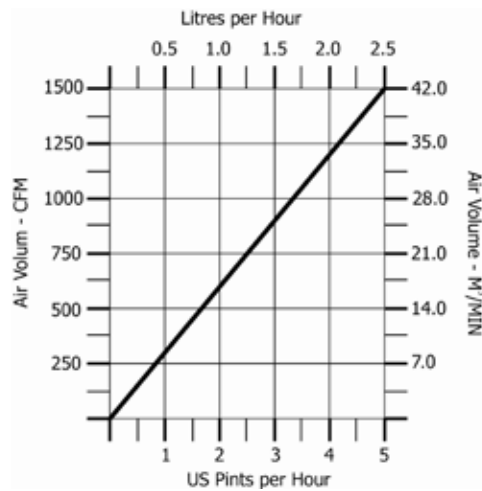


Chart: Air Volume to Oil

Fig. 48

The recommended grade of oil is dependent on the ambient temperature in which drilling is taking place, as well as the operating pressure. The oil properties chart will aid in selecting the proper viscosity of oil for a given ambient temperature range.

Tank Filling

When filling the oil tank with rock drill oil, always follow this procedure:



WARNING Contents under pressure
To avoid possible injury, shut off the compressor and close its outlet valve before performing this setup.

- a) Turn off the hand held controller and oil shut off valve at the support pack. Indicators on the valves will be pointing perpendicular to the valve bodies and the air in/air out lines.



WARNING Contents under pressure - Eye protection required



Keep away from exhaust end of vent valve. Open vent valve slowly. Exposure to air escaping under pressure may result in serious eye and other bodily injury.

- b) Open the air vent valve on top of the oil tank, releasing air pressure inside the tank to atmospheric pressure.

- c) When oil tank is fully vented, use a hammer to loosen the tangs on the 4 inch oil tank cap, then unscrew and remove the cap by hand.(see Fig. 49).

OIL TANK IN CROSS-SECTION

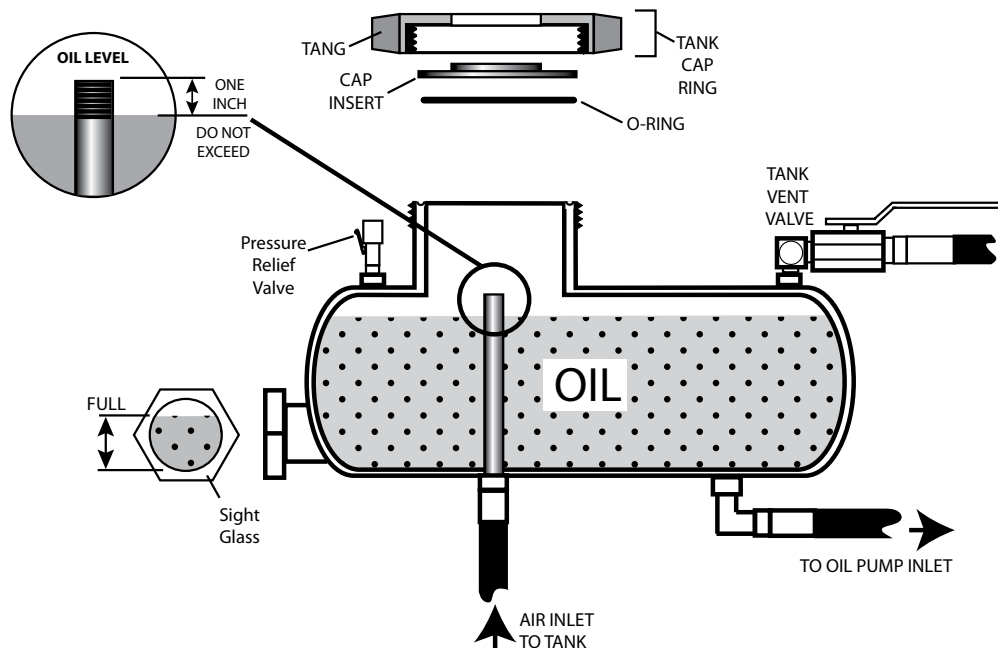


Fig. 49

d) With cap removed, fill oil tank with appropriate rock drill oil (see Fig. 47). The level of oil in the tank must not be higher than one inch from the top of the stand pipe.

The oil tank is full when there is oil up to the 3/4 mark on the sight glass.

e) Install the tank cap. Tighten with hammer by striking the tangs on the tank cap ring.




WARNING Fluids escaping under pressure
Escaping fluids may be sprayed into support pack. Close vent valve before starting compressor.

f) Close the vent valve on top of the tank. This valve must be closed before starting the compressor, otherwise the tank contents will be sprayed into the inside of the support pack.

Check List

This completes the initial equipment setup before starting the Air Compressor. It is important to conduct a quick system check prior to starting the compressor, as follows:

1. Air supply hose (2 inch) to drill rig is connected, from air outlet at support pack, to connection at drill rig. Insure that whip checks are correctly installed.
2. Air supply hose (2 inch) to support pack inlet, from air compressor outlet is connected and whip checks are installed.
3. Verify that all four air supply hose ends have been tightened using a hammer.
4. Verify that the oil tank cap on the support pack has been tightened using a hammer.
5. Oil tank vent valve is in "Closed" or "Off" position (handle turned perpendicular to the valve body). (See Fig. 50 & 51).

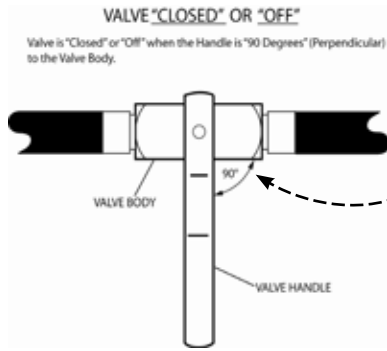

Oil Tank Vent Valve
Fig. 50

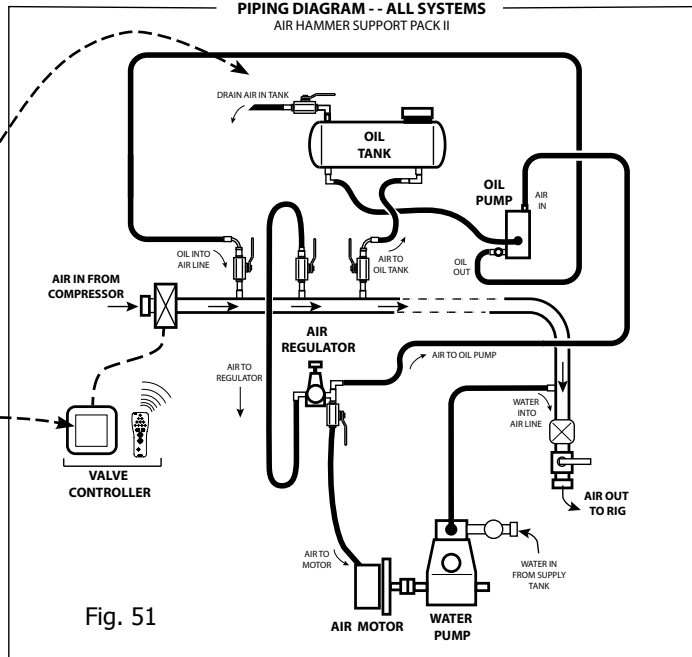


Fig. 51

6. Power connections (12 volts DC) for Support Pack Valve controller have been made (see Fig. 44).

7. Check for proper electrical function of the solenoid controlled air inlet valve by pressing the buttons on the hand held controller from "On"(valve open) to "Off" (valve closed). When air inlet valve is open the green light should be illuminated on the support pack controller. When the off (close) button is pushed the red light should be illuminated on the support pack controller. When the valve is in a position other than fully open or fully closed, the yellow light will be illuminated.

NOTE: there is an arrow indicator on top of the air inlet valve which shows whether the valve is Open (arrow in line with the valve) or Closed (arrow perpendicular with the valve body).

8. Before starting the compressor, the electrically controlled air inlet valve on the support pack must be "Closed". Also, the manual air inlet valve (where the air supply hose from the support pack connects at the drill rig) must be "Closed".

-INITIAL SYSTEM SETUP IS COMPLETE-

8. SETUP OF SUPPORT PACK/ AIR PRESSURE APPLIED

8a. Setup of Air Compressor - adjustments prior to drilling operations

Set up the air compressor at the work site following manufacturers instructions. air compressor, support pack and drill rig should be arranged so that the supplied air supply hoses will reach to all three units.

The air compressor used should be capable of maintaining a minimum of 400 cfm and 200 psi output (see Fig. 52).

Compressor Selection Chart

Compressor Output cfm/psi	400/200	700/300	900/350	1150/350
A. H. Model 4.0	up to 200ft.	250ft. +	250ft. +	500ft. +
A. H. Model 5.0	N/A	N/A	250ft. +	500ft. +

Fig. 52

Start the air compressor

Open the compressor outlet valve slowly so that air pressure is supplied to the support pack.

8b. Pressure Regulator Setup and Adjustment

Set the pressure regulator on the support pack to 80 PSI (Fig 53 & 54). To set the pressure, insure that the air inlet valve at the drill rig is "Closed", then , using the support pack controller, open the air inlet valve on the support pack (push button on support controller to "OPEN" -green light comes on). This will cause the system to become pressurized. Rotate the pressure regulator knob until a reading of 80 psi is displayed on the pressure gauge. Following adjustment, turn the controller to"CLOSE" (red light).

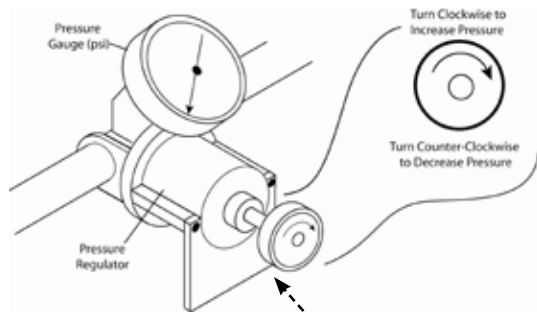


Fig. 53

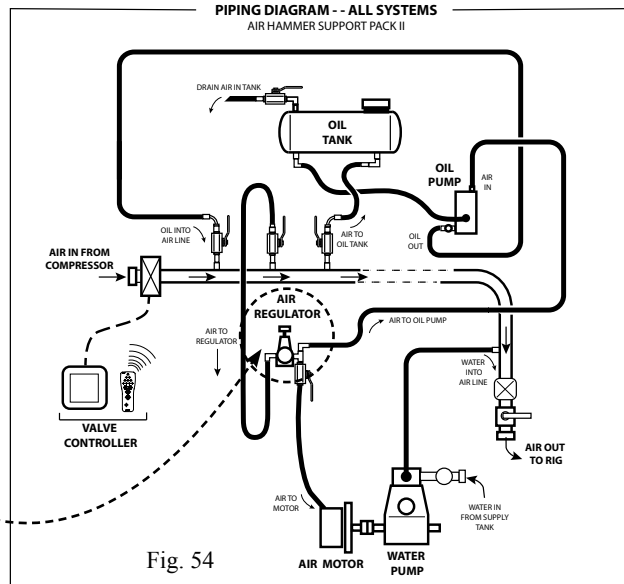


Fig. 54

8c. Oiler Adjustment

The intensifier pump provides positive oil flow to the air stream. There are several adjustments at the oil pump. The black knob located on the front of the oil valve (fig 55) is used to adjust the amount of oil supplied to the system. The gauge located on the top of the oil pump indicates the pressure that is set by the black knob. The pressure should be set between 20 and 30 PSI on this gauge. Turning the knob clockwise will increase the pressure. The pump will make a clicking sound for each cycle of the piston; adding more pressure will increase the oil flow. Typically 20-30 PSI will provide an adequate oil supply. The needle valve located at the bottom of the oil pump allows for fine adjustment of the oil supply. This valve should be run in the half open position to start with, around 10 turns out from fully closed. (see Fig. 55).

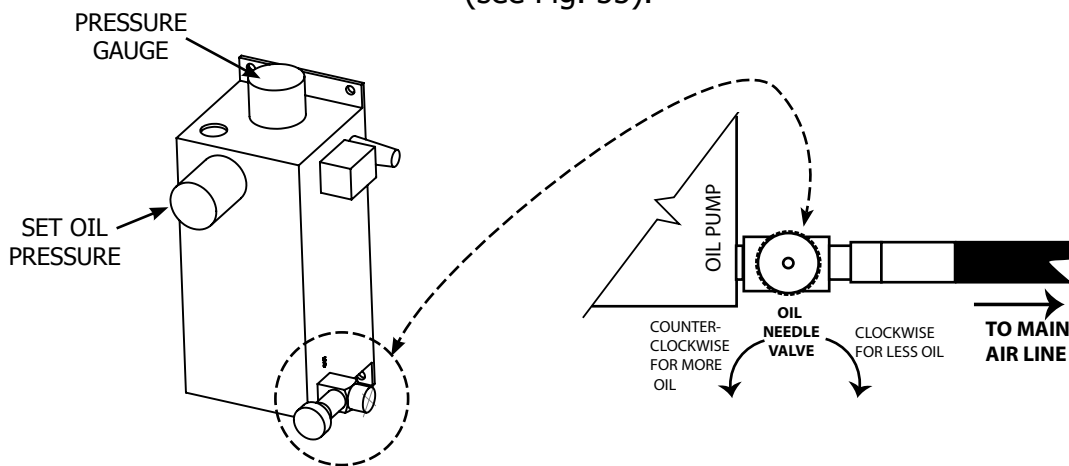


Fig. 55

There are two valves located on the lines running out the bottom of the oil tank. One controls the air "IN" to the tank; the other controls the oil "OUT" of the tank. These valves are how the oiler is turned on and off. They should be fully open (handles parallel with the valves) during drilling and fully closed (handles perpendicular to the valves) when not drilling (see Fig 56).

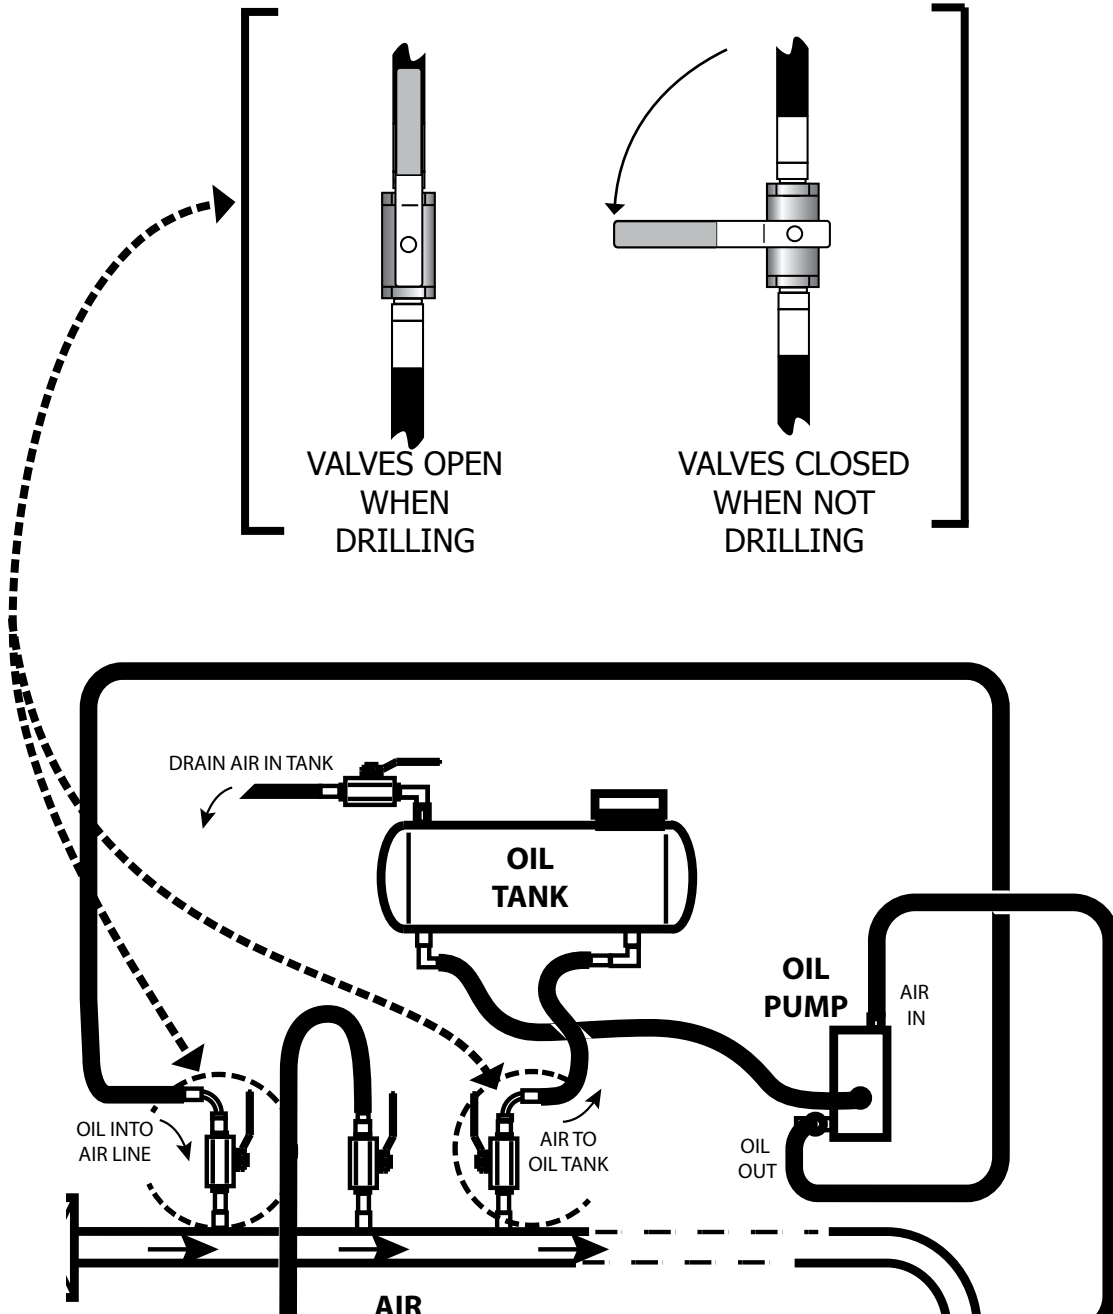


Fig. 56

8d. Water Pump Adjustment and Operation

The support pack is mounted on a skid which needs connected to a water tank. For the water pump to operate correctly it is important that the supply line from the water tank is always full of water during start-up and operation so that the pump will stay "primed".

There is a water shut-off valve and quick disconnect fitting in the inlet water line from water tank to water pump. This is where the water tank can be drained for servicing.

During initial start-up, insure that the water tank is full, and always maintained at a level higher than the inlet supply line to the pump. Insure that the inlet line is connected, shut-off valve is fully open and the line is full of water (no air pockets). If there is an air pocket visible in the inlet water line then "bleed" the line by shutting off the valve, disconnecting the line, then cracking the valve open enough to purge the air from the line. Then reconnect the line and re-open the valve (fully) so that the inlet side of the water pump will be primed with water.

IMPORTANT:

- Bentonite should not be run through the water pump. Polymer is acceptable if clay formations are anticipated.
- Check the in-line filter (on the inlet side of the pump) periodically, for debris.

NOTICE Equipment Damage

Equipment damage may occur if the water freezes. When not drilling, drain all water if there is a potential for freezing conditions.

- When not operating the drill and there is the potential for freezing conditions, drain water from the water tank and inlet lines of the pump, then anti-freeze the pump (see Fig. 58).

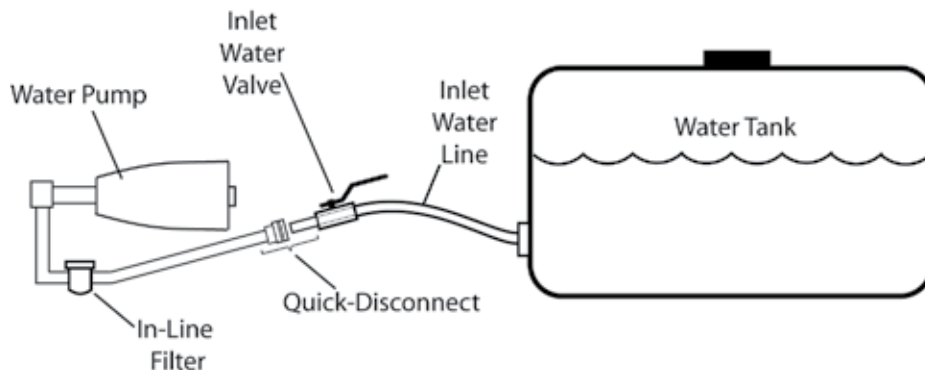


Fig. 57

The water pump is driven by an air motor that is coupled to the input shaft of the water pump. A ball valve (water flow rate) on the line to the air motor controls the RPM of the water pump and the resulting amount of water (gpm) being introduced into the drilling operation. With the valve fully opened, the maximum amount of 5 gpm will be pumped. A "clean bore" is obtained depending on drilling conditions. Approximately 1/2 to 4 gallons per minute can produce good results, however soft rock may require more water and hard rock may require less water. Begin a new bore with the water flow rate valve set to **half open**, until drilling conditions can be determined, then adjust the valve setting for more or less water (while drilling) as the situation dictates (see Fig. 58 & 59).

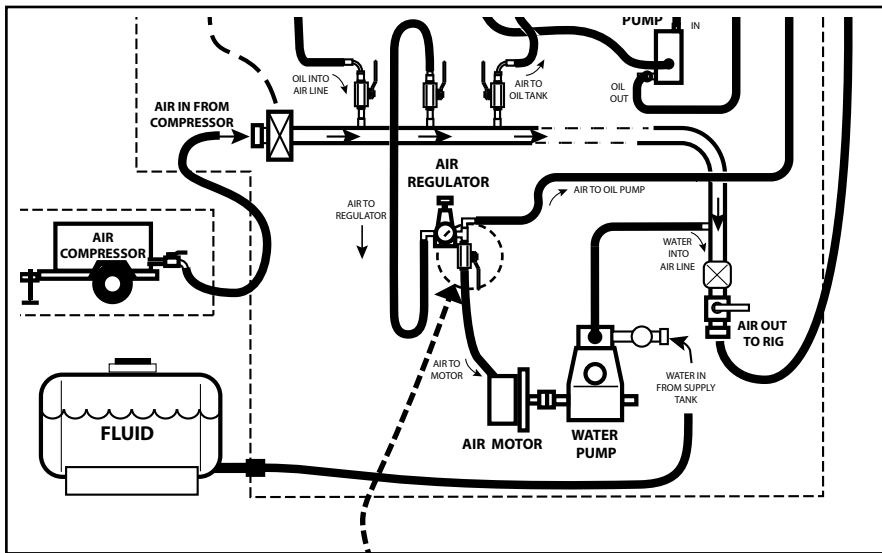


Fig. 58

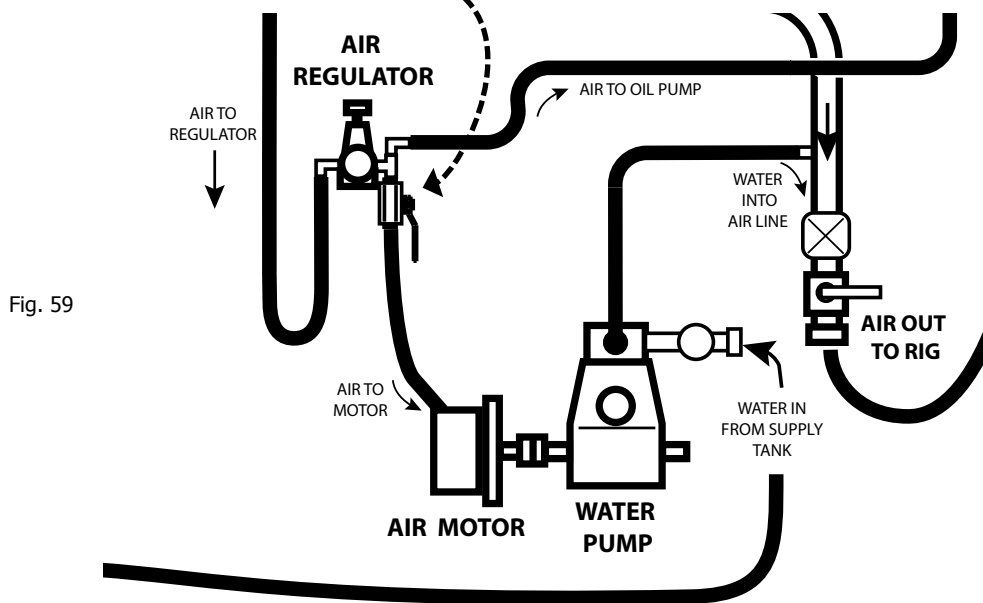


Fig. 59

9. AIR HAMMER OPERATION

9a. Setting Up:

Dig a spoils pit. Typically a spoils pit is dug 10 to 15 feet in front of the drill to allow a place for the spoils to exhaust into (see Fig. 60).

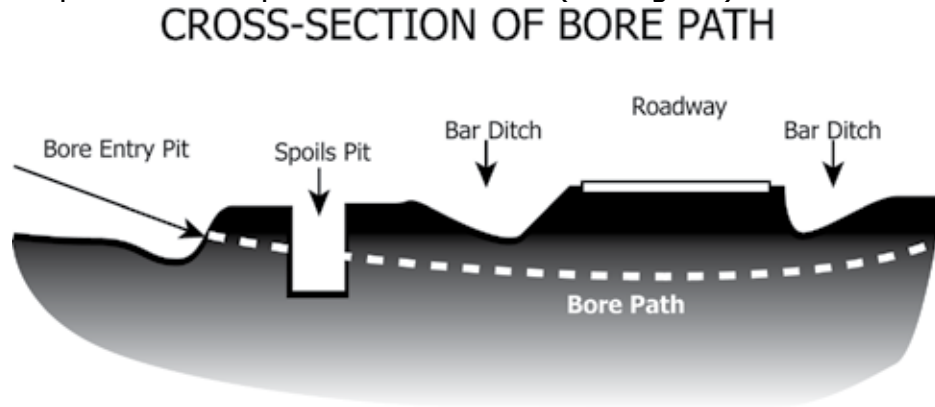


Fig 60

9b. Attaching the Down Hole assembly:

Position the first joint of drill pipe through the drill pipe guide on your drill rig. Fully coat the pin thread of the drill pipe adapter with no-gall thread grease, then thread on the fully assembled down hole assembly.



WARNING Rotating Parts

Never use rig power or other powered equipment when making up or breaking out threaded connections.

Serious injury or death may result from rotating parts or from thrown wrenches.

Tighten to hand-tight, then use the StraightLine (or equivalent) breakout wrench kit to tighten the down hole assembly to the drill string.

Removal of the down hole assembly is conducted in the same way.

9c. Setup for Operation:

- 1) Use your hand held controller to supply air and fluids to your hammer.
- 2) For best results, enter the ground at the shallowest possible entry angle.
- 3) If the rock formation is at or near the surface, dig an entrance pit with the face perpendicular to the drill bit to facilitate getting the hole started.
- 4) If the rock formation is deep or in front of the drill rig, as is common with creek crossings, drill to the rock formation with your standard dirt

head. When you reach the rock formation, retract the drill string, attach the down hole assembly and rotate back to the rock formation. Begin drilling as outlined in 9d., below.

9d. Thrust Pressure for Drilling and Steering:

The appropriate amount of thrust force for both the drilling and steering operations is just enough to create the required resistance to set the hammer into motion. Applying too much thrust pressure will not achieve faster penetration rates. It will actually cause an adverse effect, it will not allow the hammer to beat at an optimal rate, this will slow production and cause premature wear on the bit. The correct thrust rate can be heard and felt by the operator. When the correct thrust pressure is being applied, there is very little vibration felt by the operator. When applied correctly, there is a bass tone to the hammer and a very light harmonic vibration felt by the operator. The sound that the hammer makes when being used correctly is unmistakable.

When the hammer is being pushed too hard or crowded, there is a noticeable difference in the sound and feel. The sound will become high pitched and “pinging”, much like striking a hammer lightly on tin. There is also a very noticeable increase in vibration at the operator’s station.

The hammer has almost no sound or feedback to the operator when not being pushed enough. The hammer requires positive pressure against the bit face in order to operate. There will be times in softer ground conditions when this occurs.

9e. Steering the RockEye Hammer:

In order to steer upward (toward 12 o’clock) with the hammer, use the rigs thrust control to engage the face of the bit with the rock formation; maintain just enough thrust pressure to set the hammer in motion. The percussive action of the piston will begin. Rotate the face of the bit, carving between 9 o’clock and 3 o’clock (180 degrees). It is recommended to mark the drill stem at the desired clock positions as a reference point. Note: you must maintain a minimal amount of thrust pressure to prevent the loss of percussive action in the hammer.

It isn’t necessary to back the bit away from engagement to rotate in a counter clockwise direction, as long as the rotation is less than a full turn. Follow the above instructions to steer in any desired direction by simply changing your clock positions. Continue carving the rock face until you achieve 2% slope change, then rotate the hammer one full revolution. This carving action creates a keyhole shape; the one full revolution adds clearance for the hammer’s rear steering point and prevents binding the tool in the bore hole (see Fig. 61 & 62). **Failure to perform this rotation can allow the assembly to become lodged in the bore hole.**

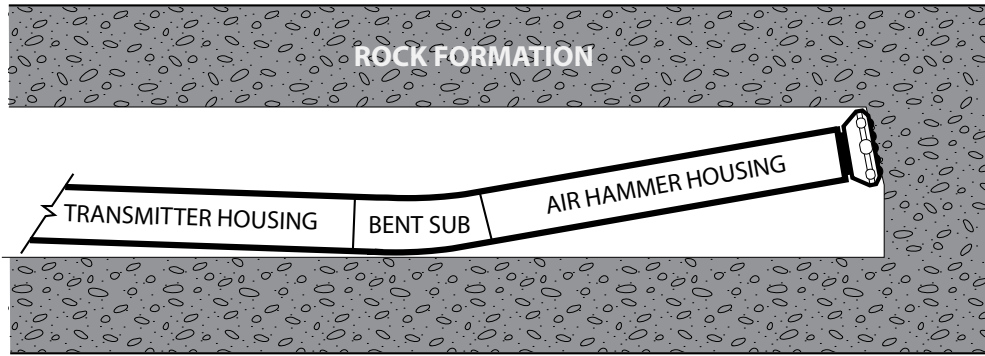


Fig. 61

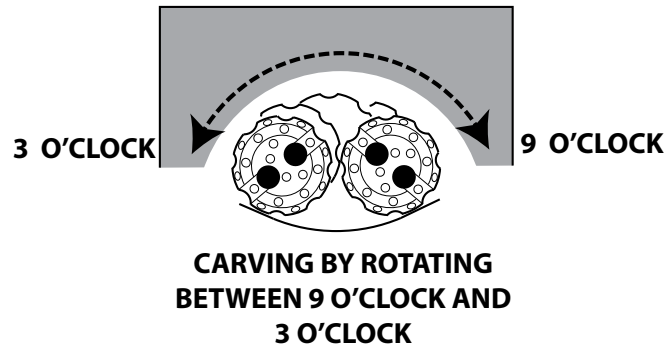


Fig. 62

9f. Maintaining a clean round hole:

Once the bore has progressed 30 feet you must swab the hole. This is accomplished by maintaining normal drilling rotation between 25 to 40 rpm and retracting and advancing the drill string the length of the drill pipe. This process will help keep the hole clean and should be done at the completion of every joint of drill pipe for the duration of the bore.

9g. Drilling Straight:

Once the desired depth, pitch and direction have been obtained and you want to drill straight, you rotate the drill string between 25 and 35 rpm while maintaining just enough thrust pressure to set the hammer in motion. Swabbing the hole is necessary during this process as well as it will assist in maintaining a clean round bore hole.

9h. Cleaning and Storage after each use:



WARNING Rotating Parts

Never use rig power or other powered equipment when making up or breaking out threaded connections.


Serious injury or death may result from rotating parts or from thrown wrenches.

- 1) Upon completion of a bore operation, remove the air hammer from the drill string using the StraightLine (or equivalent) breakout wrench kit.
- 2) Remove the adapter from the back of the transmitter housing, then, using retrieval tool, remove the transmitter.
- 3) Power wash the entire air hammer tool.
- 4) Pour rock drill oil into the rear (transmitter end) of the air hammer so that it coats all internal components down through the bit end.

III APPENDIX

	Pg
1.	4" Tool, Complete - 80761: Exploded Parts Breakdown..... 44
	4" Tool, Complete - 80761: Parts List..... 45
1a.	4" Hammer Assembly - 66647: Exploded Parts Breakdown..... 46
	4" Hammer Assembly - 66647: Parts List..... 47
1b.	4" Transmitter Assembly - 80758: Exploded Parts Breakdown..... 48
	4" Transmitter Assembly - 80758: Parts List..... 49
1c.	4 " Sonde Tube Assembly - 80757: Exploded Parts Breakdown..... 50
	4 " Sonde Tube Assembly - 80757: Parts List..... 51
2.	Subsite Beacon Kits - 80795, 80803: Exploded Parts Breakdown..... 52
	Subsite Beacon Kits - 80795, 80803: Parts List..... 53
3.	5" Tool, Complete - 80781: Exploded Parts Breakdown..... 54
	5" Tool, Complete - 80781: Parts List..... 55
3a.	5" Hammer Assembly - 66648: Exploded Parts Breakdown..... 56
	5" Hammer Assembly - 66648: Parts List..... 57
3b.	5" Transmitter Assembly - 80785: Exploded Parts Breakdown..... 58
	5" Transmitter Assembly - 80785: Parts List..... 59
3c.	5" Sonde Tube Assembly - 80787: Exploded Parts Breakdown..... 60
	5" Sonde Tube Assembly - 80787: Parts List..... 61
4.	Support Pack Frame Assembly - 80974: Exploded Parts Breakdown..... 62
	Support Pack Frame Assembly - 80974: Parts List..... 63
5.	Support Pack Air System: Exploded Parts Breakdown..... 64
	Support Pack Air System: Parts List..... 65
6.	Support Pack Water System: Exploded Parts Breakdown..... 66
	Support Pack Water System: Parts List..... 67
7.	Support Pack Oil System: Exploded Parts Breakdown 68
	Support Pack Oil System: Parts List..... 69
8.	Support Pack Controls: Exploded Parts Breakdown..... 70
	Support Pack Controls: Parts List..... 71
9.	Support Pack Hoses and Safety Cables..... 72
	Support Pack Hoses and Safety Cables: Parts List..... 73
10.	Support Pack Decals - 80974:..... 74
	Support Pack Decals - 80974: Parts List..... 75
11.	Support Pack Wiring Diagram [Suppt Pack to Rig]..... 76
12.	Support Pack Wiring Diagram [Controller to Solenoid Valve]..... 77
13.	Air Hammer II - Complete Electrical Schematic..... 78
14.	Support Pack Piping Diagram..... 79
15.	Tool Kit with Breakout Wrench Kit..... 80



**AIR HAMMER TOOL, 4 INCH
COMPLETE PARTS (80761)**

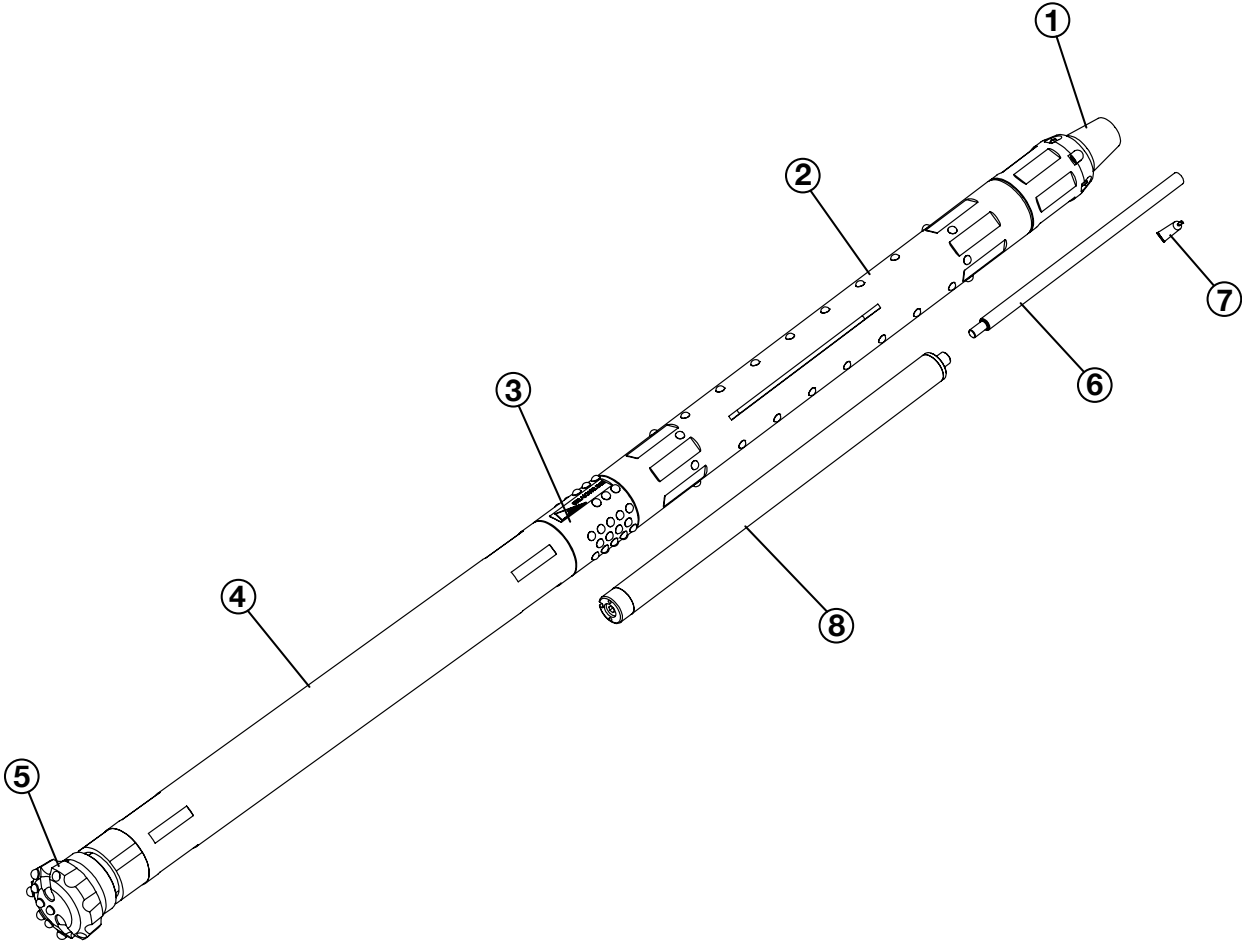

**AIR HAMMER TOOL, 4 INCH
PARTS LIST (80761)**

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	66040	Tooling, SL, Air Hammer, Adapter/Carbide Assy	1
2	80758	Tooling, SL, Air Hammer, Sonde Housing Assy	1
3	67285	Tooling, SL, Air Hammer, Bent Sub/Carbide Assy	1
4	66647	Tooling, SL, Air Hammer,4.0	1
5	22945	Concave Bit, 4.75	1
6	66223	Tooling, SL, Air Hammer, Sonde Tube Retrieval Tool	1
7	22056	Thread Lock Compound .5"	1
8	80757	Tooling, SL, Air Hammer, Sonde Tube Assy	1

**HAMMER ASSEMBLY, 4 INCH
EXPLODED PARTS (66647)**

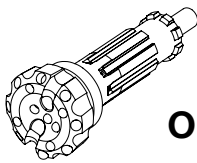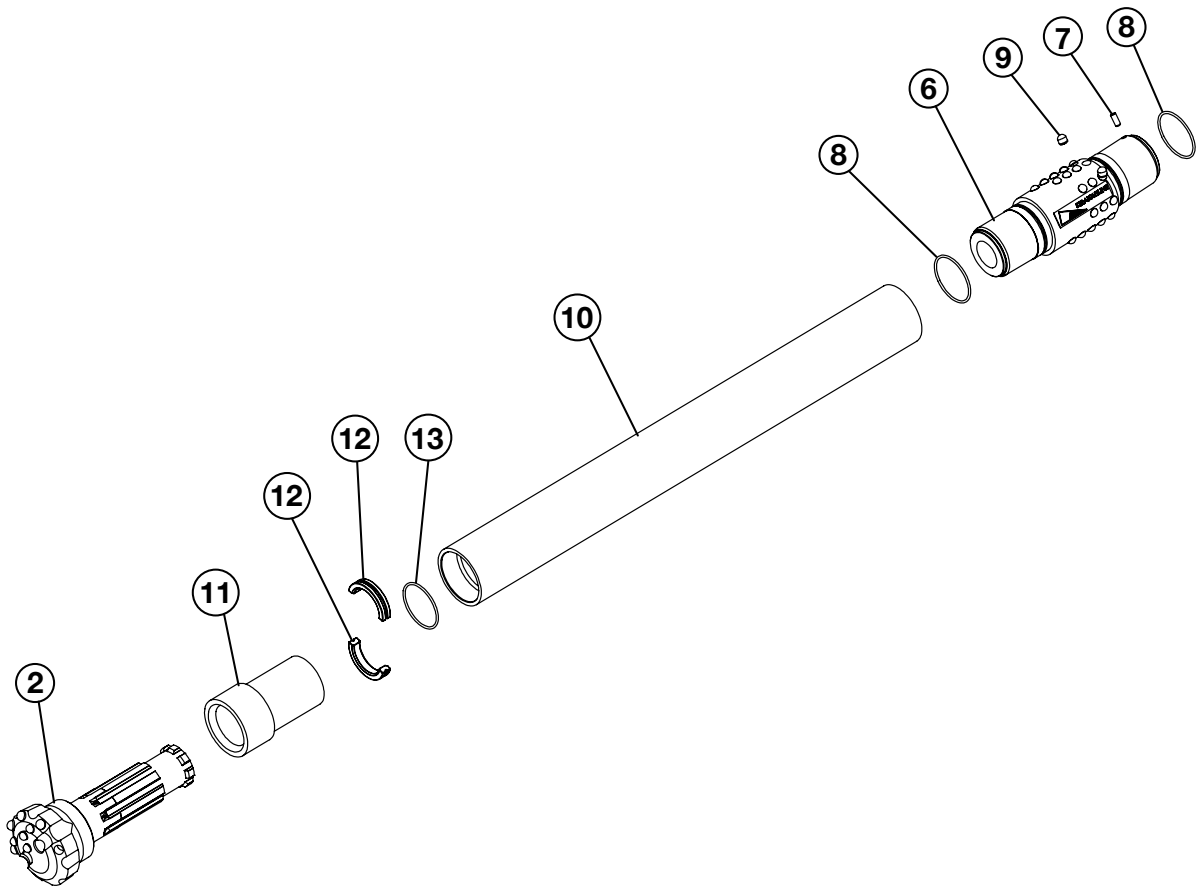


**P/N 23096
OPTION, BIT, CONVEX, 5.125 INCH AIR HAMMER**

**HAMMER ASSEMBLY, 4 INCH
PARTS LIST (66647)**

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
2	22945	Concave Bit, 4.75	1
6	67285	Tooling, SL, Air Hammer, 4.0, Bent Sub, 2.0 Deg	1
7	121194	Dowell, 5/16 Dia X .750 Long	1
8	22991	O-Ring	2
9	23076	Carbide, Insert	39
10	22946	Hammer Housing, 4.00, Hammer	1
11	22946	Hammer Housing, 4.00, Chuck	1
12	22946	Split Ring	2
13	22946	O-Ring	1


TRANSMITTER ASSEMBLY, 4 INCH EXPLODED PARTS (80758)

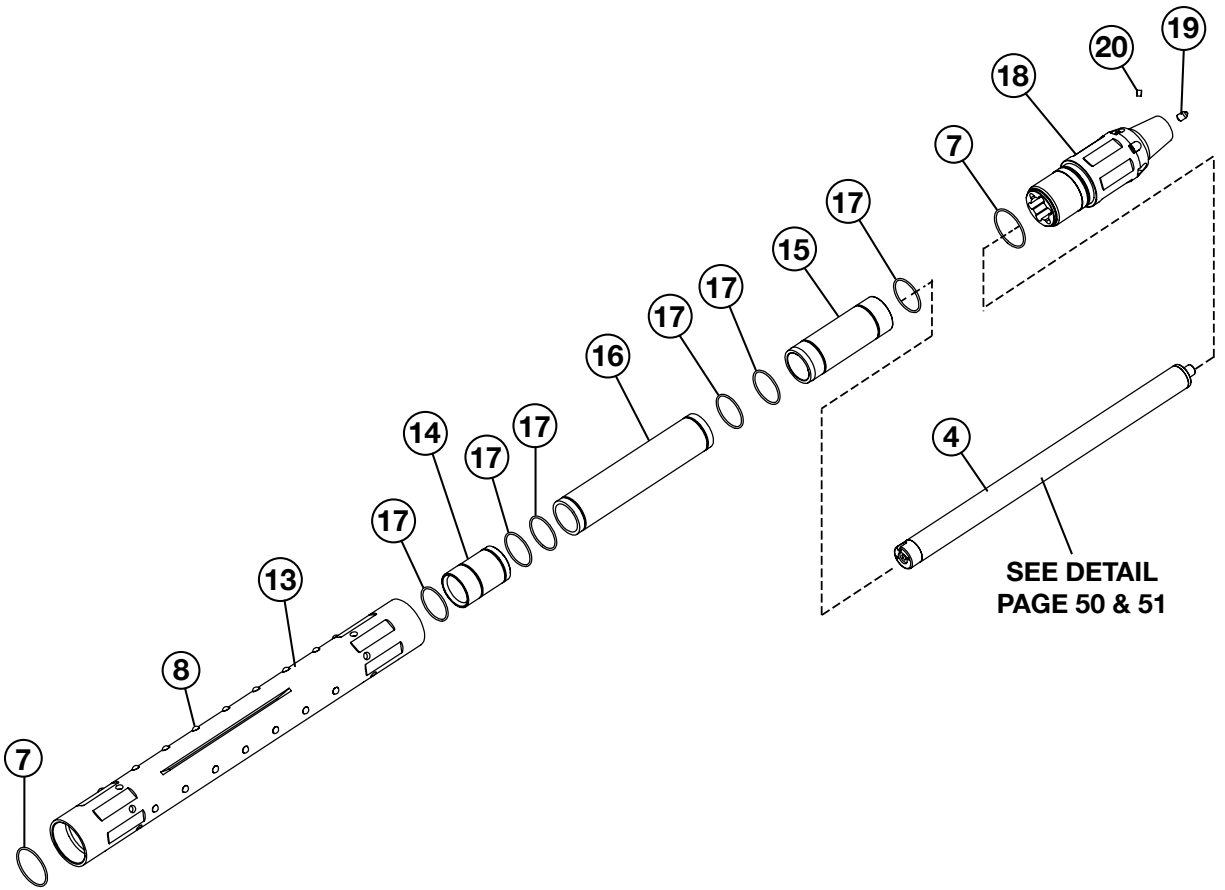

**TRANSMITTER ASSEMBLY, 4 INCH
PARTS LIST (80758)**

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
4	80757	Tooling, SL, Air Hammer, Sonde Tube Assy	1
7	22991	O-Ring	3
8	23076	Carbide, Insert	64
13	66036	Tooling, SL, Air Hammer, Sonde Housing	1
14	66037	Tooling, SL, Air Hammer, Sonde Housing Sleeve, Short	1
15	66038	Tooling, SL, Air Hammer, Sonde Housing Sleeve, Long	1
16	66039	Tooling, SL, Air Hammer, Sonde Housing Poly Insert	1
17	22938	O-Ring	6
18	66040	Tooling, SL, Air Hammer, Sonde Housing Adapter	1
19	22977	Carbide, Insert	5
20	66229	Jet, Plug, 1/8 - 27, .188 Hole	1


**SONDE TUBE ASSEMBLY, 4 INCH
EXPLODED PARTS (80757)**

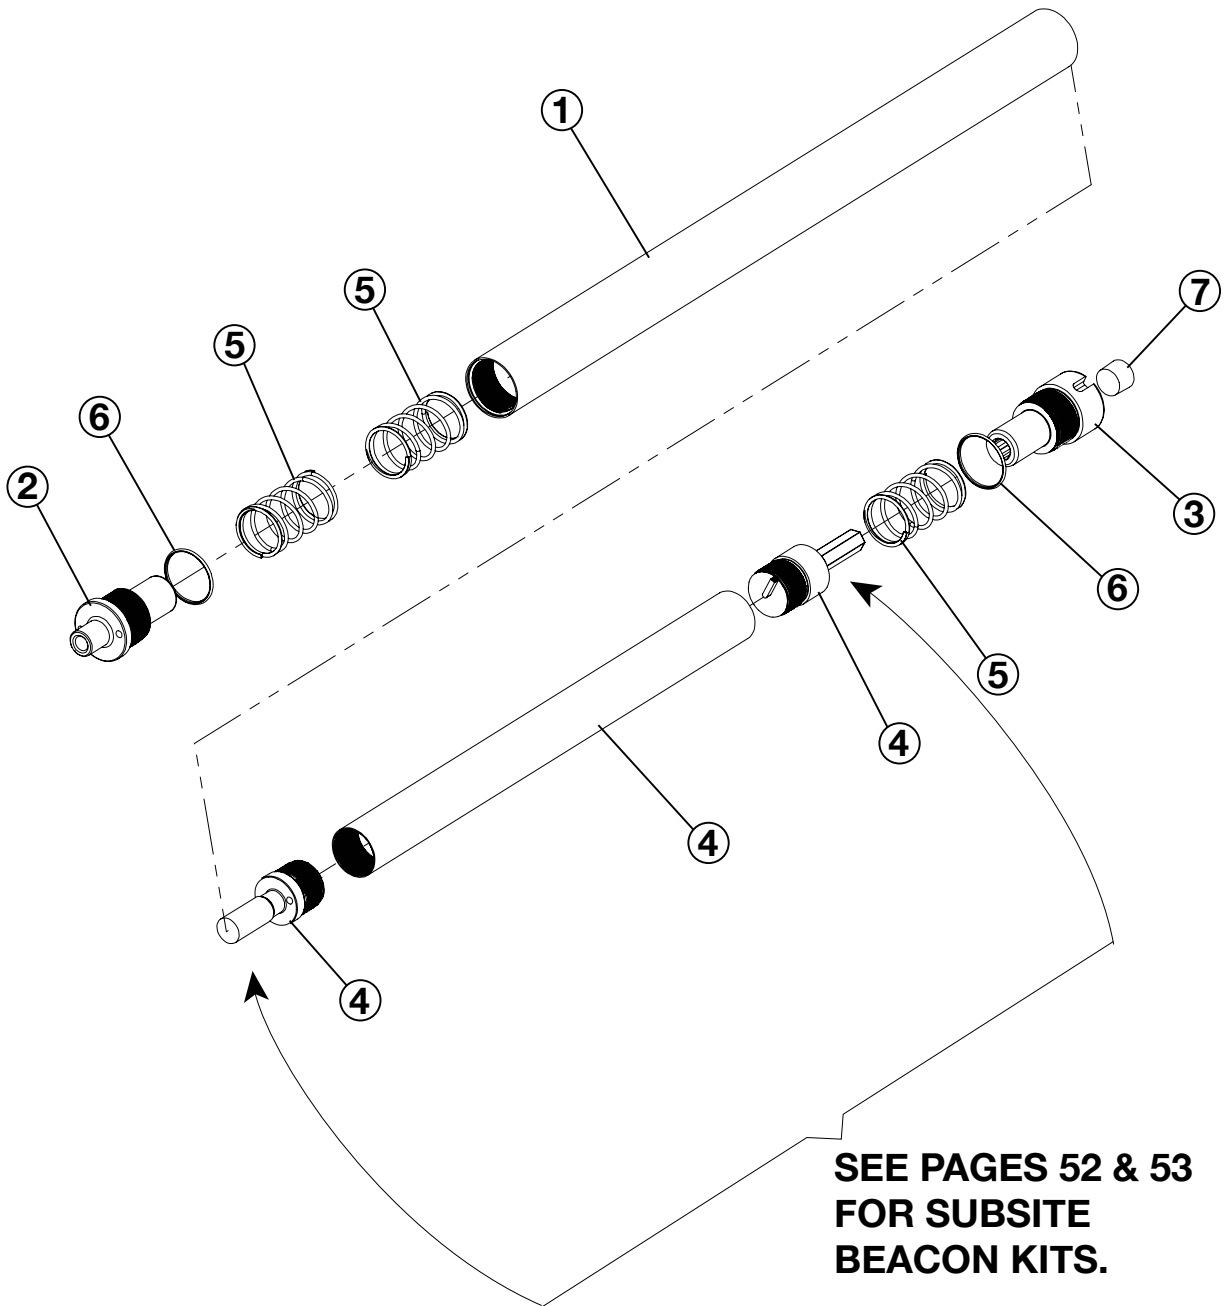


**SONDE TUBE ASSEMBLY, 4 INCH
PARTS LIST (80757)**

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	66033	Tooling, SL, Air Hammer, Outter Sonde Tube, Tube	1
2	66035	Tooling, Air Hammer, Outter Sonde Tube, Cap	1
3	66034	Tooling, SL, Air Hammer, Outter Sonde Tube Clocking Cap	1
4	80756	Tooling, SL, Air Hammer, Inner Sonde Tube Assy	1
5	22940	Spring	3
6	22939	O-Ring	2
7	120138	Fitting, Pipe, 1/2NPT Plug	1

SUBSITE BEACON KITS EXPLODED PARTS

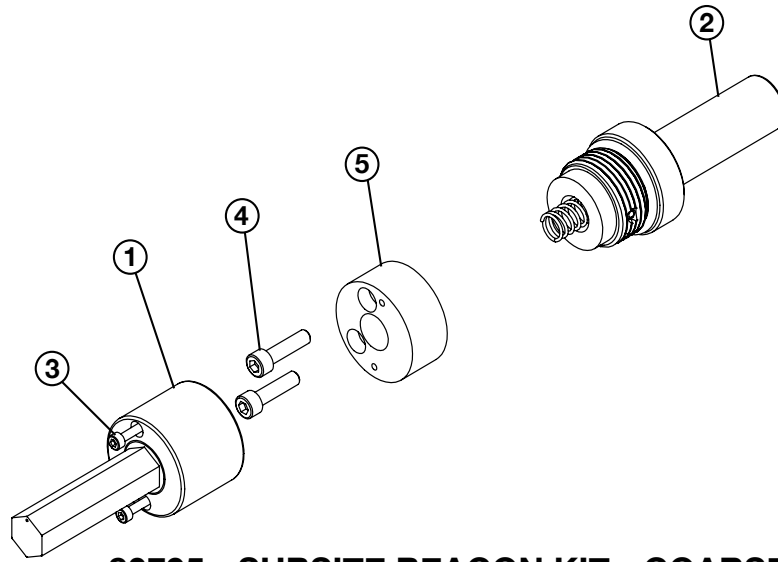

80795 - SUBSITE BEACON KIT - COARSE THREAD

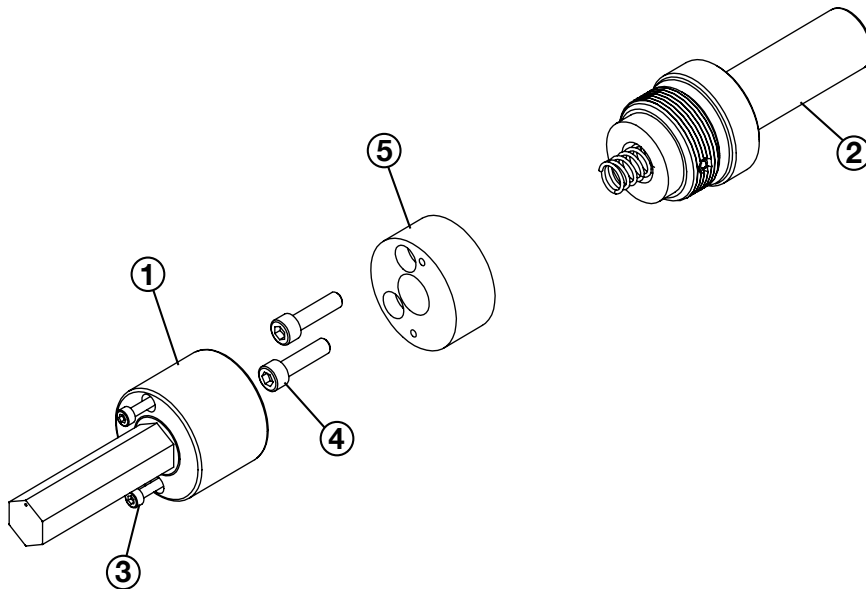

80803 - SUBSITE BEACON KIT - FINE THREAD

**SUBSITE BEACON KITS
PARTS LIST**


**COARSE
THREAD
(80795)**

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	66361	Tooling, SL, Air Hammer, Subsite Hex Indexing Spud	1
2	80794	Tooling, SL, Air Hammer, Subsite Sonde, Battery Cap Adapter Assy	1
3	440X916SHCS	Socket Head Cap Screw, #4-40 X 0.5625 Long	2
4	1024X34SHCS	Socket Head Cap Screw, 10-24 X 0.75 Long	2
5	66359	Tooling, SL, Air Hammer, Subsite, Front Clamp, Whole	1

**FINE
THREAD
(80803)**

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	66361	Tooling, SL, Air Hammer, Subsite Hex Indexing Spud	1
2	80802	Tooling, SL, Air Hammer, Subsite Sonde Battery Cap Assy, New Style	1
3	440X916SHCS	Socket Head Cap Screw, #4-40 X 0.5625 Long	2
4	1024X34SHCS	Socket Head Cap Screw, 10-24 X 0.75 Long	2
5	66359	Tooling, SL, Air Hammer, Subsite, Front Clamp, Whole	1



**AIR HAMMER TOOL, 5 INCH
EXPLODED PARTS (80781)**

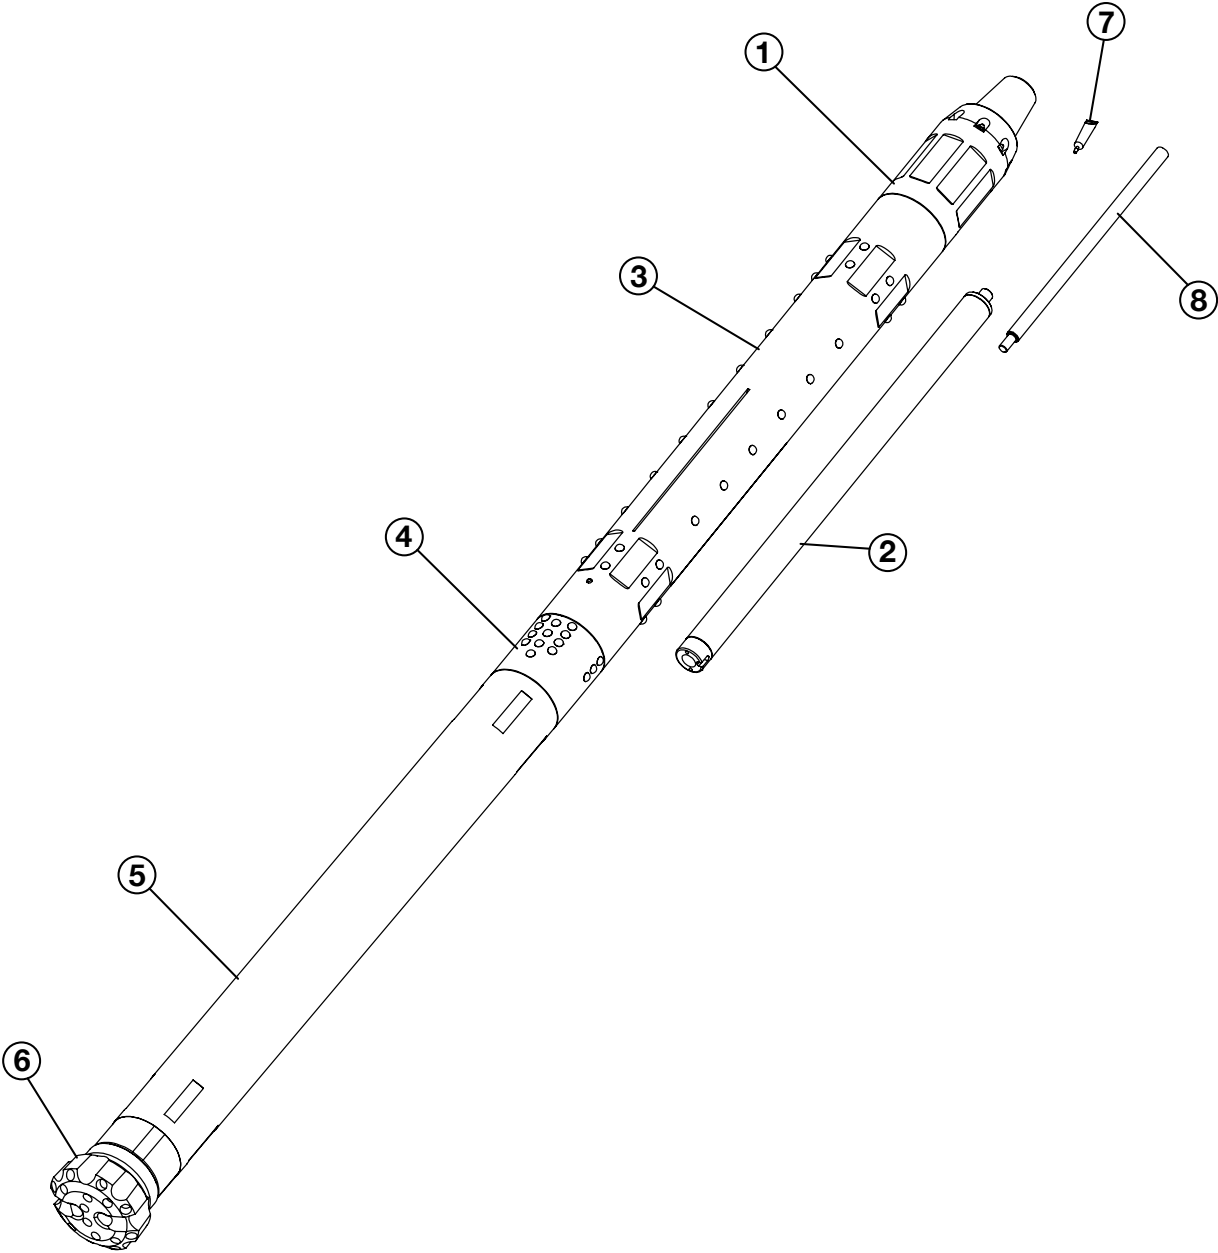

**AIR HAMMER TOOL, 5 INCH
PARTS LIST (80781)**

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	66272	Adapter Assembly, 5.7 Air Hammer	1
2	80787	Transmitter Inner Outer Tube Assembly	1
3	80785	Transmitter Housing Assembly, 5.7 Air Hammer	1
4	67226	Bent Sub Assembly, 5.7 Air Hammer	1
5	66648	Tooling, SL, Air Hammer, Machined Hammer, 5.0	1
6	22948	Bit, Convex	1
7	22056	Thread Lock Compound .5"	1
8	66223	Tooling, SL, Air Hammer, Sonde Tube Retrieval Tool	1

**HAMMER ASSEMBLY, 5 INCH
EXPLODED PARTS (66648)**

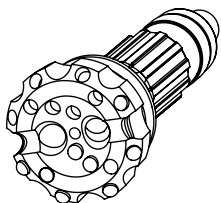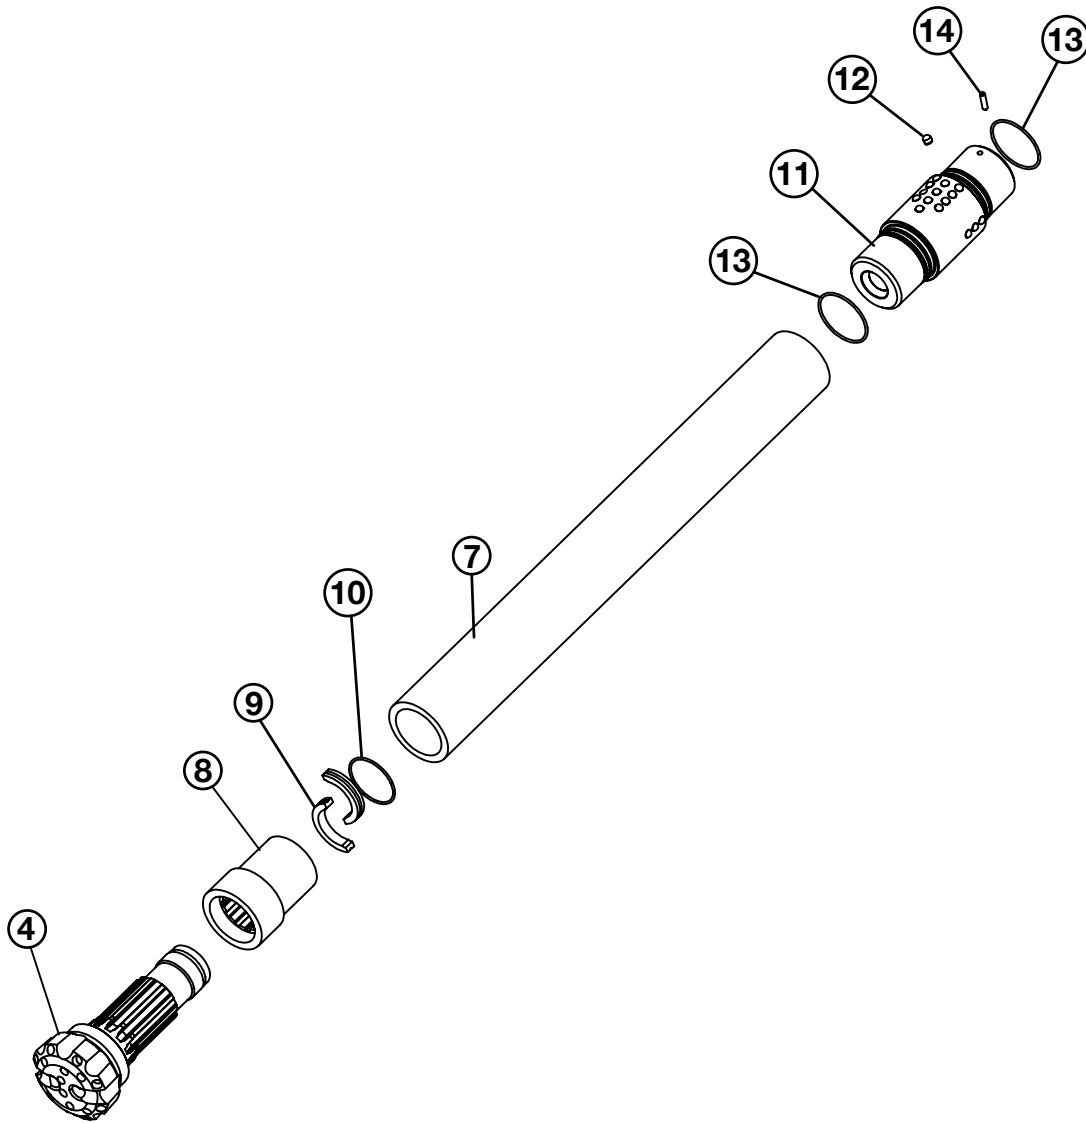


**P/N 23097
OPTION, BIT, CONCAVE, 5 INCH AIR HAMMER**

**HAMMER ASSEMBLY, 5 INCH
PARTS LIST (66648)**

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
4	22948	Bit, Convex	1
7	22947	Hammer Housing	1
8	22947	Chuck	1
9	22947	Split Ring	2
10	22947	O-Ring	1
11	66271	Tooling, SL, Air Hammer, 5 in, 2 Deg Bent Sub	1
12	23076	Carbide, Insert	31
13	23082	O-Ring	2
14	23495	Dowell, 5/16 Dia X 1.25 Long	1


**TRANSMITTER HOUSING, 5 INCH
EXPLODED PARTS (80785)**

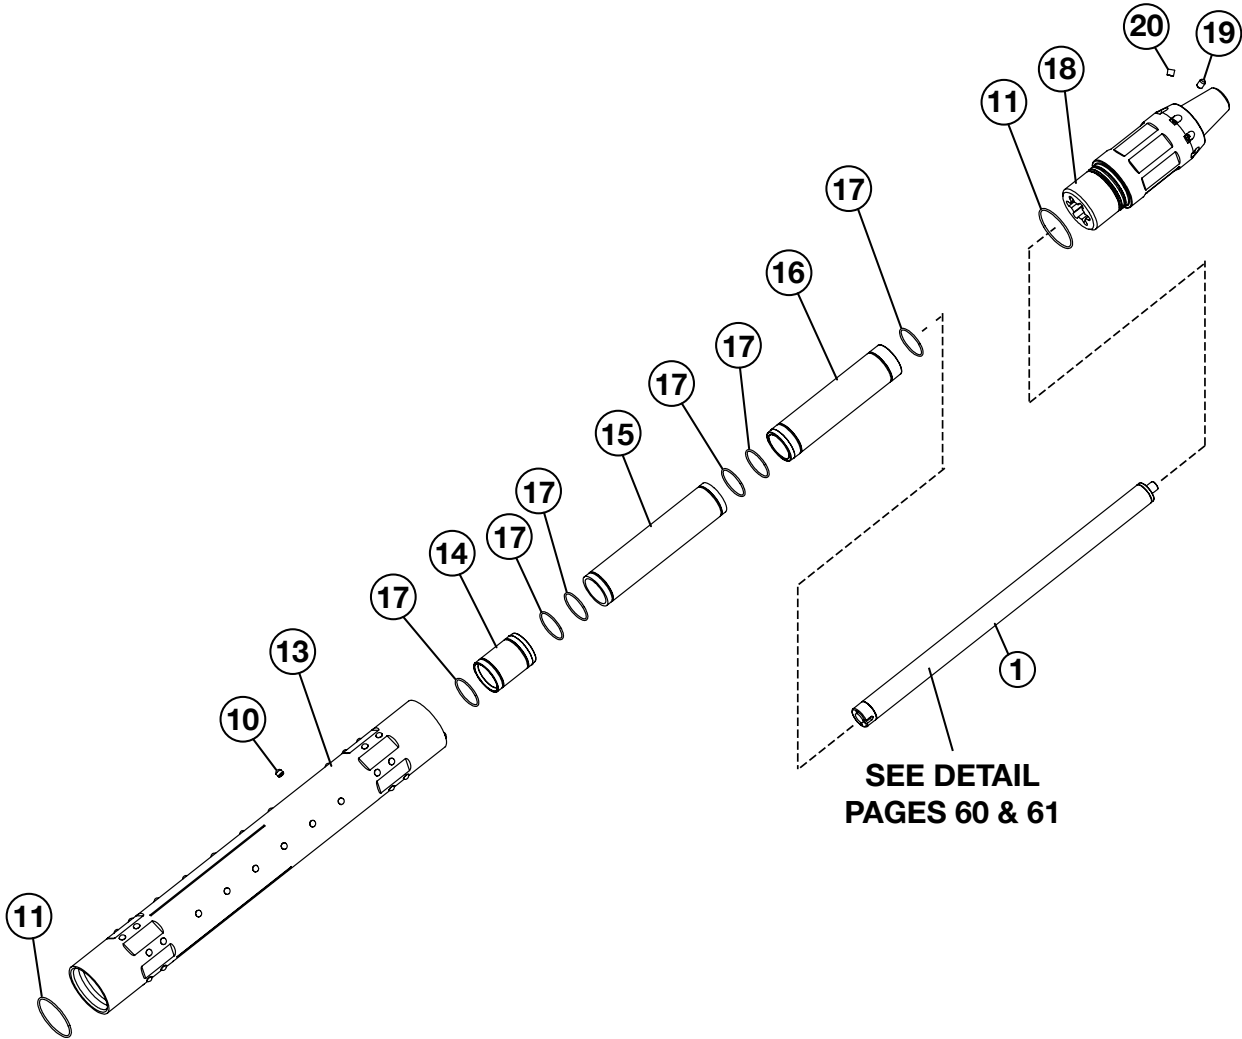

**TRANSMITTER HOUSING, 5 INCH
PARTS LIST (80785)**

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	80787	Transmitter Inner Outer Tube Assembly	1
10	23076	Carbide, Insert	75
11	23082	O-Ring	3
13	66277	Tooling, Air Hammer, 5 In, Sonde Housing	1
14	66278	Tooling, Air Hammer, 5 In, Inner Sleeve - Short	1
15	66279	Tooling, Air Hammer, 5 In, Poly Sleeve	1
16	66280	Tooling, Air Hammer, 5 In, Inner Sleeve - Long	1
17	22938	O-Ring	6
18	66272	Tooling, SL, Air Hammer, 5 In, Sonde Housing Adapter	1
19	22977	Carbide, Insert	7
20	65698	Jet, 1/4 NPT X .125 Hole	1


**SONDE TUBE ASSEMBLY, 5 INCH
EXPLODED PARTS (80787)**

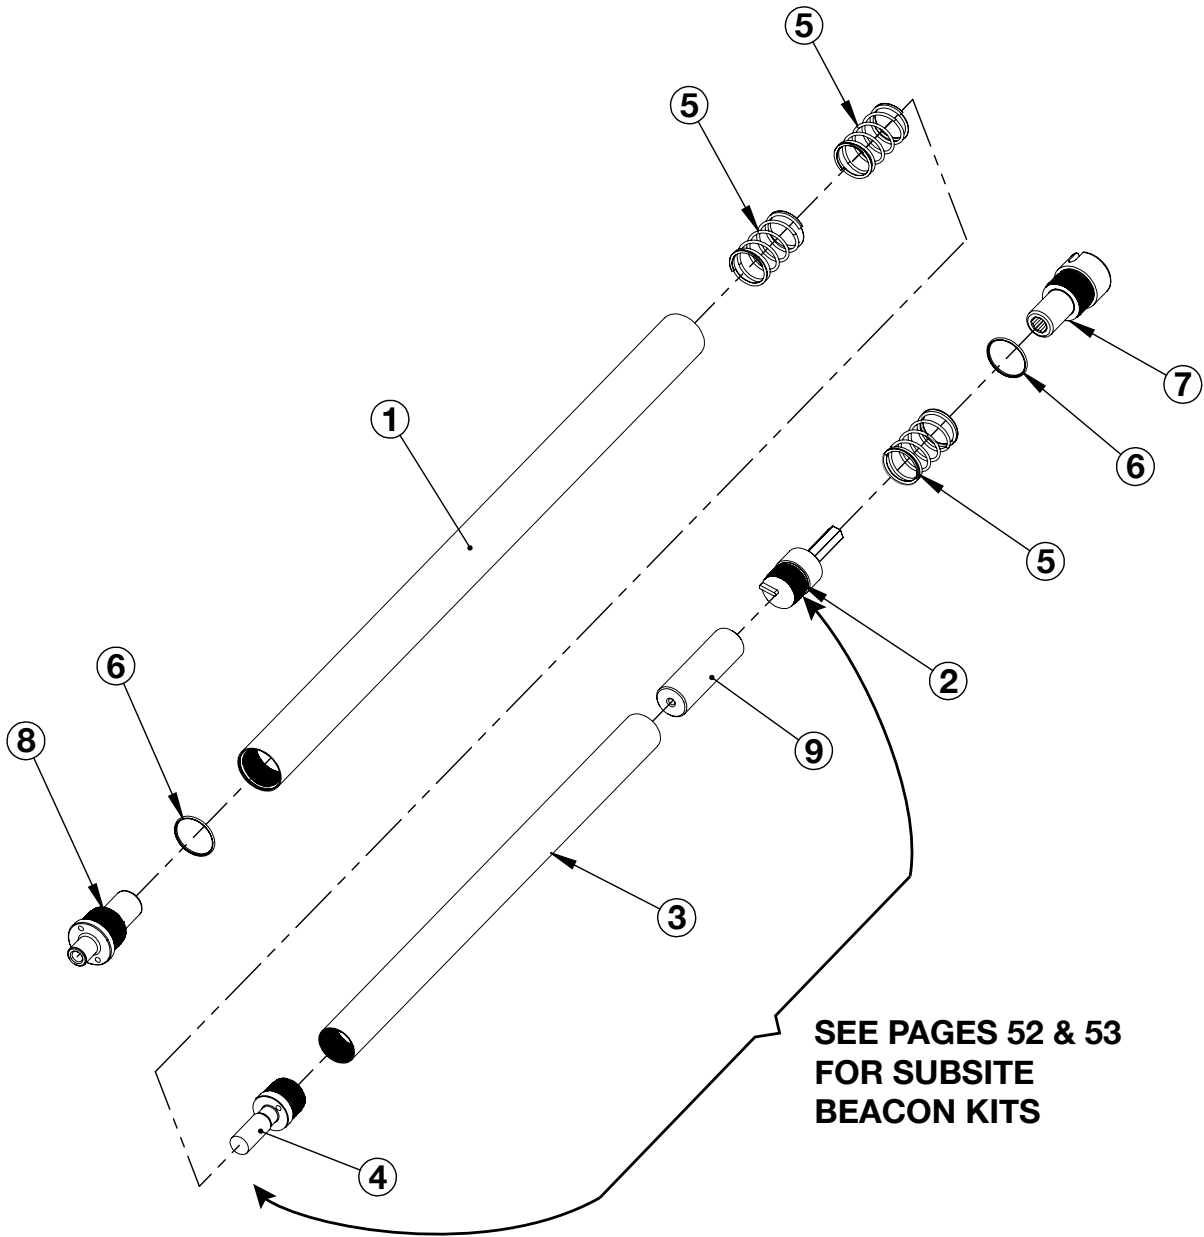

**SONDE TUBE ASSEMBLY, 5 INCH
PARTS LIST (80787)**

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	66282	Tooling, SL, Air Hammer, 4 Cell, Outter Sonde Tube, Tube	1
2	66031	Tooling, SL, Air Hammer, Inner Sonde Tube Clocking Plug	1
3	66281	Tooling, SL, Air Hammer, 4 Cell, Inner Sonde Tube	1
4	66032	Tooling, SL, Air Hammer, Inner Sonde Tube Plug	1
5	22940	Spring	3
6	22939	O-Ring	2
7	66034	Tooling, SL, Air Hammer, Outter Sonde Tube Clocking Cap	1
8	66035	Tooling, Air Hammer, Outter Sonde Tube, Cap	1
9	66426	Tooling, SL, Air Hammer, Trans. Spacer	1


4" & 5" SUPPORT PACK FRAME ASSEMBLY EXPLODED PARTS (80974)

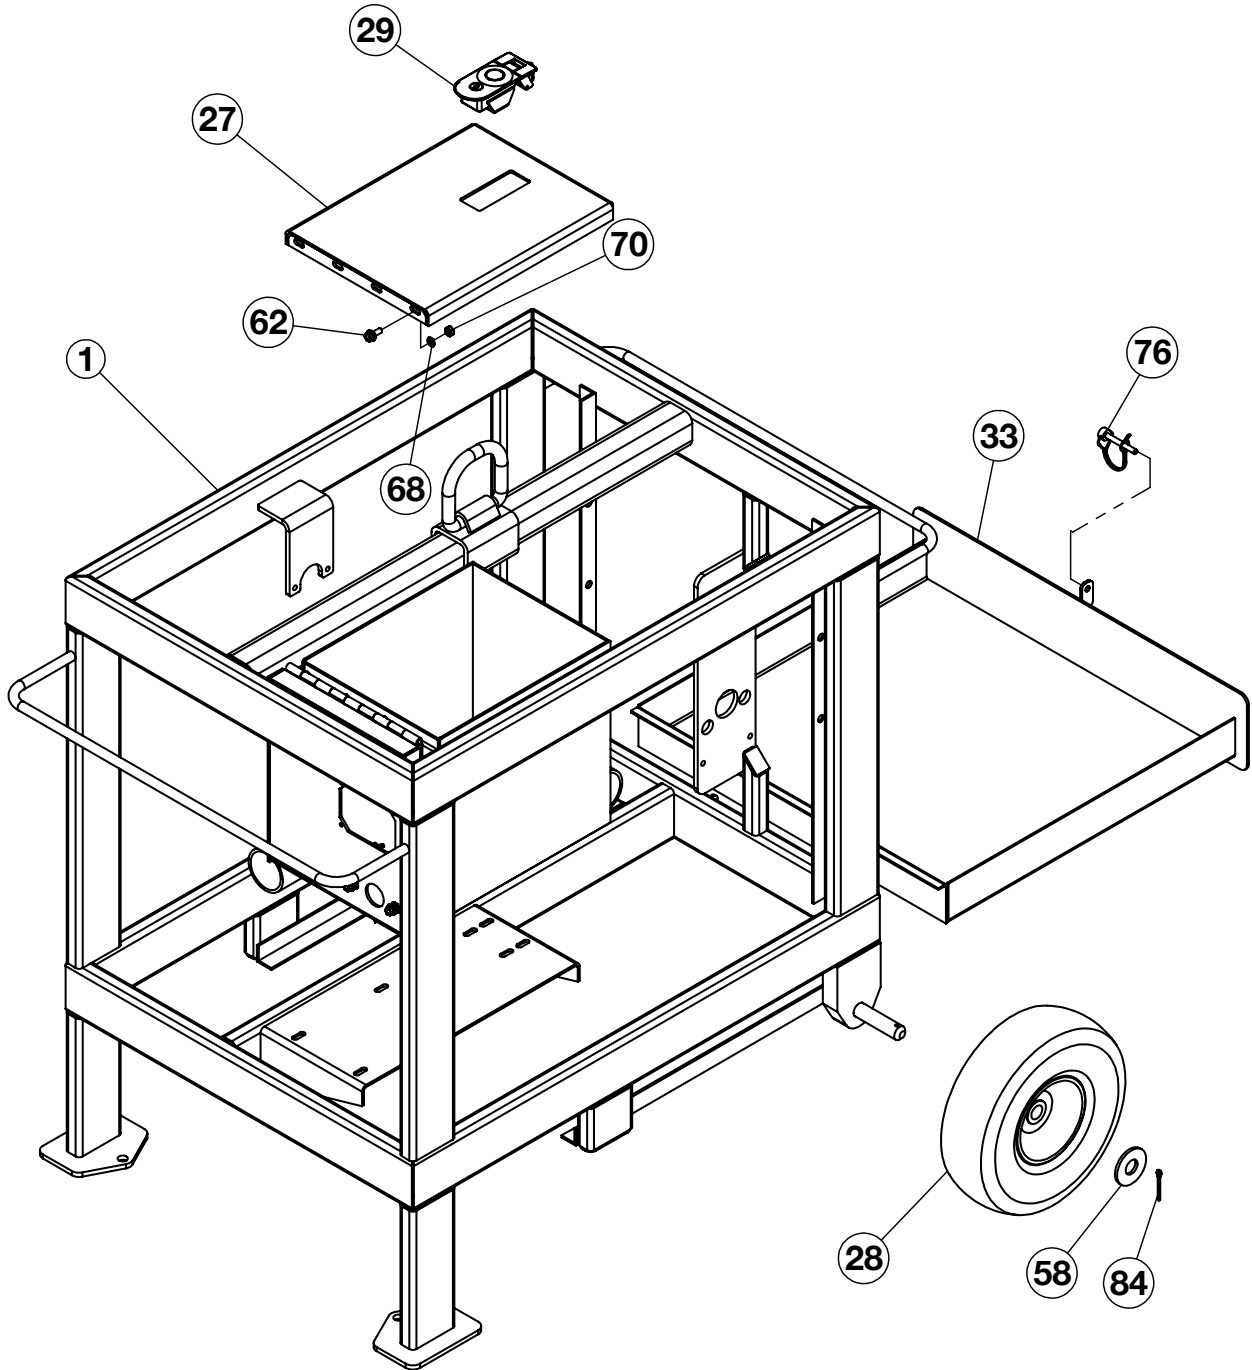

**4" & 5" SUPPORT PACK FRAME ASSEMBLY
PARTS LIST (80974)**

ITEM NO.	PART NUMBER	DESCRIPTION	QTY
1	71507	Tooling, SL, Air Hammer, Support Pack, V2, Frame, Weld	1
27	71510	Tooling, SL, Air Hammer, Support Pack, V2, Frame, Box Lid Weld	1
28	23704	Wheel	2
29	22409	Cowling - Door Latch	1
33	71512	Tooling, SL, Air Hammer, Support Pack, V2, Drawer Weld	1
58	34FW	Washer, Flat, 3/4"	2
62	1420X58WHB	Bolt, Whiz, 1/4-20 X 5/8" Long	4
68	14LW	Washer, Lock, 1/4"	6
70	1420HN	Nut, Hex, 1/4-20	6
76	23699	Snap Pin W/Tab Lock-Zinc Plated- .25" X 2"	1
84	236-2978-02	Pin, Cotter, .125 X 1.25	2

4" & 5" SUPPORT PACK AIR SYSTEM EXPLODED PARTS

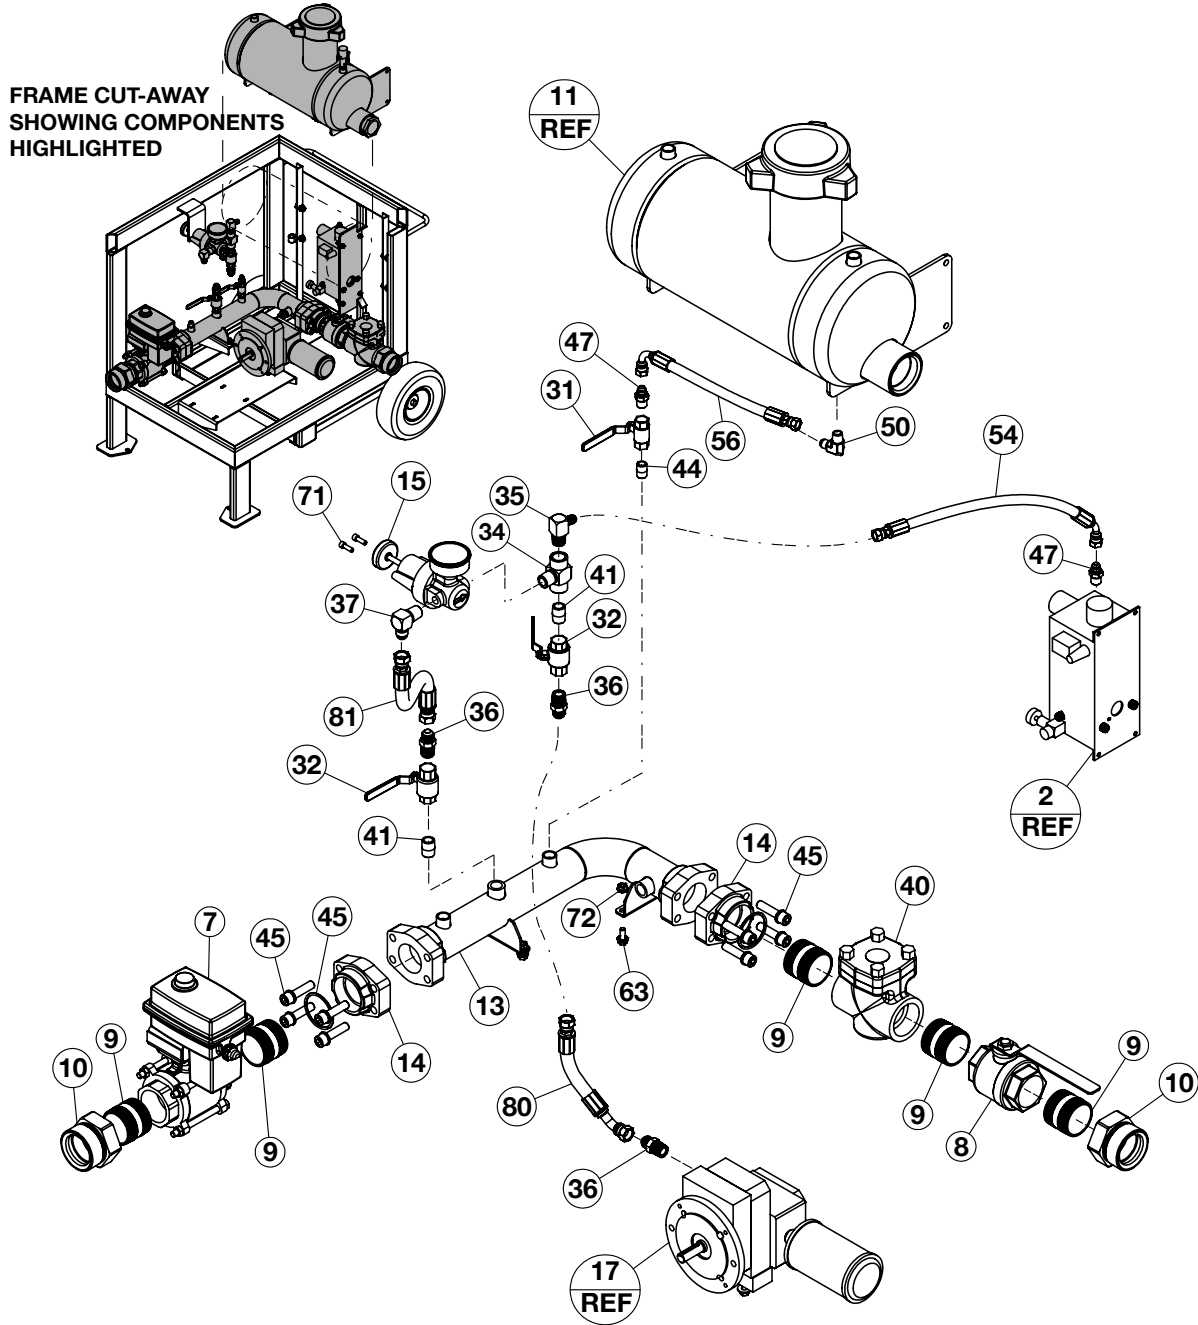


4" & 5" SUPPORT PACK AIR SYSTEM PARTS LIST

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
2	23773	Pump, Intensifier, P Series 5:1 Ratio, W/Flow Control	1
7	22932	Valve, Solenoid	1
8	236-7978-02	Valve, Brass, 2 Inch Ball	1
9	236-3755-02	Close Nipple	5
10	22964	Coupler, Boss, 2" F-NPT X Wing Nut Thread	2
11	71511	Tooling, SL, Air Hammer, Support Pack, V2, Tank Weld	1
13	71366-REVB	Tooling, SL, Air Hammer, Support Pack, Air Tube	1
14	22997	Flange, 4-Bolt, Square, FF, 2" NPTF W/Bolt Threads	2
15	22933	Regulator, Pressure	1
17	22944_B	Air Motor - Service Pak	1
31	22927	Valve, Shutoff, 3/8NPT	3
32	22931	Valve, Shutoff, 1/2NPT	2
34	8FP8MP8FPT	Hydraulic Fitting, TEE	1
35	8MP6MJ90	8MP6MJ90	1
36	8MP8MJ	8MP8MJ	4
37	8MP8MJ90	Fitting, Hydraulic, 8MP X 8MJ 90	2
40	23739	Valve, Check, 2"	1
41	22967	Nipple, Close, 1/2 NPT	4
44	22968	Nipple, Close, 3/8 NPT	3
45	23002	Flange, Hardware, Kit	2
47	6MP6MJ	Fitting, Hydraulic, 6MP X 6MJ	4
50	6MP6MJ90	Hydraulic, Fitting, 6 MNPT X 6MJ - 90	2
54	81008	Tooling, Air Hammer, V2, Hose Assembly, 3, Regulator to Oil Pump Air In	1
56	81007	Tooling, Air Hammer, V2, Hose Assembly, 2, From Oil Tank to Air Tube Port 3	1
63	51618X34WHB	Bolt, Whiz, 5/16-18 X 3/4" Long	4
71	1420X34SHCS	Socket Head Cap Screw, 1/4-20 X 0.75 Long	2
72	51618WHN	Nut, Whiz, 5/16-18	8
80	81011	Tooling, Air Hammer, V2, Hose Assembly, 6, Regulator to Air Motor	1
81	81012	Tooling, Air Hammer, V2, Hose Assembly, 7, Air Tube Port 2 to Regulator	1
82	1420X12WHB	Bolt, Whiz, 1/4-20 X 1/2" Long	2
83	1420X114HB	Bolt, Hex, 1/4-20 X 1 1/4" Long	2

4" & 5" SUPPORT PACK WATER SYSTEM PARTS LIST

ITEM NO.	PART NUMBER	DESCRIPTION	QTY
3	22957	Water Filter - Service Pak	1
4	236-9092-02	Coupler, Female 3/4 NPI, Valveless	1
5	236-9090-02	Coupler, Male, 3/4 Male NPT, Valveless	1
6	8MP12MP	8MP12MP	1
16	22926	Pump, Model 333	1
17	22944_B	Air Motor - Service Pak	1
18	22951	Valve, Pop Off, Safty	1
19	67447	Tooling, SL, Airhammer, Air Pump Spacer	1
21	22936	Coupler, Half	1
22	66423	Tooling, SL, Air Hammer	1
23	67529	Tooling, SL, Air Hammer, Support Pack, V2, Bracket, Pump Mount	2
36	8MP8MJ	8MP8MJ	4
37	8MP8MJ90	Fitting, Hydraulic, 8MP X 8MJ 90	2
39	22956	Coupling, Spider Insert	1
41	22967	Nipple, Close, 1/2 NPT	4
42	23741	Valve, Check, 1/2	1
46	8MPPLUG	Fitting, Hydraulic, Male Pipe, Plug, 1/2"	1
59	516FW	Washer, Flat, 5/16"	8
66	51618X1WHB	Bolt, Whiz, 5/16-18 X 1" Long	4
68	516LW	Washer, Lock, 5/16"	9
70	51618HN	Nut, Hex, 5/16-18	4
72	51618WHN	Nut, Whiz, 5/16-18	8
76	51618X2HB	Bolt, Hex, 5/16-18 X 2" Long	4
77	51618X1HB	Bolt, Hex, 5/16-18 X 1" Long	4
78	81013	Tooling, Air Hammer, V2, Hose Assembly, 8, Water Pump Out to Air Tube Port 4	1
79	81010	Tooling, Air Hammer, V2, Hose Assembly, 5, Oil Tank Pressure Relief	1
80	81011	Tooling, Air Hammer, V2, Hose Assembly, 6, Regulator to Air Motor	1
81	81012	Tooling, Air Hammer, V2, Hose Assembly, 7, Air Tube Port 2 to Regulator	1
82	1420X12WHB	Bolt, Whiz, 1/4-20 X 1/2" Long	2
83	1420X114HB	Bolt, Hex, 1/4-20 X 1 1/4" Long	2




4" & 5" SUPPORT PACK OIL SYSTEM EXPLODED PARTS

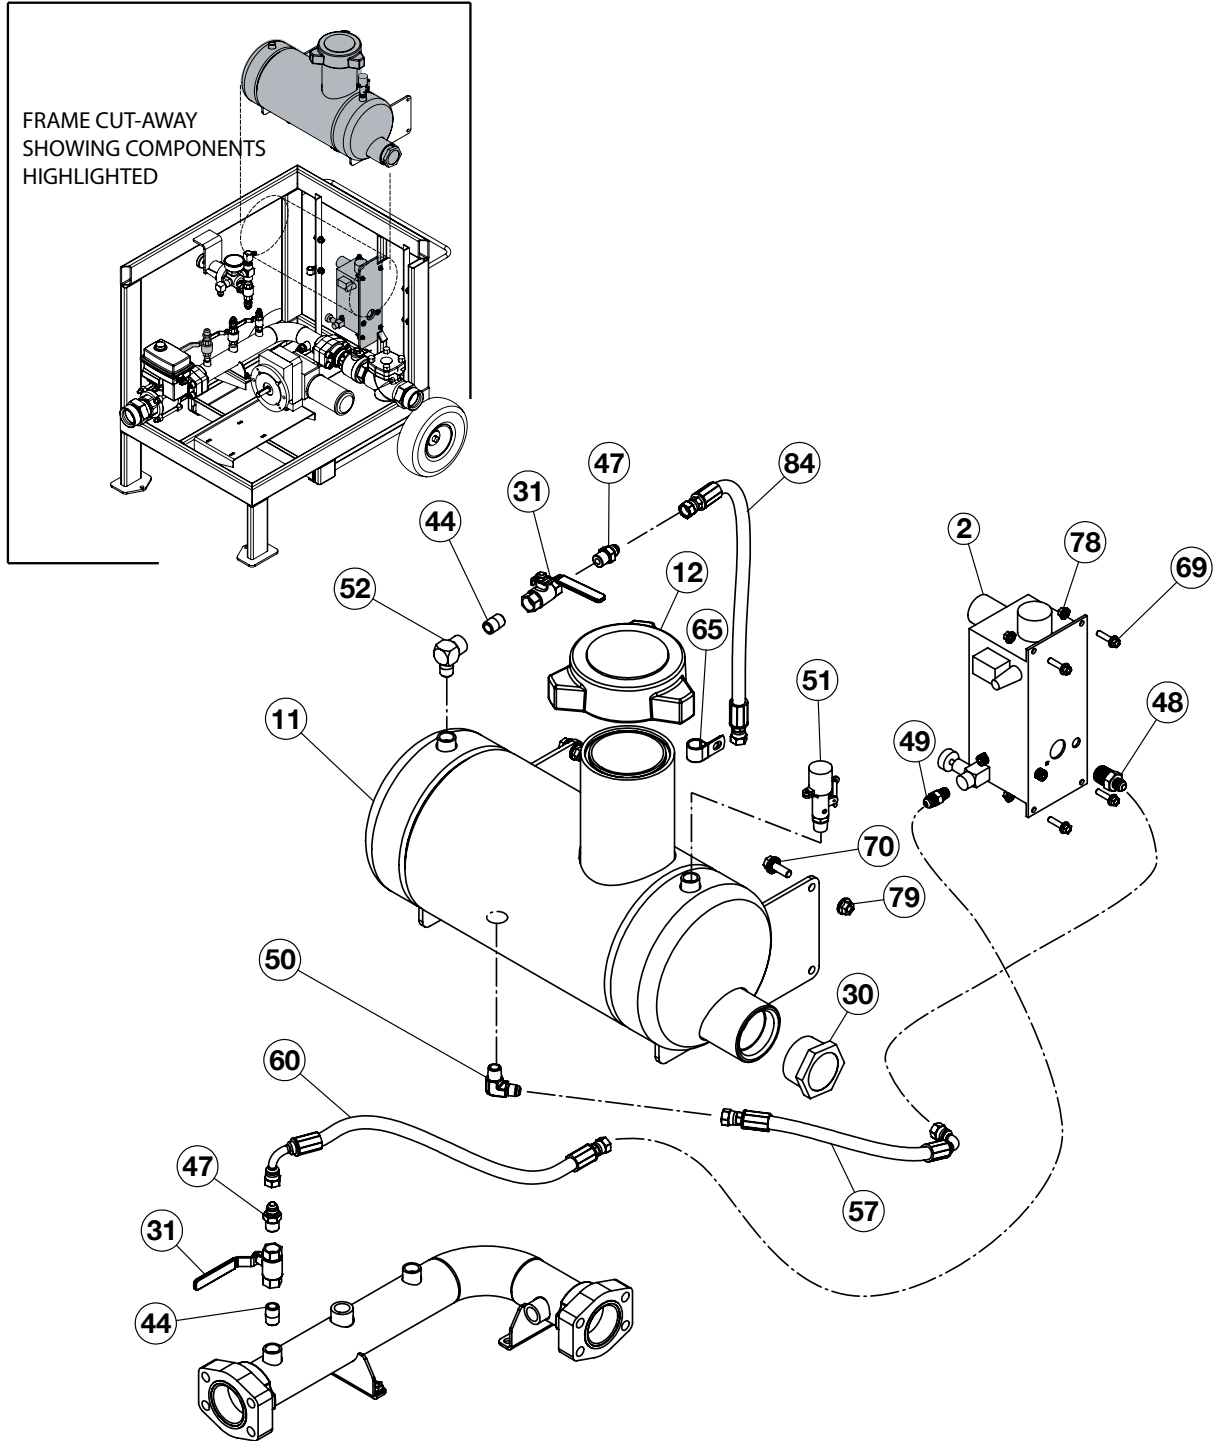

4" & 5" SUPPORT PACK OIL SYSTEM PARTS LIST

ITEM NO.	PART NUMBER	DESCRIPTION	QTY
2	23773	Pump, Intensifier, P Series 5:1 Ratio, W/Flow Control	1
11	71511	Tooling, SL, Air Hammer, Support Pack, V2, Tank Weld	1
12	22928	Cap Assy	1
30	22958	Sightglass	1
31	22927	Valve, Shutoff	3
44	22968	Nipple, Close	3
47	6MP6MJ	Fitting, Hydraulic, 6MP X 6MJ	4
48	8MP6MJ	8MP6MJ	1
49	4MP6MJ	4MP4MJ	1
50	6MP6MJ90	Hydraulic, Fitting, 6 MNPT X 6MJ - 90	2
51	22929	Valve, Pressure Relief	1
52	6MP6FP90	Hydraulic Fitting, 6MP X 6FP - 90	1
57	81006	Tooling, Air Hammer, V2, Hose Assembly, 1, From Oil Tank to Oil Pump-Oil In	1
60	81009	Tooling, Air Hammer, V2, Hose Assembly, 4, Oil Pump - Oil Out to Air Tube Port 1	1
65	705-116-02	P-Clamp	1
69	1420X1WHB	Bolt, Whiz, 1/4-20 X 1" Long	4
70	3816X1WHB	Bolt, Whiz, 3/8-16 X 1" Long	4
78	1420WHN	Nut, Whiz, 1/4-20	4
79	3816WHN	Nut, Whiz, 3/8-16	4
84	81010	Tooling, Air Hammer, V2, Hose Assembly, 5, Oil Tank Pressure Relief	1



4" & 5" SUPPORT PACK CONTROLS EXPLODED PARTS

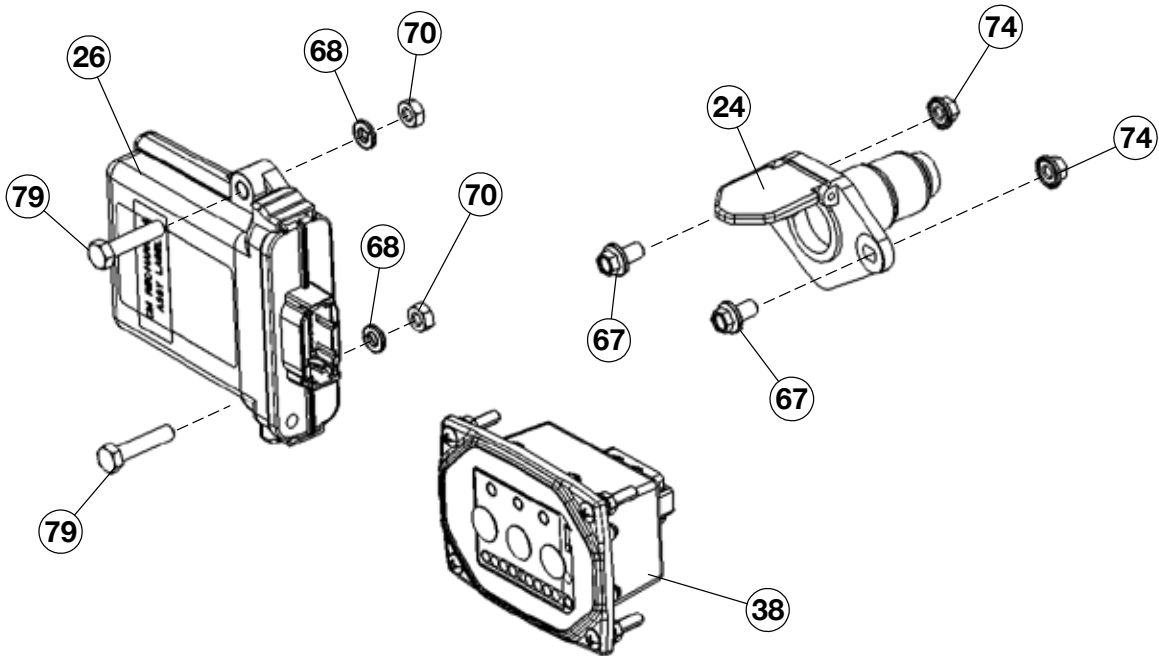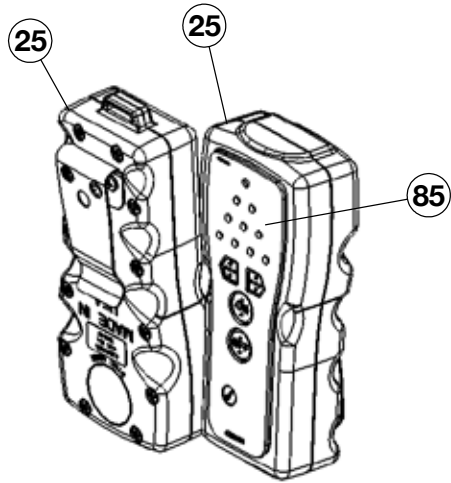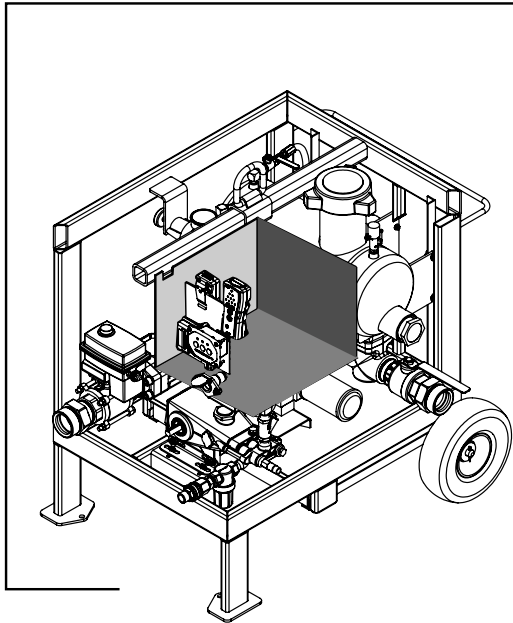

4" & 5" SUPPORT PACK CONTROLS PARTS LIST

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
24	22972	Connector, Trailer Wire, 6 Way, Female	1
25	23702	Transmitter, Single Valve	2
26	23703	Reciever, Single Valve	1
38	23775	Electrical Control Unit	1
67	1420X12WHB	Bolt, Whiz, 1/4-20 X 1/2" Long	2
68	14LW	Washer, Lock, 1/4"	6
70	1420HN	Nut, Hex, 1/4-20	6
74	1420WHN	Nut, Whiz, 1/4-20	6
79	1420X114HB	Bolt, Hex, 1/4-20 X 1 1/4" Long	2
85	23746_MODL	Decal Layout Remote Control Panel	1



SUPPORT PACK HOSE/SAFETY CABLES EXPLODED PARTS

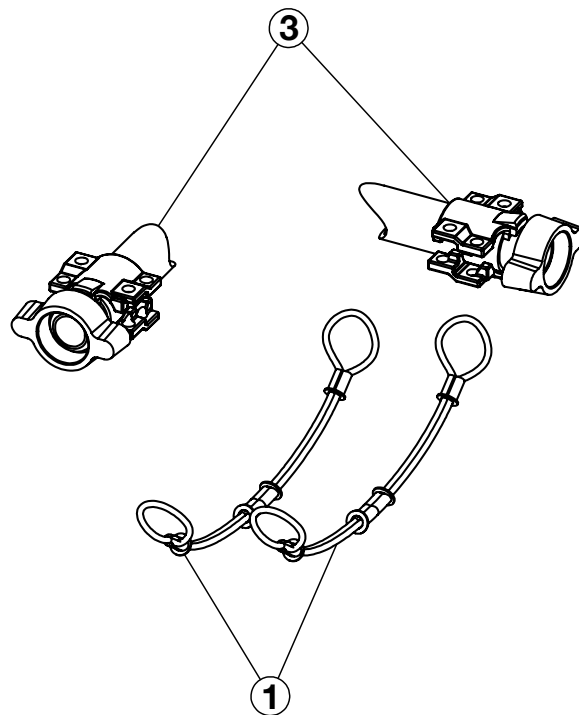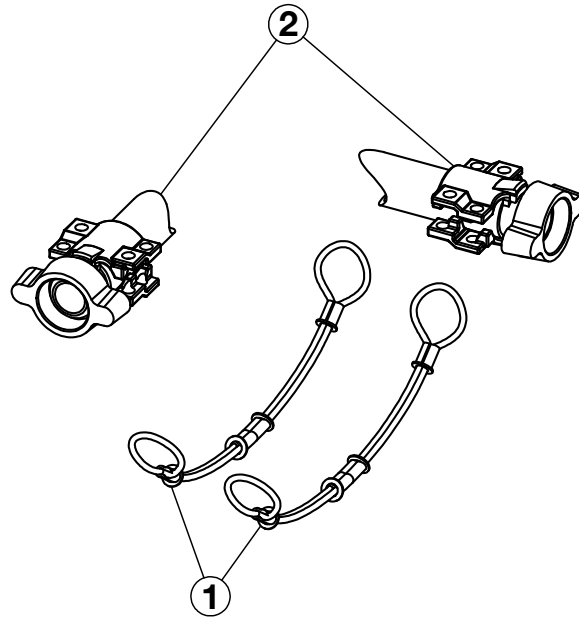


**SUPPORT PACK HOSE/SAFETY CABLES
PARTS LIST**

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	22985	Saftey Cable	4
2	80773	Air Hammer, Support Pack, Hose Assy - 30'	1
3	80774	Air Hammer, Support Pack, Hose Assy - 20'	1

**4" & 5" SUPPORT PACK DECALS
EXPLODED PARTS (80974)**

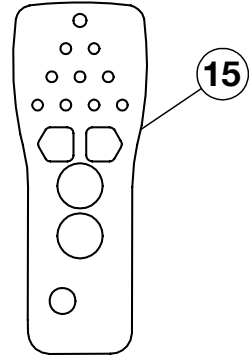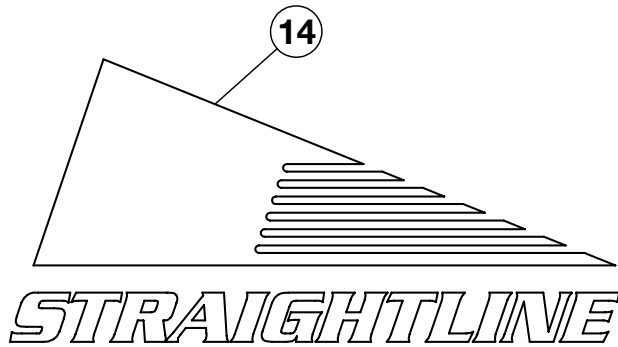

AIR HAMMER



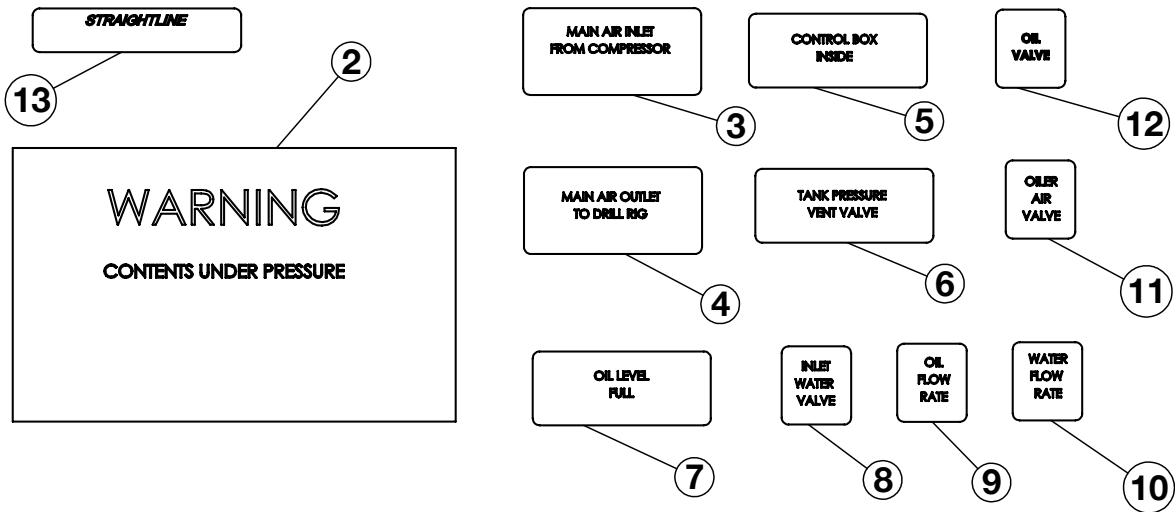


**4" & 5" SUPPORT PACK DECALS
PARTS LIST (80974)**


ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	23011	Decal: Air Hammer Logo	1
2	23009	Decal: Warning, Contents Under pressure	1
3	23004	Decal: Main Air Inlet Label	1
4	23005	Decal: Main Air Outlet Label	1
5	23014	Decal: Control Box Inside Label	1
6	23008	Decal: Tank Pressure Vent Valve Label	1
7	23013	Decal: Oil Level Full Indicator	1
8	23003	Decal: Inlet Water Valve Label	1
9	23007	Decal: Oil Flow Rate Label	1
10	23012	Decal: Water Flow Rate Label	1
11	23015	Decal-Operation, Air Hammer, Oiler Air Valve	1
12	23016	Decal-Operation, Air Hammer, Oil Valve	1
13	23246	Decal: Main Air Inlet Label	1
14	236-9443-02	Straightline Logo - 4" X 8.5"	1
15	23746	Remot Control Decal	1

4" & 5" SUPPORT PACK II WIRING DIAGRAM (WIRING HARNESS TO RIG)


The wiring that connects the Support Pack II to the drill rig is made up of two harnesses. One is a 50 foot harness that connects to the Support Pack II using a trailer plug. The other is a short 5 ft. harness that connects to the long harness with a weather pack male plug, and at the rig using a 12 volt dc auxiliary power plug. An optional 5 ft. harness is available if a direct connection to the rigs 12 volt battery is desired.

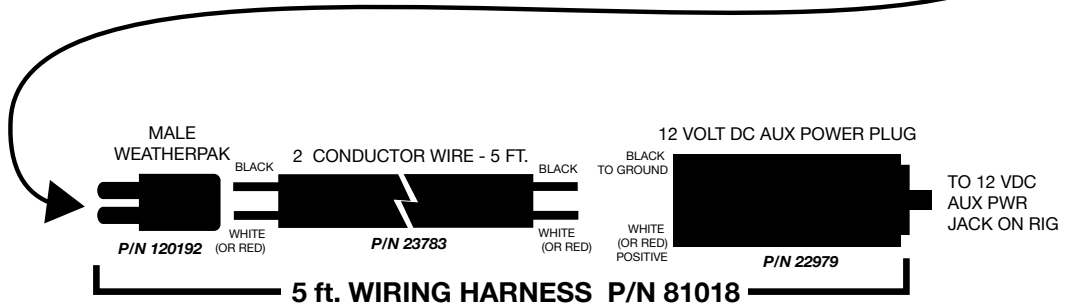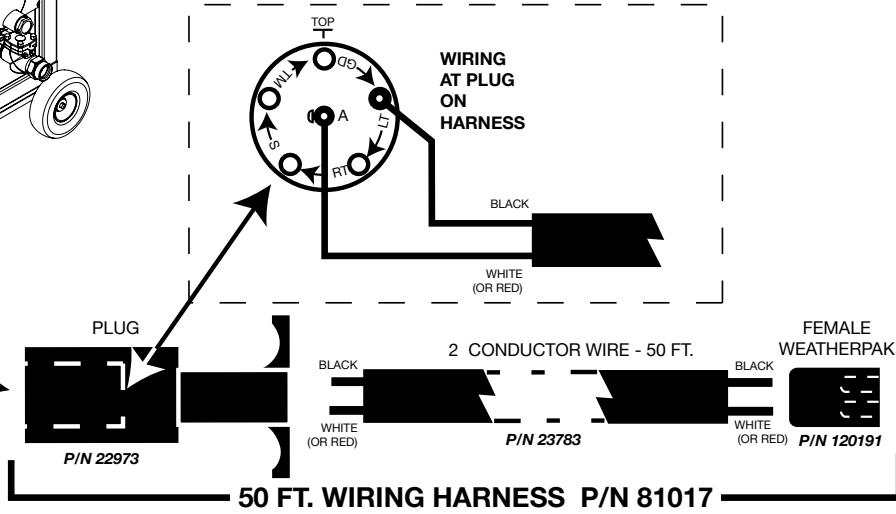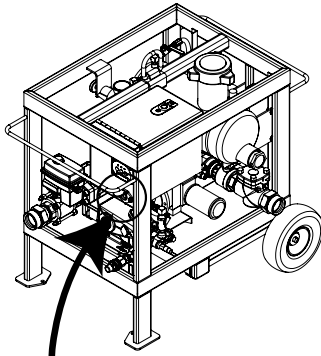


OPTIONAL 5 ft.
HARNESS TO RIG

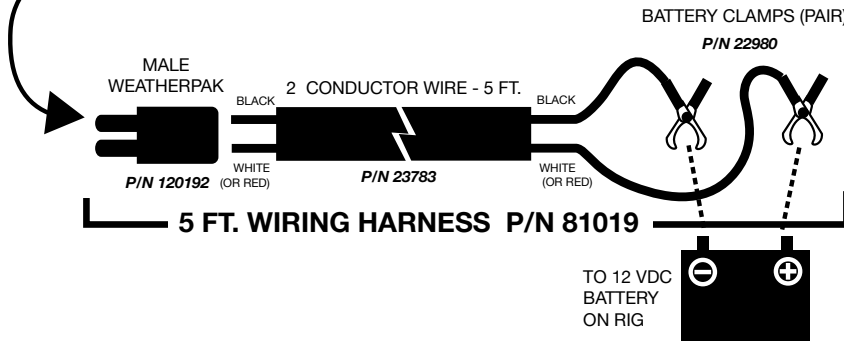


4" & 5" SUPPORT PACK II WIRING DIAGRAM (WIRING WITHIN SUPPORT PACK II)

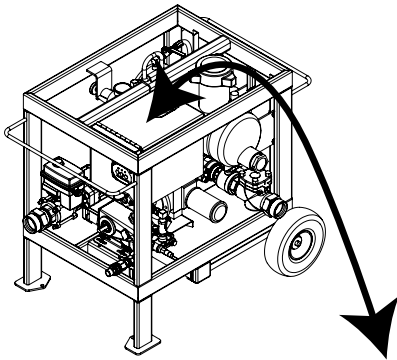

FOR WIRING DETAIL SEE:
COMPLETE ELECTRICAL SCHEMATIC

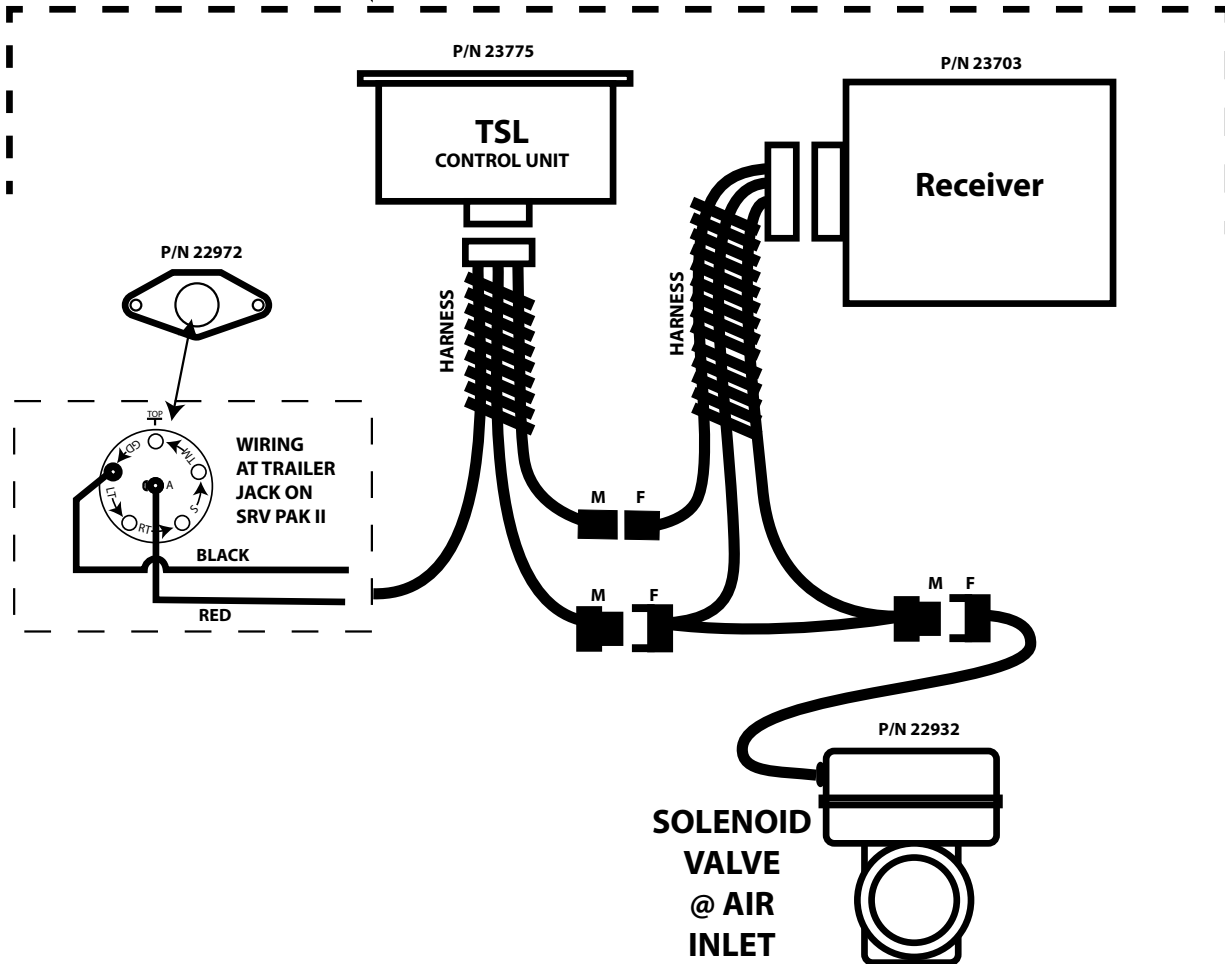

4" & 5" SUPPORT PACK II PIPING DIAGRAM

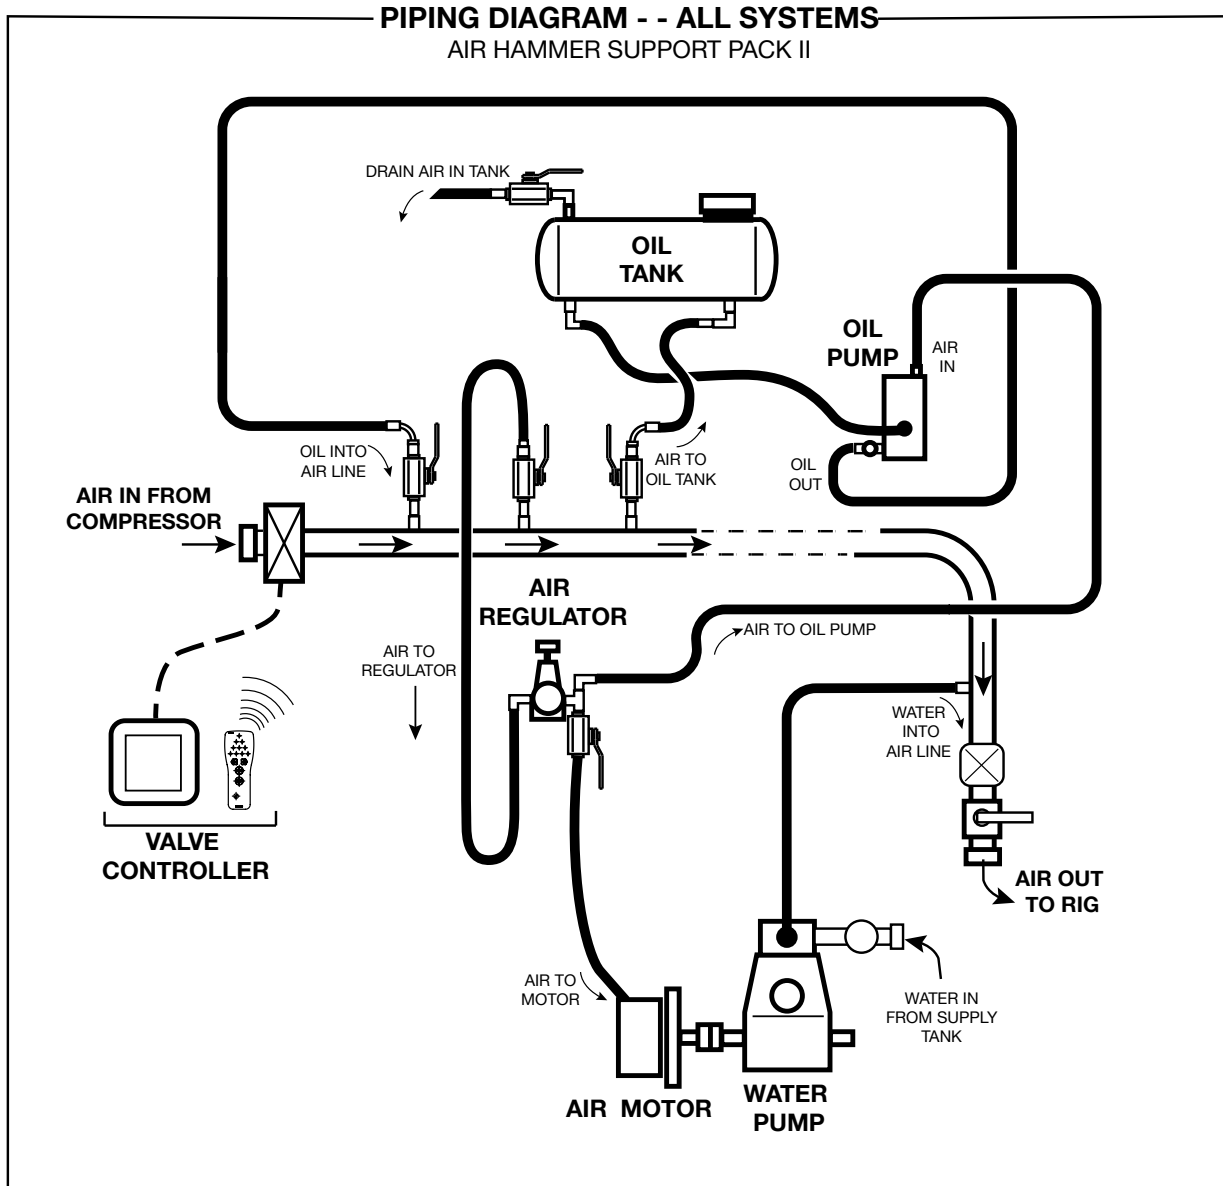



4" & 5" TOOLING KIT

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	80789	Breakout Wrench Set	1
2	23033	Spanner Wrench	1
3	66223	Retrieval Tool	1
4	22056	Thread Locking Compound Kit	1
5	22991	O-Ring Kit	1
6	23332	4" Choke Inserts Kit	1
7	23349	5" Choke Inserts Kit	1

STRAIGHTLINE

PROFESSIONAL DRILLING SOLUTIONS

 AIR HAMMER II OPERATION & PARTS MANUAL

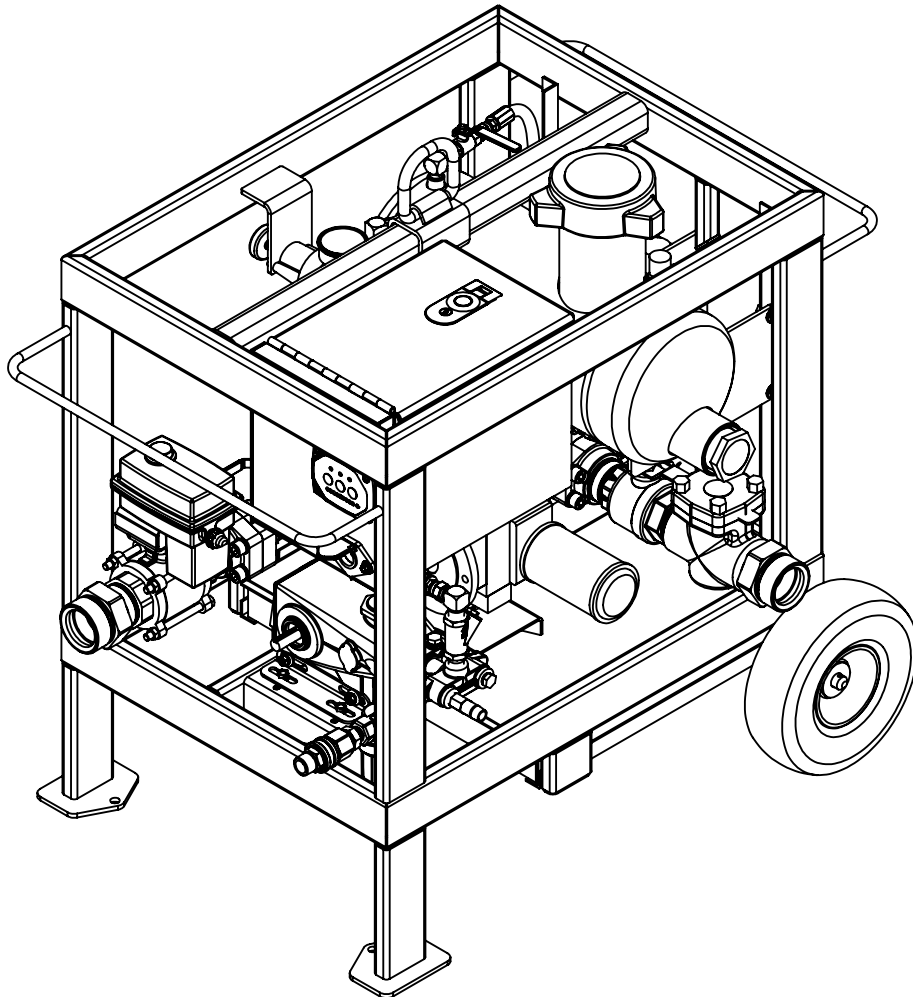

VERS, II 1-6-2012